

Operation Manual



www.universal-space.com

CONTENT

Important Safety Instructions	2
1. SPECIFICATIONS	4
2. PACKAGE CONTENTS	5
3. PART NAMES	6
4. SET UP & INSTALLATION	7
5. HOW TO PLAY	10
6. GAME OPTION	11
7. ERROR MESSAGE AND RECOVERY	16
8. MAINTENANCE, INSPECTION	17
9. OVERALL CONSTRUCTION	18

Non-technical personnel who do not have technical knowledge and Expertise should refrain from performing such work that this manual require or perform tasks which are not explained in this manual. Failing to comply can cause severe accidents such as electric shock or other serious injuries. All repairs must be performed to original manufacturer specifications.

WARNING: To reduce the risk of fire, electric shock or personal injury, unplug or disconnect the machine from the power supply before servicing.

1

Thank you for purchasing **Pirate's Hook** from Universal Space. We hope you enjoy the product.

This manual contains valuable information about how to operate and maintain your game machine properly and safely. It is intended for the owner and/or personnel in charge of product operation. Carefully read and understand the instructions.

If you need any help during installation and setup please utilize this manual and troubleshooting guide. If the product fails to function properly, *non-technical personnel* should under no circumstance attempt to service the machine. Contact your distributor or manufacturer for help.

Before use, please read IMPORTANT SAFETY INSTRUCTIONS.

IMPORTANT SAFETY INSTRUCTIONS

To ensure the safe usage of this product, carefully read and understand these instructions before operating your game.

Save these instructions for future reference.

Use this product only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury. Unplug the game from the outlet when not in use, when moving from one location to another, and before cleaning/servicing.

Explanations which require special attention are indicated by signs of warning. Depending on the potential hazardous degree, the terms: **NOTE**, **NOTICE**, and **WARNING** are used.

NOTE: A NOTE indicates useful hints or information about product usage.

NOTICE: A NOTICE indicates potential damage to product and how to avoid the problem.

WARNING: A WARNING indicates a potential for product damage or serious personal Injury. It is important to understand the meaning of the following <u>HAZARD SIGNS</u> before continuing:

High Voltage and Shock Hazard:

High voltage can cause electric shock.

Turn off/unplug power before servicing.

High Temperature Hazard:

This part may cause scalding.

Do not touch. Surface may be hot.

No Touching Hazard:

This part may be hot or can cause electric shock. Do not touch.







Use the following safety guidelines to help ensure your own personal safety and to help protect your equipment and surrounding environment from potential damage.

This product is an indoor game machine. Do not install outdoors.

Avoid installing in the following places to prevent fire, electric shock, injury and/or machine malfunctioning:

- Places subject to rain/moisture, or places subject to high humidity.
- Places subject to direct sunlight, or places subject to extremely hot or cold temperatures to ensure that it is used within the specified operating range.
- Places where inflammable gas may be present or in the vicinity of highly inflammable/volatile chemicals or items that can easily catch fire
- On unstable or sloped surfaces. The machine may topple or cause unforeseen accidents.
- Vicinity of fire exits, fire extinguishers etc that may block/prevent safety measures

IMPORTANT NOTE:

ALL REPAIRS MUST BE DONE TO ORIGINAL MANUFACTURER SPECIFICATIONS. FAILURE TO DO SO VOID ALL WARRANTIES AND OPERATOR ASSUMES ALL RISKS.

Note: The contents of this manual may be updated without notice.

1. SPECIFICATIONS

Rated power supply: AC220-240V 50/60Hz


Min. Power consumption: 210W


Max. Power consumption: 380W

Dimensions: W1030×D850×H2318.5(mm)

Weight: Approximately 180kg

NOTICE: After turning off the game, please wait at least 1 minute before restarting again.

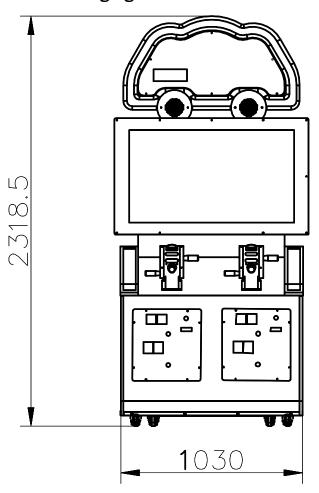

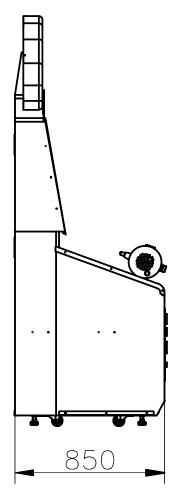

Note: Game parameters are subject to change without notice.

NOTICE: After turning off the game, please wait at least 1 minute before restarting again.

2. PACKAGE CONTENTS

Open the package and make sure all the items are included:


- 1 x Body Assembly
- Following accessories

NO.	Part number	Code Name		Qty	Illustration
1	X109-433-000	2.33.01.000001	Power cord	1	
2	X10732-000	4.14.60836001	Manual	1	
3	X109-406-000	2.53.00171001171	Door key	2	6
4	X109-407-000	2.53.000001082222	Coin box key	2	
5	X109-452-000	4.13.0000001	USB	1	
6	X109-423-000	2.19.01.000013	Fuse	1	

If any items are found to be missing, please contact your sales representative for help immediately.

NOTE: Part models are subject to change without notice.

3. PART NAME

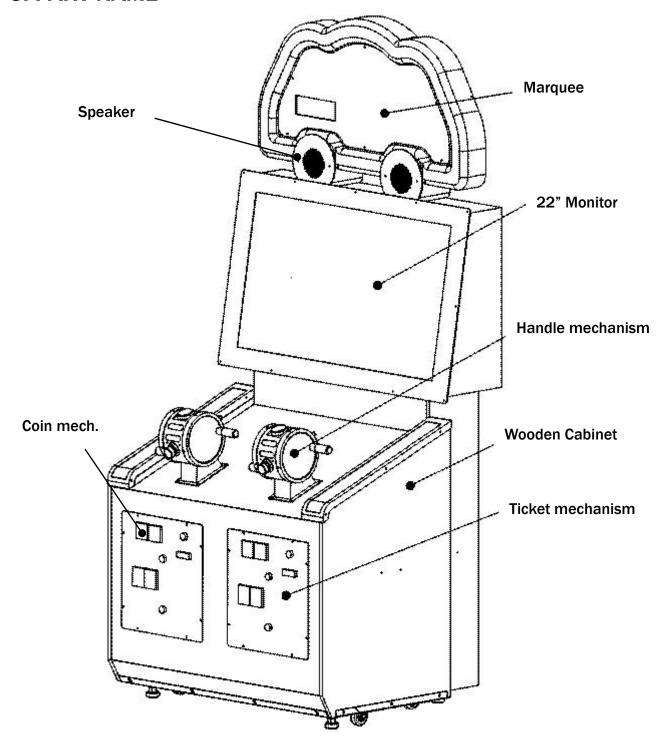

4. SET UP & INSTALLATION

This product is an indoor game machine. Do not install outdoors.


- Refer to IMPORTANT SAFETY INSTRUCTIONS (Pg. 2) for places to avoid
- Place the unit on a dry level surface
- Ventilation openings in the back of the unit must not be obstructed by objects or by wall.

4.1 Play Zone

This machine requires space for playing and for maintenance as shown below.

Leave space around the game upon installation:


Length: 1.6M Width: 1.5M

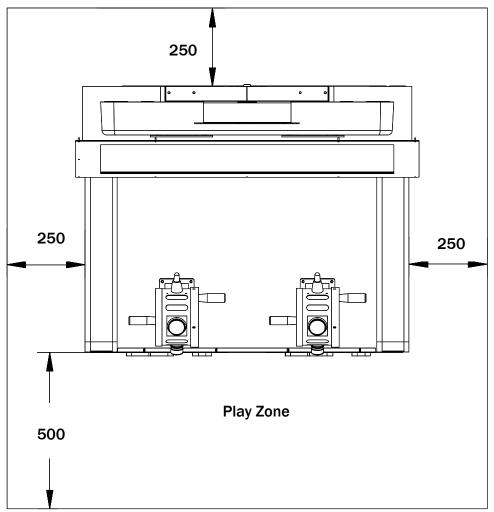

4.2 Level Adjustment

Install this machine on a flat surface. Adjust levers to lift casters off the ground to level the game. If the game is installed on an unsuitable floor, it could cause game malfunction.


To secure the game, adjust the Leveler down until it touches the floor, lifting the casters off the ground by 5mm. Repeat the same for all levelers.

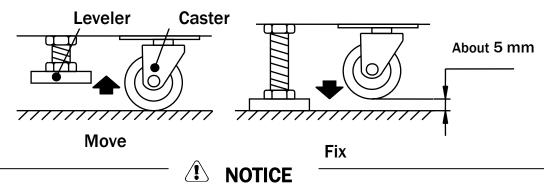

Make sure the machine is level with the ground and all the adjustable legs should stick to the floor closely.

4.3 Transporting the Game

If you need to move the game, adjust the levelers back to an "up" position so the casters touch the ground.

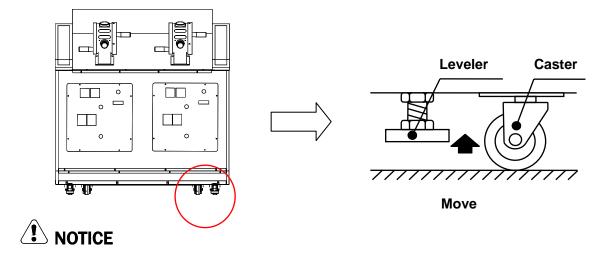


- Be careful not to damage the machine during transport.
- The machine should be handled with care when bringing it down from a higher level.
- Always unplug the game before moving.
- Keep the machine in upright position during transport.
- For longer distance transport, package the game properly to prevent damages

4.4 Connecting Power

WARNING: Check the voltage rating before you connect the equipment to an electrical outlet to ensure that the required voltage and frequency match the available power source. Please refer the label of the machine.

- Do not plug the equipment power cables into an electrical outlet if the power cable is damaged.
- Avoid putting many loads on one electrical outlet as it could generate heat and fire resulting from overload.
- Connect the grounding conductor to the earth terminal (GND):

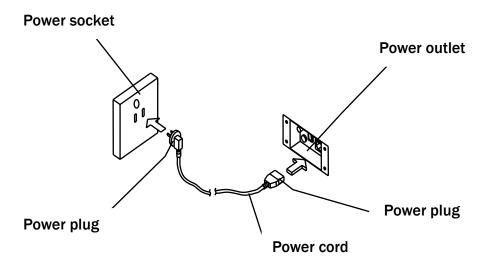


WARNING

Ensure no heavy objects rest on the power cord. Check to make sure the game cabinet does not sit on the power cord as this could damage the cord and become hazardous.



To disconnect the game, grip the plug and pull it from the wall outlet. Never pull by the cord.

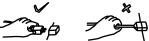

To prevent electric shock, do not touch the power plug when hand is wet.




Ensure that nothing rests on the power cord and that it is not located where it can be stepped on or tripped over.

9

5. HOW TO PLAY

5.1 Game Interface

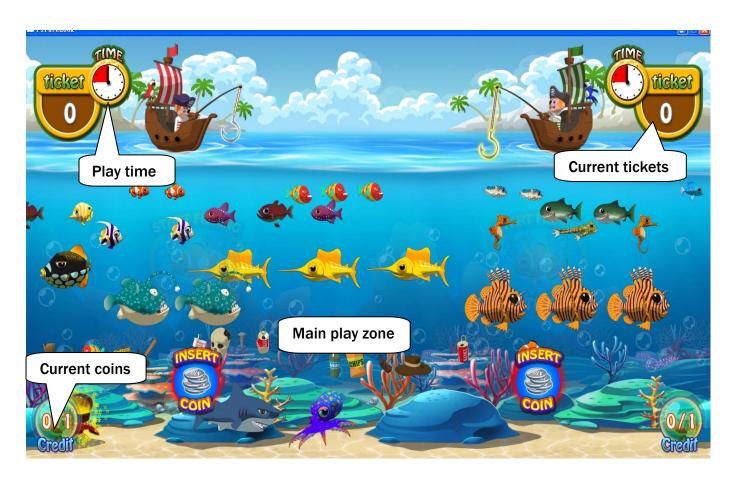

5.2 How To Play

The machine provide for 2 player at the same time.

1. Insert coin(s), fishing rob left and right.

- 2. Press the button to lower the hook.
- 3. Rotate the handles to reel in the fish.
- 4. Catch as many fish as possible within the time limit. Junk Items= No Tickets.
- 5. Catch the Lobster King to win the MEGA BONUS!

6. GAME OPTIONS

6.1 Testing Button Distribution:

You can see testing button after you open the coin door in orange fishing mechanism. Press testing button, enter Menu adjustment options.

Coin counter Ticket counter Up Coin Menus Ticket Reset Service Button

6.2 Main Menu Options:

Main Menu
Game Mode
Input Test
Output Test
Game Reset
Language
Date/Time Setting
Bookkeeping
Daily Record
Exit& Without Save

6.2.1 Game mode

O.Z.I danic mode			
Name	Option	Description	
Free Play	ON/OFF	Turn on/off the free play mode.	
Ticket Out	ON/OFF	Turn on/off payout tickets.	
Coins per Round	1-4	inserted coin to play one game.	
Demo Music	ON/OFF	Turn on/off the demo music.	
Save Coins	ON/OFF	Whether memory inserted coins after	
Save Coms	ON/OFF	power off.	
Volume	0-10	Set the volume of the game.	
Fixed Ticket	0-50	Fix ticket setting. "0" is fixed ticket off.	
Lobster Mega Bonus	1-10	10 is the lowest frequency to show up	
		lobster. 1 is the highest frequency.	
Ticket/Point	Ticket/Point	Target is defined as ticket or points.	
Average Payout	10-40	Ticket payout setting. It is invalid when	
		fixed ticket ON or point mode ON.	
Target Tickets		Please refer to 6.2.1.1	
Target Point Setting		Please refer to 6.2.1.2	
Score Board		Please refer to 6.2.1.3	
Game Difficulty	1-4	1 is the easiest, 4 is the hardest.	
Game Duration	10,20,30,40,50,60,70,80,90 s	Play time setting	
Auto Play Time	5-20 s	Insert coins, time to wait before auto	
		start.	
Resistance Setting		Please refer to 6.2.1.4	
Back		Back to the main menu	

6.2.1.1 Target Tickets:

Target	Image	Ticket
SM fish		0-100 ticket
M fish		0-100 ticket
LG fish		0-200 ticket
Junk	CHIPS	0-10 ticket
Shark		0-500 ticket
Octopus		0-500 ticket
Lobster Mega Bonus		0-2000 ticket

Note: This item is available to adjust when Target is defined as ticket and Fixed Ticket is 0. Lobster Mega Bonus can be manual adjusted. The rest of the targets tickets are adjusted automatically base on the play time, difficulty and average payout settings.

6.2.1.2 Target Point Setting:

Target	Ticket Adjustment Range
SM fish	0-100 point
M fish	0-100 point
LG fish	0-200 point
Junk	0-10 point
Shark	0-500 point
Octopus	0-500 point
Lobster Mega Bonus	0-2000 point

Note: This item is available to adjust when Target Note: This item is available to adjust when is defined as Points.

6.2.1.3 Score Board:

Point Range	Setting Range
0-4 PointGetTickets	
5-100 PointGetTickets	1,2,3,4,5,6,7,
101-200 PointGetTickets	8,9,10,15,20,
201-350 PointGetTickets	25,30,40,50,
351-500 PointGetTickets	60,70,80,90,
500-1000 PointGetTickets	100.
1001-2000 PointGetTickets	

Target is defined as Points. When Fixed Ticket is set to more than 0, this item is invalid.

6.2.1.4 Resistance Setting:

Target	Range
Small Fishes Resistance	0-7(default 0)
Middle Fishes Resistance	0-7(default 1)
Big Fishes Resistance	0-7(default 2)

Note: Targets in row 0,1,2,5 are consider as Small Fishes. Targets in row 3 and 4 are consider as Middle Fishes. Targets in row 6 are consider as Big fishes. Resistance is increased from 0 to 7.

6.2.2 Input Test

oille input root	
Input Test	
CoinMech 1	ON/OFF
CoinMech 2	ON/OFF
CoinMech 3	ON/OFF
CoinMech 4	ON/OFF
Player1 Reel In	ON/OFF
Player2 Reel In	ON/OFF
Player1 Lower Hook	ON/OFF
Player2 Lower Hook	ON/OFF
Player1 Ticket Out	ON/OFF
Player2 Ticker Out	ON/OFF
Back	

6.2.3 Output Test

Output Test	
Player1 Resistance	0-7(Default 0)
Player2 Resistance	0-7(Default 0)
Player1 vibration	ON/OFF
Player2 vibration	ON/OFF
Player1 out of ticket light	ON/OFF
Player2 out of ticket light	ON/OFF
Player1 lower hook light	ON/OFF
Player2 lower hook light	ON/OFF
Digital Display	ON/OFF
Mega bonus light	ON/OFF
Back	

6.2.4 Game Reset

Game Reset Reset Game Setting Delete All Record Clear Tickets Back

6.2.5 Language

Language English 中文(Chinese) Back

6.2.6 Date/Time setting

Date/Time Setting			
Year	2012		
Month	2		
Date	13		
Hour(24)	13		
Minute	25		
BACK&APPLY			
Back			

6.2.7 Bookkeeping

Bookkeeping				
Player Coins Tickets Payout(ticket)				
1	1	5	5.00	
2	2	10	5.00	
Sum	3	1 5	5.00	
Reset				
Back				

6.2.8 Daily Record:

Daily Record					
Date Weekday Run Time Coins Tickets Payout					Payout
2012-02-04	SAT	00:01	3	1 5	5.00
		Reset			
		Back			

7. ERROR MESSAGE AND RECOVERY

7.1 Error Message

Symptom: Screen displays message "Communication ERROR" (there is communication problem with the game)

Possible Causes & Fixes:

- Communication data wire is damaged → Replace the data wire.
- SCM is not working → Ask your technician to check and repair
- PC COM port has been used → Ask your technician to check and repair

Symptom: Screen displays ""PLEASE CALL ATTENDENT", "TICKET ERROR" (there is problem in the ticket payout function)

Possible Causes & Fixes:


No tickets in the game → Replenish tickets and then press the TICKET RESET button.

Ticket dispenser is damaged → Replace with a new ticket dispenser.

→ Ask the technician to check and repair. Faulty connection

7.2 System Recovery Operation

- 1. Turn off the game. Insert the memory stick into the USB port at the back of the computer.
- 2. Restart PC to enter the system recovery screen as shown.

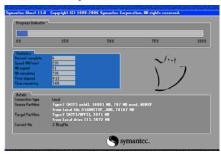

- 3. The game will automatically start recovery which will take last about 5 minutes. Please wait until process is complete.
- 4. Once system recovery is finished (as shown below), remove the USB flash drive from the computer and turn off the PC. Wait at least 30 seconds before restarting the PC.



WARNING: the USB flash drive should only be used to fix software errors. Using it for other purposes may cause unexpected results and damages.

8. MAINTENANCE & INSPECTION

8.1 Safety Check

Check the points listed before operating the machine. These checks are necessary for safe machine operation:

- 1. Try to run the game before operation each day.
- 2. Conduct monthly routine checks of game components ensure good working condition
- 3. Check the machine regularly for dust and clean when necessary.

Note: Parts and components require preventative maintenance to be kept running smoothly

8.2 Handling Precautions

When installing or inspecting the machine, be very careful of the following points and pay attention to ensure that the player can enjoy the game safely.

Non-compliance with the following points or inappropriate handling running counter to the cautionary matters herein stated can cause personal injury or damage to the machine




WARNING

- Before servicing the machine, be sure to turn power off. Servicing without turning the power off can cause electric shock or short circuit.
- To avoid electric shock or short circuit, do not plug then unplug the power quickly
- Do not expose power cords and earth wires, these are susceptible to damage.
- Damaged cords and wires can cause electric shock or short circuit and should be replaced immediately.
- When or after installing the product, avoid pulling the power cord to prevent unnecessary wear and tear. Use the power button to disconnect power.
- In case the power cord is damaged, ask for replacement through where the product was purchased from or replace locally. Continued usage of damaged cord can cause fire, electric shock or leakage.
- Perform grounding appropriately. Inappropriate grounding can cause electric shock.
- Use fuses that meet specified rating. Fuses exceeding can cause an electric shock.
- Should a problem occur, turn off the power immediately and stop operating the machine.
 Unplug the power cord of the service outlet. Operating the machine without correcting the problem may cause a fire or injuries.
- Insert the power plug securely into the outlet. Poor contact may cause overheating, resulting in fire or burns.
- To ensure the warning labels attached on the machine are visible and legible, install the machine in a well-lit location, and keep the labels clean at all times. Make sure the labels are not hidden behind other game machines.


9. OVERALL CONSTRUCTION

9.1 Cabinet

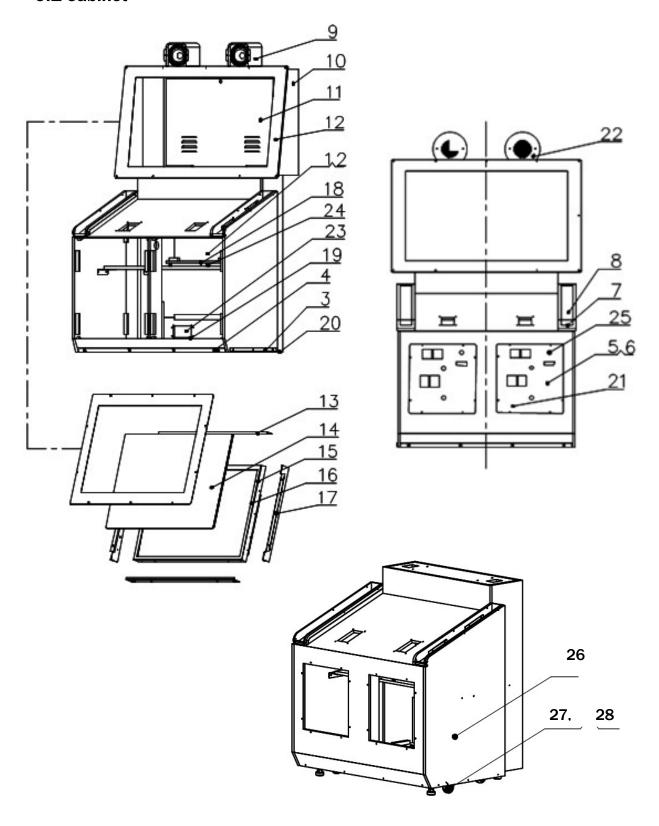


No.	Part No.	Draw No.	Name	Qty
1	X109-201-000	202.4.11.22.001	PC fixed board	1
2	X109-601-000	206.4.11.22.001	PC foam	1
3	X109-202-000	202.4.11.22.003	Bottom L&R T-molding	2
4	X109-203-000	202.4.11.22.004	Front T-molding	1
5	X109-403-000	202.4.11.22.005	Coin door	2
6	X109-204-000	202.4.11.22.006	Ticket box	2
7	X109-205-000	202.4.11.22.007	Control panel either side plastic pressure plate	2
8	X109-602-000	206.4.11.22.004	Control panel either side plastic	2
9	X109-206-000	202.4.11.22.009	Speaker base	2
10	X109-207-000	202.4.11.22.010	Monitor base	1
11	X109-208-000	202.4.11.22.011	Monitor base back board	1
12	X109-209-000	202.4.11.22.012	Monitor front cover board	1
13	X109-210-000	202.4.11.22.013	Glass pressure bar	2
14	X109-603-000	204.4.11.22.001	Monitor glass	1
15	X109-604-000	206.4.11.22.003	Monitor long foam	2
16	X109-605-000	206.4.11.22.002	Monitor short foam	2
17	X109-211-000	202.4.11.22.017	Monitor L&R fixed board	2
18	X109-502-000	203.4.11.22.002	PC fix board	1
19	X109-212-000	202.4.11.22.019	Power pressure plate	1
20	X109-213-000	202.4.11.22.020	Back T-molding	1
21	X109-214-000	202.4.11.22.021	Button fixed board	2
22	X109-701-000	205.4.11.22.002	Speaker plastic	2
23	X109-404-000	2.60.00005000	Wire box support base	1
24	X109-405-000	2.60.00012000	Shockproof screw A	4
25	X109-406-000	2.53.00171001	Lock	8
26	X109-501-000	2.99.4.11.22.001	Wooden part	1
27	X109-401-000	2.60.00008000	2.5" leveler	4
28	X109-402-000	2.60.00010000	2.5" caster	4

9.2 Left Handle Mechanism

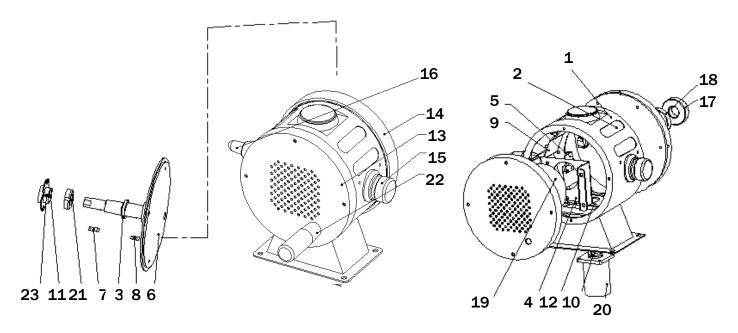


No.	Part No.	Draw No.	Name	Qty
1	X109-215-000	2.99.4.11.22.006	Fishing mechanism outer bracket 1	1
2	X109-606-000	206.4.11.22.006	Translucent piece	2
3	X109-216-000	202.4.11.22.016	Washer	1
4	X109-217-000	202.4.11.22.031	Clutch support base	1
5	X109-218-000	202.4.11.22.032	Sensor support base	1
6	X109-219-000	202.4.11.22.033	Turntable	1
7	X109-220-000	202.4.11.22.034	Key 1	1
8	X109-221-000	202.4.11.22.035	Key 2	1
9	X109-222-000	202.4.11.22.036	Light strip fix board	2
10	X109-223-000	202.4.11.22.037	Eccentric	1
11	X109-224-000	202.4.11.22.038	Sensor block	1
12	X109-225-000	202.4.11.22.039	Motor fix board	1
13	X109-226-000	202.4.11.22.040	Bracket R cover 1	1
14	X109-227-000	202.4.11.22.041	Bracket L cover 1	1
15	X109-607-000	206.4.11.22.007	Fishing mechanism decorate 1	1
16	X109-608-000	206.4.11.22.008	Fishing mechanism decorate 2	1
17	X109-408-000	2.01.06.15.0003	One-way bearing	1
18	X109-409-000	2.01.06.000127	Deep groove ball bearing	1
19	X109-410-000	2.34.13.000002	Hollow shaft magnetic powder brake	1
20	X109-411-000	2.34.04.000030	DC motor	1
21	X109-412-000	2.01.02.00.8003	Round nut	1
22	X109-413-000	206.4.11.22.005	Rotating grip handle	2
23	X109-228-000	202.4.11.22.042	Copper pad	1

9.3 Right Handle Mechanism

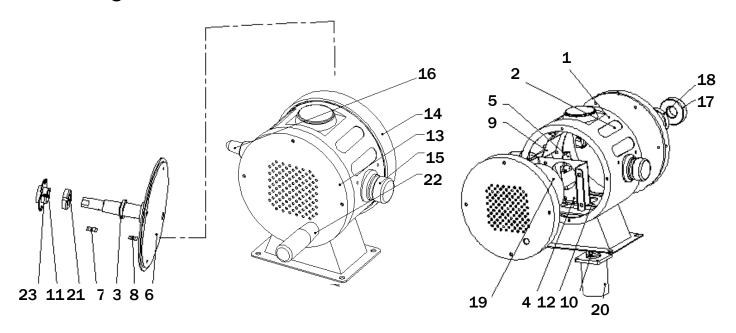

No.	Part No.	Draw No.	Name	Qty
1	X109-229-000	2.99.4.11.22.007	Fishing mechanism outer bracket 2	1
2	X109-606-000	206.4.11.22.006	Translucent piece	2
3	X109-216-000	202.4.11.22.016	Washer	1
4	X109-217-000	202.4.11.22.031	Clutch support base	1
5	X109-218-000	202.4.11.22.032	Sensor support base	1
6	X109-219-000	202.4.11.22.033	Turntable	1
7	X109-220-000	202.4.11.22.034	Key 1	1
8	X109-221-000	202.4.11.22.035	Key 2	1
9	X109-222-000	202.4.11.22.036	Light strip fix board	2
10	X109-223-000	202.4.11.22.037	Eccentric	1
11	X109-224-000	202.4.11.22.038	Sensor block	1
12	X109-225-000	202.4.11.22.039	Motor fix board	1
13	X109-230-000	202.4.11.22.044	Bracket R cover 2	1
14	X109-231-000	202.4.11.22.045	Bracket L cover 2	1
15	X109-609-000	206.4.11.22.009	Fishing mechanism decorate 3	1
16	X109-610-000	206.4.11.22.010	Fishing mechanism decorate 4	1
17	X109-408-000	2.01.06.15.0003	One-way bearing	1
18	X109-409-000	2.01.06.000127	Deep groove ball bearing	1
19	X109-410-000	2.34.13.000002	Hollow shaft magnetic powder brake	1
20	X109-411-000	2.34.04.000030	DC motor	1
21	X109-412-000	2.01.02.00.8003	Round nut	1
22	X109-413-000	206.4.11.22.005	Rotating grip handle	2
23	X109-228-000	202.4.11.22.042	Copper pad	1

9.4 Marquee Assembly

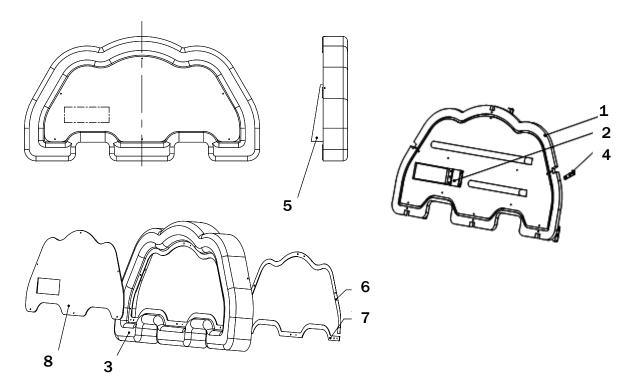


No.	Part No.	Draw No.	Name	Qty
1	X109-503-000	203.4.11.22.005	Marquee fix board	1
2	X109-232-000	202.4.11.22.018	Digital support base	2
3	X109-611-000	206.4.11.22.011	Marquee vacuum form	1
4	X109-233-000	202.4.11.22.046	Vacuum form fix block	6
5	X109-234-000	202.4.11.22.049	Marquee support base	1
6	X109-235-000	202.4.11.22.050	Marquee decal fix board 1	1
7	X109-236-000	202.4.11.22.051	Marquee decal fix board 2	1
8	X109-702-000	205.4.11.22A.001	Marquee decal	1

11


12

9.5 Electrical Equipment Part:

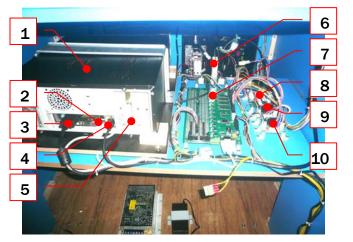




No.	Part No.	Draw No.	Name	Qty
1	X109-414-000	2.11.00000030	PC	1
2	X109-415-000	208.4.11.22.002	Dongle	1
3	X109-416-000	2.33.03.020002	Serial port cable	1
4	X109-417-000	2.33.05.000004	Stereo audio cable	1
5	X109-418-000	2.33.07.000015	DVI-DVI video cable	1
6	X109-801-000	2.17.02.000008	Amplifier board	1
7	X109-802-000	208.4.11.22.001	IO board	1
8	X109-803-000	207.4.11.22.001	РСВ	1
9	X109-804-000	207.3.11.01.001	РСВ	1
10	X109-805-000	207.3.11.01.001	РСВ	1
11	X109-419-000	2.16.02.000071	Power box	1
12	X109-420-000	2.16.02.000075	DC power box	1

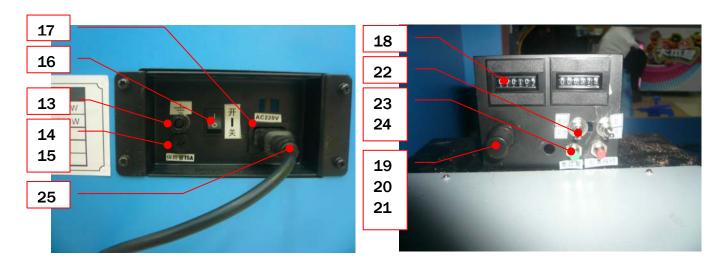





No.	Part No.	Draw No.	Name	Qty
13	X109-421-000	2.14.12.000001	Terminal	1
14	X109-422-000	2.19.02.000006	Fuse base	1
15	X109-423-000	2.19.01.000013	Fuse	1
16	X109-424-000	2.26.01.000005	Small rocker SW	1
17	X109-425-000	2.32.0000001	Filter	1
18	X109-426-000	2.30.00000006	Meter	2
19	X109-427-000	2.25.01.000017	РОТ	1
20	X109-428-000	2.17.09.000002	POT connecting board	1
21	X109-429-000	2.24.03.000001	POT knob	1
22	X109-430-000	2.26.06.000049	Toggle SW	2
23	X109-431-000	2.24.02.050001	Button	1
24	X109-432-000	2.24.02.030002	Button	1
25	X109-433-000	2.33.01.000001	Power cable	2
26	X109-806-000	207.3.11.01.001	PCB board	2
27	X109-434-000	2.28.01.000005	Speaker	2
28	X109-435-000	2.27.02.000002	Exhaust fan	2
29	X109-436-000	2.27.02.000010	Exhaust fan net	4
30	X109-437-000	2.12.00000065	LCD monitor	1

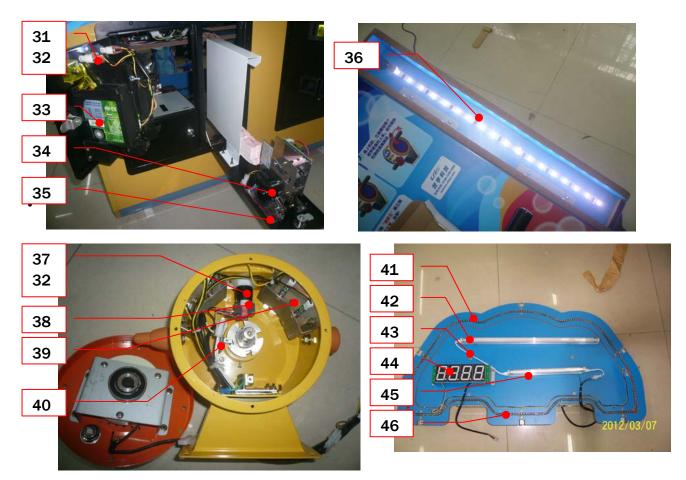


No.	Part No.	Draw No.	Name	Qty
31	X109-438-000	2.22.01.000028	12V white light socket	4
32	X109-439-000	2.20.03.000018	LED plug bubble	4
33	X109-440-000	2.23.01000007	Coin mech	4
34	X109-441-000	2.31.00000006	Ticket dispenser	2
35	X109-442-000	2.20.03.000075	Red light belt base	2
36	X109-443-000	2.20.02.016001	Colorful LED light bar	1.36
37	X109-444-000	2.24.01.000005	Large button	2
38	X109-446-000	2.26.04.000006	Micro SW	2
39	X109-807-000	2.97.4.1122002	LED light board	8
40	X109-808-000	2.17.05.000016	Sensor board	2
41	X109-447-000	2.20.02.000037	LED light bar	2
42	X109-448-000	2.20.06.000018	T5 tube	1
43	X109-449-000	2.33.01.000006	T5 tube connecting cable	1
44	X109-809-000	207.4.11.12.001	РСВ	1
45	X109-450-000	2.20.06.000060	Energy-saving lamp	1
46	X109-451-000	2.20.02.000038	LED light bar	1


9.7 Decals:



No.	Part No.	Draw No.	Name	Qty
1	X109-702-000	205.4.11.22A.001	Marquee decal	1
2	X109-701-000	205.4.11.22.002	Speaker decal	2
3	X109-703-000	205.4.11.22.003	Display frame decal	1
4	X109-704-000	205.4.11.22.004	Display frame down decal	1
5	X109-705-000	205.4.11.22.005	Control panel decal	1
6	X109-706-000	205.4.11.22.006	Button decal	2
7	X109-707-000	205.4.11.22.007	L handle decal	1
8	X109-708-000	205.4.11.22.008	R handle decal	1
9	X109-709-000	205.4.11.22.009	Door frame decal	1
10	X109-710-000	205.4.11.22.010	Body L-side decal	1
11	X109-711-000	205.4.11.22.011	Body R-side decal	1
12	X109-712-000	205.4.11.22.012	Red decal	1
13	X109-713-000	205.4.11.22.013	Green decal	1

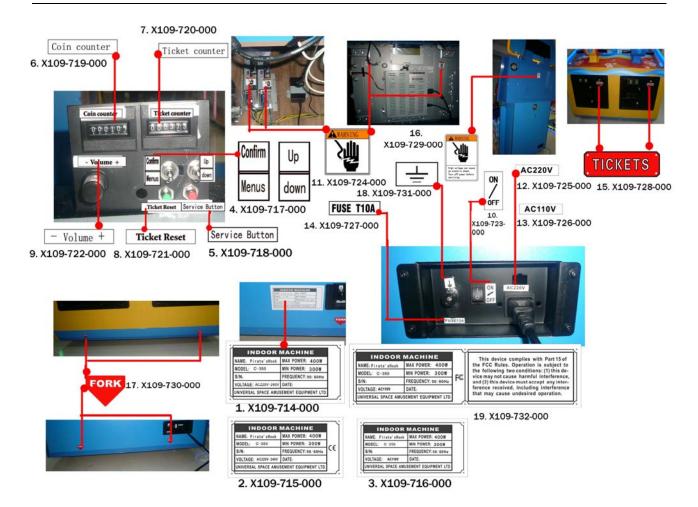

No.	Part No.	Code	Name	Qty
1	X109-714-000	205.4.11.22.014	Non-certificated 220V nameplate	1
2	X109-715-000	205.4.11.22.015	Certificated 220V nameplate	1
3	X109-716-000	205.4.11.22.016	Non-certificated 110V nameplate	1
4	X109-717-000	205.4.11.22.018	Menu decal	1
5	X109-718-000	205.4.11.22.019	Service button	1
6	X109-719-000	2.56.00.0001	Coin counter	1
7	X109-720-000	2.56.00.0002	Ticket counter	1
8	X109-721-000	2.56.00.0008	Ticket reset label	1
9	X109-722-000	2.56.00.0003	Volume label	1
10	X109-723-000	2.56.00.0018	Power SW label A	1
11	X109-724-000	2.56.00.0036	High voltage warning(Small)	4
12	X109-725-000	2.56.00.0041	Label 220V	1
13	X109-726-000	2.56.00.0040	Label 110V	1
14	X109-727-000	2.56.00.0014	Fuse T10A	1
15	X109-728-000	2.56.00.0034	Ticket payout label	2
16	X109-729-000	2.56.00.0037	High voltage warning(Large)	1
17	X109-730-000	2.56.00.0035	Fork label	4
18	X109-731-000	2.56.00.0019	Earth label	1
19	X109-732-000	205.4.11.22.017	Certificated 110V nameplate	1

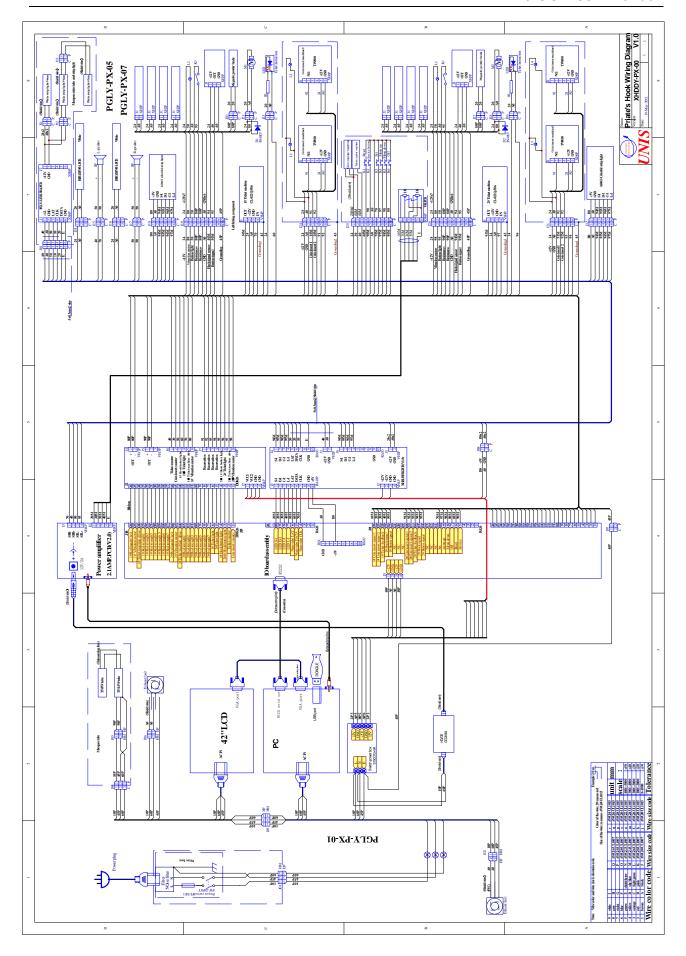



Have Questions? Contact us!

www.zs-shiyu.com

www.universal-space.com

Canada Office Parts & Service

+1-905-477-2823

Email: service@universal-space.com