

PAC-MAN SMASH

Operation Manual

The actual product may differ slightly from the illustrations in this Operation Manual.



- To ensure safe operation of the machine, be sure to read this Operation Manual before use.
- Keep this Operation Manual in a safe place for quick access whenever needed.

NAMCO BANDAI Games Inc.

Introduction

Thank you very much for purchasing PAC-MAN SMASH (referred to as "the machine" in this manual).

This Operation Manual describes:

- How to safely install, move, transport, operate, service and dispose of the machine.
- · How to make full use of the machine's functions and operate it correctly.
- How to ensure the safety of players and bystanders.

Contact for this machine and machine repair inquiries

• For inquiries regarding the machine or machine repairs, contact your distributor.

Safety Precautions

Instructions to the Owner

If you delegate the work for installing, moving, transporting, operating, servicing or disposing the machine to other people, ensure that these people read the relevant sections of this operation manual carefully before starting work, and observe the corresponding precautions.

1-1 Levels of Risk

The safety and property damage precautions on the machine labels and in this Operation Manual are classified according to their risk level, as follows.

NARNING: Failure to avoid these risks may result in serious injury or death.

CAUTION : Failure to avoid these risks may result in light injury or damage to other property.

Notes about functionality that are not linked to safety are indicated with the following symbol.

NOTICE: Information about product functions or protection.

Definition of "Technician" 1-2

This Operation Manual is designed for arcade personnel. However, the sections marked "Must be performed by a technician" in the Table of Contents are written for technicians. These tasks must be performed by technicians only.

Technician: A person involved in design, manufacture, inspection or service at an amusement device manufacturer, or a person involved routinely in the service or management (such as repair) or amusement devices and who has specialist knowledge of electricity, electronics or mechanical engineering equivalent to or higher than a technical high school graduate.

1-3 Critical Safety Precautions


- **MARNING**

- Should an abnormality occur, turn off the power switch immediately to stop operations. Then, be sure to disconnect the power cord plug from the outlet. Operating the machine while the abnormality persists may result in a fire or accident.
- This machine includes important parts used to ensure the safety of players and bystanders. Operating the machine while these "important parts for ensuring player and bystander safety" are broken, damaged or deteriorated, or with defective installation may result in an injury to the players or bystanders. If you discover an abnormality, replace the affected part immediately. To order parts, contact your distributor.
- Dust accumulating on the power cord plug may result in a fire. Inspect the plug regularly and remove any dust.
- Fully insert the power cord plug into the outlet. Poor contact may generate heat and result in a fire
 or burns.
- Damage to the power cord may result in a fire, electric shock or electrical leakage. Be sure to observe the following.
 - Keep the power cord away from heaters.
 - Do not twist the power cord.
 - . Do not forcibly bend the power cord.
 - Do not alter the power cord.
 - Do not pull the power cord. (Always unplug by holding the plug and not the power cord.)
- Do not bundle the power cord.
- Do not place objects on the power cord.
- Do not allow the power cord to be caught between the machine and other devices or the wall.
- Do not do anything else that might damage the power cord.
- Do not expose the power cord and power cord plug to water. It may result in electric shock or electrical leakage.
- Do not touch the power cord plug with wet hands. It may result in electric shock.
- The power capacity of the machine is AC 120 V (or 220 V), maximum current consumption 3 A. To prevent fire and electric shock, use indoor wiring that conforms to these power supply specifications.
- Use a power supply voltage range of AC 110 V to 130 V (or 210 V to 230 V). Using a voltage outside
 this range may result in a fire or electric shock. However, to ensure that the machine operates in the
 optimum condition, keep the voltage at AC 120 V (or 220 V) as much as possible.
- To ensure safe use of the machine, be sure to perform the pre-operation inspection (See "7-4 Pre-operation Inspection" on page 35.) and service (See "8B Service" on page 109.). Omitting these inspections or service may result in an accident.
- Use the consumables and service parts (including screws) that are specified by NAMCO BANDAI Games Inc. To order parts, contact your distributor.
- Do not modify the machine without permission. Do not perform any operations that are not described in this Operation Manual. Modifying the machine may create unforeseen hazards.
- If you decide to transfer ownership of this machine, be sure to provide this Operation Manual with the machine.

1-4 **Machine Warning Labels**


∕!\WARNING-

- The warning labels attached to the machine contain important information for ensuring safety. Be sure to observe the following.
 - . To ensure that the warning labels attached to the machine are always clearly visible, install the machine in an appropriate location with ample illumination and keep the labels clean at all times. Make sure that the labels are not hidden by other machines or objects.
 - · Do not remove or alter the warning labels.
 - · If a warning label becomes excessively dirty or damaged, replace it with a new one. To order warning labels, contact your distributor.

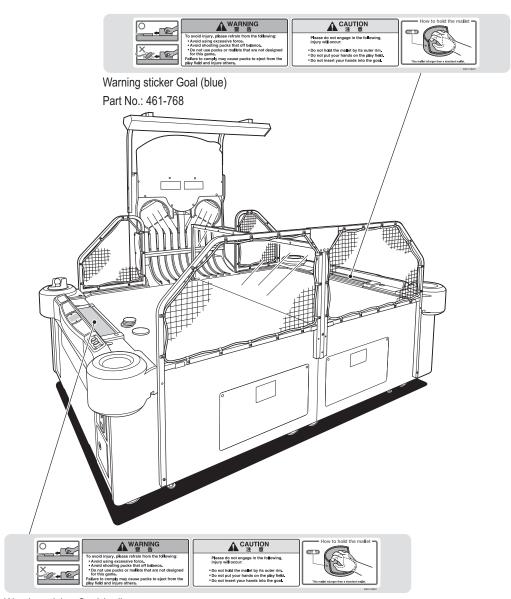

Warning sticker Goal (red)

Part No.: 461-769

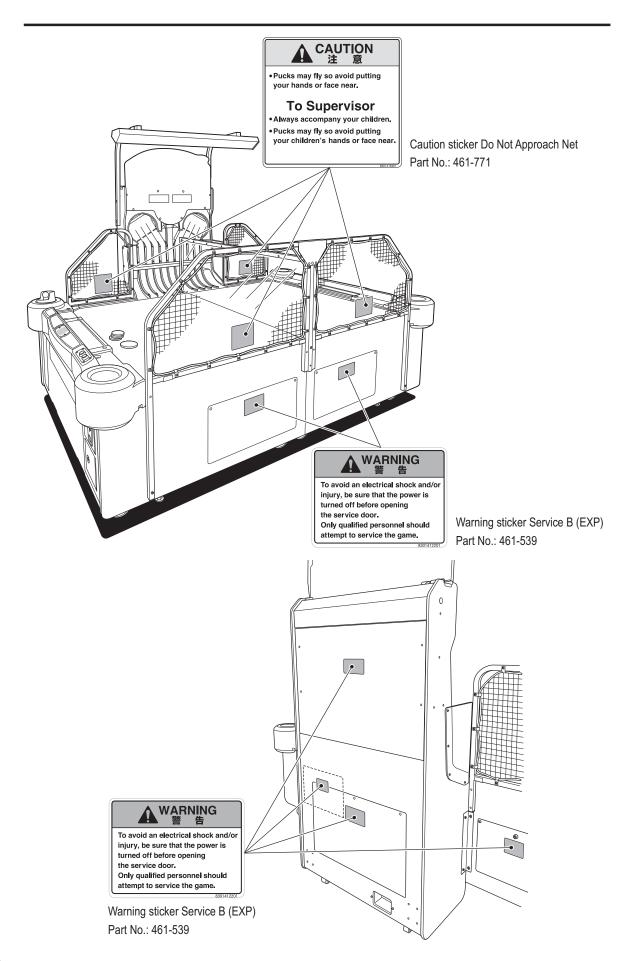

8B

9


11

12 Machi

Machine Warning Labels

Test Mode



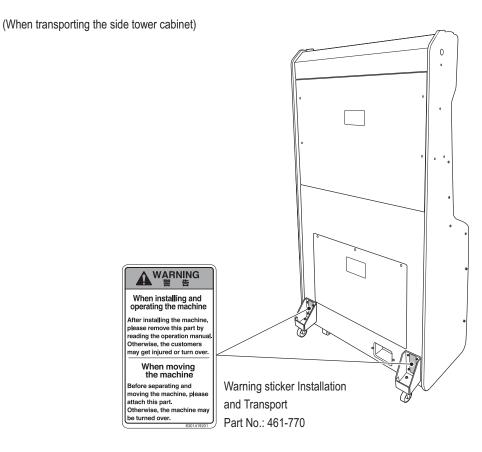

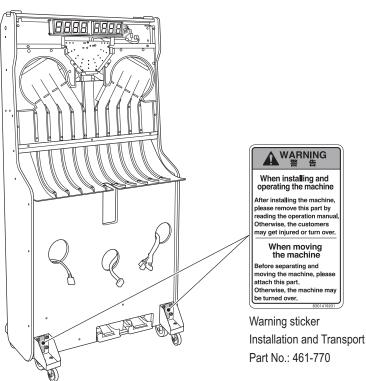


Table of Contents

Int	roduct				
1.	Safe	•	utions -Be sure to read to ensure safe operation		
	1-1		s of Risk		
	1-2		tion of "Technician"		
	1-3		Il Safety Precautions		
	1-4	Machi	ne Warning Labels	3	
2.	Spec	ification	S	10	
3.	3. Package Contents				
4.	Over	all Struc	ture (Part Names)	22	
5.	Insta	llation		24	
	5-1	Install	ation Conditions	24	
		5-1-1	Installation Locations to Avoid	24	
		5-1-2	Play Zone for the Installed Machine	25	
	5-2	Requi	red Dimensions for the Delivery Route (Such as Doors and Corridors)	26	
6.	Movi	ng and t	ransporting	27	
	6-1	Movin	g (On the Same Floor)	27	
	6-2	Transp	porting	28	
		6-2-1	Transporting Manually (Such as Carrying on Stairs)	28	
		6-2-2	Loading and Unloading to and from a Vehicle	30	
		6-2-3	Transporting on a Vehicle	31	
7.	Oper	ation		32	
	7-1	People	e Who Should Avoid Playing	33	
	7-2	Safety	Precautions for Playing	33	
	7-3	Import	lant Parts for Ensuring Player and Bystander Safety	34	
	7-4	Pre-op	peration Inspection	35	
		7-4-1	Safety Inspection Items (Before Power On)	35	
		7-4-2	Function Inspection Items (After Power On)	36	
	7-5	Openi	ng and Closing Doors	37	
		7-5-1	Opening and Closing the Selector Door	37	
		7-5-2	Opening and Closing the Coin Box Door	37	
		7-5-3	Opening and Closing the Goal (L) and (R) Assemblies	38	
	7-6	Explar	nation of the Power Switch and Adjustment Switches	39	
		7-6-1	Turning the Power Switch On	39	
		7-6-2	Adjustment Switches	39	
			. He a Constant		
	7-7	Playin	g the Game	40	
	7-7	Playin 7-7-1	g the Game Big Bang Mode		
	7-7	•	•	40	
	7-7	7-7-1	Big Bang Mode	40	
	7-7 7-8	7-7-1 7-7-2 7-7-3	Big Bang Mode	40 40 40	
		7-7-1 7-7-2 7-7-3	Big Bang Mode	40 40 40	

7-8-3

7-8-4

7-8-5 7-8-6

7-8-7 7-8-8

7-8-9

ᇦ
ŝ
⋈
ĕ
v

		Ξ
	_	
	=	-
	•	i
	>	_
	2	=
	ζ	9
	7	5
	2	ž
	9	"
	Ξ	3
	c	3
	è	5
	2	=
	É	Ė
	Ξ	2
1	c	7

	7-9	Setting	Mode	51
		7-9-1	Setting Item Selection Mode	
		7-9-2	Number of coins per game	53
		7-9-3	Number of plays per game	54
		7-9-4	Big Bang Mode play time	55
		7-9-5	Normal Hockey Mode play time	56
		7-9-6	Mini puck supply frequency more/less setting for Big Bang Mode	57
		7-9-7	3-puck setting for Normal Hockey Mode	58
		7-9-8	Attract BGM ON/OFF	59
		7-9-9	Mini puck low warning ON/OFF	60
		7-9-10	Error log	61
			(1) Number of Errors Saved in Error Log Display Mode	61
			(2) Error Log Contents Display Mode	62
		7-9-11	Ticket Dispenser Use Setting	63
		7-9-12	Number of Tickets Paid to Winner	64
		7-9-13	Number of Tickets Paid to Loser	65
		7-9-14	Number of Tickets Paid in case of a Tie	66
		7-9-15	Game mode setting	67
		7-9-16	Return all settings to default settings (factory settings)	68
	7-10	Mini Pu	ıck Low Warning and Adding Mini Pucks	69
		7-10-1	Mini Puck Low Warning	69
		7-10-2	Adding Mini Pucks	
	7-11	•	leaning	
		7-11-1	Cleaning the Playing Field	
		7-11-2	Cleaning the Goal Covers and Corner Covers	
		7-11-3	Cleaning the Pucks and Mallets	
		7-11-4	Cleaning the Signboard and Cover Panel	
		7-11-5	Cleaning the Sloped Areas	
8.			Manual - Must be performed by a technician	
8A.			d Assembly	
	8A-1		er of Workers, Work Time and Work Space	
		8A-1-1	Number of Workers and Work Time	
			(1) Number of Workers	
		04.4.0	(2) Work Time	
	04.0		Securing Work Space	
	8A-2		bly	
		0A-Z-1	Assembling the Table	
			(2) Installing the Nets	
			(3) Installing the Blower Fan	
		84-2-2	Level Adjuster Adjustment	
		8A-2-3	Assembling the Side Tower Assembly	
		8A-2-4	Installing the Light Assembly.	
		8A-2-5	Installing the Side Tower Assembly	
		8A-2-6	Preparing the Pucks and Mallets	
	8A-3		cting the Power Cord and Ground	
	8A-4		s after Installation	

8A-	•	g and Closing Doors	
	8A-5-1	Opening and Closing the Front Doors	107
	8A-5-2	Opening and Closing the Service Doors L and R	107
	8A-5-3	Opening and Closing the Rear Panel	108
	8A-5-4	Opening and Closing the Service Door	108
8B. Ser	vice - Mus	t be performed by a technician	109
8B-	1 Inspect	tion and Service	109
	8B-1-1	Inspection Items	109
	8B-1-2	Cleaning the Puck Paths	110
		(1) Cleaning the Insides of the Goal (L) and (R) Assemblies	110
		(2) Cleaning the Rail (L) and (R) Assemblies	111
		(3) Cleaning the Insides of the L and S Buckets (Hopper Assembly)	112
		(4) Cleaning the Hopper Disks and Hopper Bottoms (Hopper Assembly)	113
		(5) Cleaning the S Slider Assembly	116
	8B-1-3	Removing Jammed Pucks	118
		(1) Inside the Goal (L) or (R) Assembly	118
		(2) In case of the rail (L)/(R) assembly	118
		(3) Inside the Corner Rail (L) or (R)	
		(4) Inside the L or S Bucket (Hopper Assembly)	
		(5) Inside a Hopper Disk or Hopper Bottom (Hopper Assembly)	120
		(6) In case of S Escalator Assembly	121
		(7) In case of L Escalator Assembly	
		(8) In case of the Slider Assembly	
		Adding Big Pucks	
8B-	2 Error D	isplay (for Technicians)	
	8B-2-1	11.19	
		Resolving Errors	
8B-		eshooting	
	8B-3-1	Overall	
	8B-3-2	Table top assembly	
	8B-3-3	Goal (L) and (R) Assemblies	
		Rail (L) and (R) Assemblies	
	8B-3-5	Coin Assembly	
	8B-3-6	Hopper assembly	
	8B-3-7	Slider Assembly	
	8B-3-8	S Escalator Assembly	
		L Escalator assembly	
		Signboard assembly	
OD.		Illuminator assembly	
8B-		ring, Installing and Replacing Assemblies and Parts	
	8B-4-1	Table	
		(1) Removing and Installing the Goal (L) and (R) Assemblies	
		(2) Removing and Installing the Rail (L) and (R) Assemblies	
	00.40	(3) Replacing the Blower Fan	
	8B-4-2	Goal (L) and (R) Assemblies	
		(1) Replacing the Illuminated Buttons and Lamps	
	00 4 0	(2) Replacing the Goal (L) and (R) Sensors (Photosensor Side) and (Photo-emitter Side)	
	8B-4-3	Rail (L) and (R) Assemblies	
		(1) Replacing the Rail (L) and (R) Sensors (Upper) and (Middle)	
		(2) Replacing the Rail (L) and (R) Sensors (Lower)	147

ᇦ
js:
≤
8
Ф

\equiv		_
	_	
	=	=
	-	•
	≽	4
	₹	=
	τ	5
	7	c
	3	2
	U	,
	=	3
	7	i
	7	5
	2	4
	Ξ	-
	Ξ	3
- (c	٤

		0D / /	Cida tawar accambly	110
		OD-4-4	Side tower assembly(1) Removing and Installing the Side Tower Assembly	
			(2) Replacing the Main PC Board	
			(3) Replacing the Switching Regulator	
		0D 4 F	(4) Replacing the SSR	
		8B-4-5	Hopper assembly	
			(1) Replacing the L Hopper Motor	
			(2) Replacing the L Hopper Motor Sensor	
			(3) Replacing the S Hopper Motor	
			(4) Replacing the S Hopper Motor Sensor	
			(5) Replacing the S Hopper Motor Driver PC Board	
		8B-4-6	Slider Assembly	
			(1) Replacing the Stopper Solenoids (L) and (R)	
			(2) Replacing the Stopper (L) and (R) Sensors	165
			(3) Replacing the Stock (L) and (R) Sensors	166
		8B-4-7	S escalator Assembly	168
			(1) Replacing the S divider (L) and (R) Outlet Sensors	168
		8B-4-8	L escalator assembly	169
			(1) Replacing the L divider Solenoid	169
			(2) Replacing the L divider Sensor	170
			(3) Replacing the L divider (L) and (R) Outlet Sensors	171
		8B-4-9	Signboard assembly	172
			(1) Replacing the Time LED (Time LED PC Board)	
			(2) Replacing the Score LED (Score LED PC Board)	
		8B-4-10	Illuminator assembly	
			(1) Replacing the Circle LED	
		8B-4-11	Replacing the LED Fluorescent Light	
9.	Disno			
	-			
10.	10-1			
	10-2		p assembly	
	10-3		(L) assembly	
	10-4		assembly	
	10-5	` '	assembly	
	10-6		sembly	
	10-7		(R) assembly	
	10-8	•) assembly	
	10-9	. ,	assembly	
	10-10		ver assembly	
	10-11		assembly	
			ssembly	
			ator assembly	
	10-14	L escala	ator assembly	208
	10-15	Signboa	ard assembly	210
	10-16	Cord bo	x assembly	210
	10-17	Illumina	tor assembly	211
	10-18	Light As	sembly	212
11.	Wiring	g Diagrar	n	213

2. Specifications


(1) Rated power supply AC 120 ±10 V (50/60 Hz), AC 220 ±10 V (50/60 Hz)


(2) Rated power consumption 310 W


(3) Maximum current consumption
 (4) Cashbox capacity
 3 A
 Approx. 200,000 yen (2,000 100 yen coins)

(5) Dimensions

1) When installed Width (W) 2,030 x Depth (D) 2,570 x Height (H) 2,170 [mm]

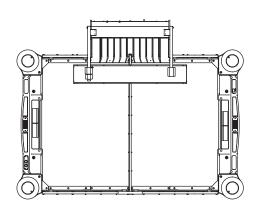

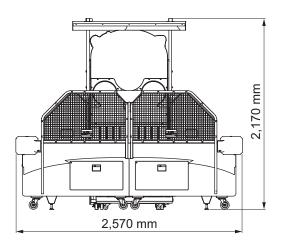


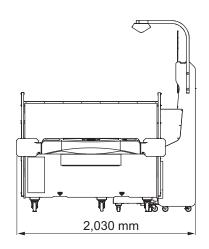


2) When disassembled

Table

Width (W) 1,690 x Depth (D) 2,570 x Height (H) 1,350 [mm]

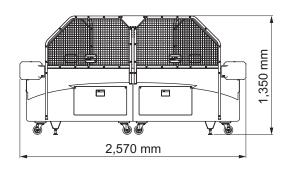

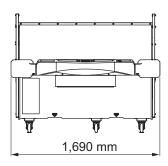


1

8B


9

10

11 2 Specifications

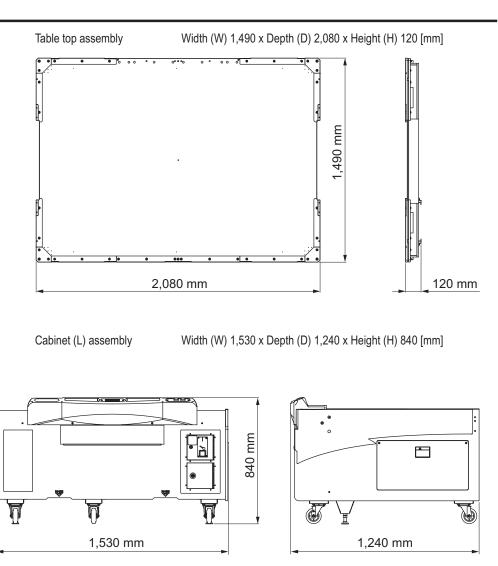





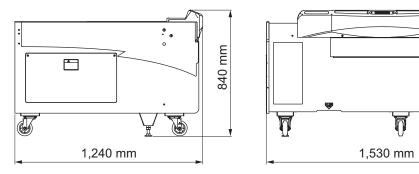

Side tower assembly


Width (W) 960 x Depth (D) 1,030 x Height (H) 2,050 [mm] (When the signboard is removed)
Width (W) 960 x Depth (D) 1,030 x Height (H) 1,700 [mm]

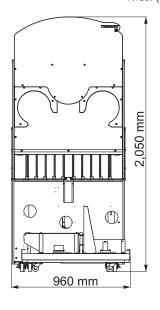


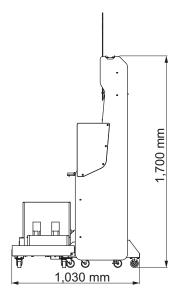

Hopper assembly


Width (W) 880 x Depth (D) 520 x Height (H) 530 [mm]

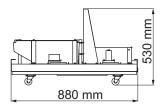


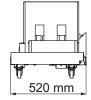

Side tower cabinet

Width (W) 920 x Depth (D) 620 x Height (H) 2,050 [mm]

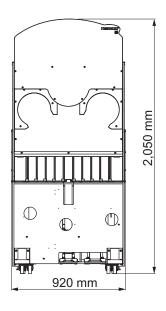

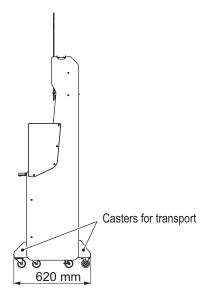

(6) Weight

1) When installed

Approx. 395 kg

2) When disassembled

Table
Side tower assembly

Approx. 280 kg Approx. 115 kg

Package Contents

The following items are included when this machine is shipped.

Width (W) 920 x Depth (D) 850 x Height (H) 1,890 [mm] (1) Side tower cabinet

Weight 85 kg

(2) Cabinet (R) assembly Width (W) 1,540 x Depth (D) 1,240 x Height (H) 780 [mm]

Weight 130 kg

(3) Cabinet (L) assembly Width (W) 1,540 x Depth (D) 1,240 x Height (H) 780 [mm]

Weight 115 kg

Width (W) 2,100 x Depth (D) 1,520 x Height (H) 160 [mm] (4) Table top assembly

Weight 100 kg

(5) Hopper assembly Width (W) 950 x Depth (D) 570 x Height (H) 360 [mm]

Weight 30 kg

Width (W) 1,650 x Depth (D) 700 x Height (H) 70 [mm] (6) Center guard

Weight 8 kg

Width (W) 1,240 x Depth (D) 1,130 x Height (H) 160 [mm] (7) Side net

Weight 20 kg

(8) Light Assembly Width (W) 1,370 x Depth (D) 440 x Height (H) 320 [mm]

Weight 16 kg




• Make sure that all the items below are contained in the product package.

If any items are missing, contact your distributor.

3. Package Contents

(1) Side tower cabinet

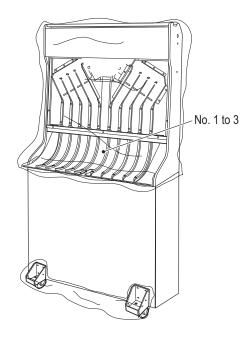


Package contents

No.	Name	Specification	Qty.
1	Operation Manual (this manual)		1
2	Service key	(D)	2
3	Torx wrench	T25, for M5	1

14


(2) Cabinet (R) assembly

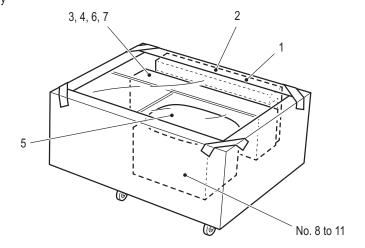

Package contents

No.	Name	Specification	Qty.
1	Service key	529	2
2	Goal (R) assembly		1
3	Rail (L) assembly	TTT	1
4	Rail (R) assembly		1
5	Signboard		1
6	Goal cover A	(with game select illuminated buttons)	1
7	Goal cover B		1
8	Corner cover	Four types: (Red • L), (Red • R), (Blue • R)	4 types
9	Mallet		4
10	Big puck		100
11	Mini puck	(Pink, orange, green: 100 each)	300

(3) Cabinet (L) assembly

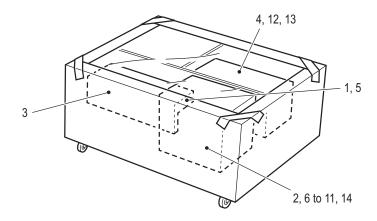

Package contents

No.	Name	Specification	Qty.
1	Service key	629	2
2	Screws	See "● List of screws" on page 20.	1 set
3	Goal (L) assembly		1
4	Blower fan		1
5	Cash box key		2
6	Side wall		2
7	Side tower bracket (L)		1
8	Side tower bracket (R)		1
9	Center guard bracket (A)		1

16

Qty.

1

1

1


1

1

10

11 ဩ Package Contents

Specification

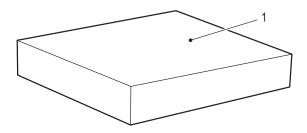

Package contents

No.

10

11

12

13

14

Name

Center guard bracket (B)

Triangle bracket

Blower bracket (L)

Blower bracket (R)


Hopper wall

(4) Table top assembly

No.	Name	Specification	Qty.
1	Table top assembly		1

3. Package Contents


(5) Hopper assembly

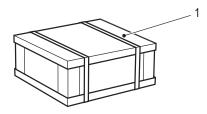

Package contents

No.	Name	Specification	Qty.
1	Hopper assembly		1

(6) Center guard

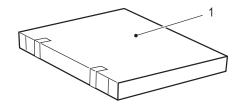


Package contents

No.	Name	Specification	Qty.
1	Center guard unit		1

10

88 Package Contents


(7) Side net

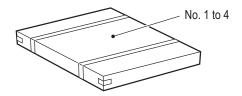

Package contents

No.	Name	Specification	Qty.
1	Net L frame (L)		1
2	Net L frame (R)		1
3	Net S frame (L)		1
4	Net S frame (R)	P	1

(8) Light Assembly

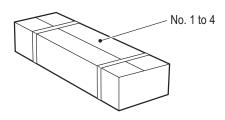

Package contents

No.	Name	Specification	Qty.
1	Light arm L		1
2	Light arm R		1
3	Light frame unit		1
4	Connector cover		2


• List of screws (included with the cabinet (L) assembly)

No.	Name	Specification		Qty.
B1	Phillips hexagon socket head bolt (with flat and spring washers)	M8×35		12
B2	Button head bolt	M5×16	Omm	5
B3	Button head bolt	M5×35	Opposition	2
B4	Button head bolt	M6×16	Omin	3
B5	Button head bolt	M6×25	O Jumin	12
B6	Button head bolt	M6×40	Ommin	16
B7	Button head bolt	M6×50	© Janaan	18
B8	Flange socket bolt	M5×10		8
B9	Flange socket bolt	M5×16		6
B10	Flange socket bolt	M5×30		4
B11	Flange socket bolt	M5×35		2
B12	Flange socket bolt	M6×20		12
B13	Torx bolt	M5×8	Om Om	4
B14	Torx bolt	M5×12	D	8

No.	Name	Specification		Qty.
B15	Torx bolt (silvery white)	M5×16		4
B16	Torx bolt (silver)	M5×16		8
B17	Torx bolt	M5×20		4
B18	Countersunk cap bolt	M5×35	Ommin	2
B19	Square washer	M8		12
B20	Spring washer	M6	P	6
B21	Flat washer	M5	0	13
B22	Flat washer	ø24 for M5	6	4
B23	Flat washer	M6	0	23
B24	Flat washer	ø16 for M6		14
B25	Phillips pan head screw (with flat and spring washers)	M4×10		5
B26	Flat washer	ø7×24	0	4
B27	Flange socket bolt	M6×16		2

4. Overall Structure (Part Names)

■ Overall

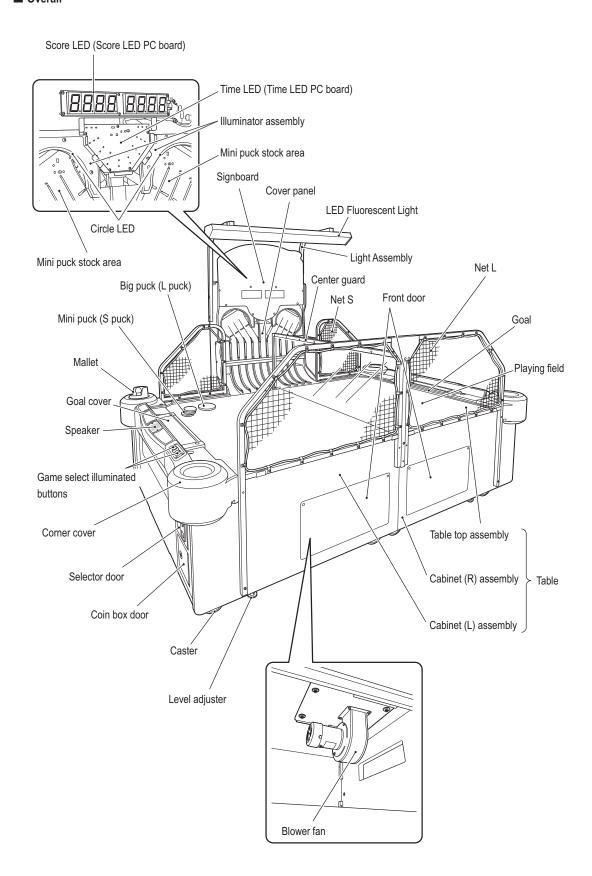

8B


9 10

11

2 Overall Structure (Part Names)

Test Mode

Troubleshooting

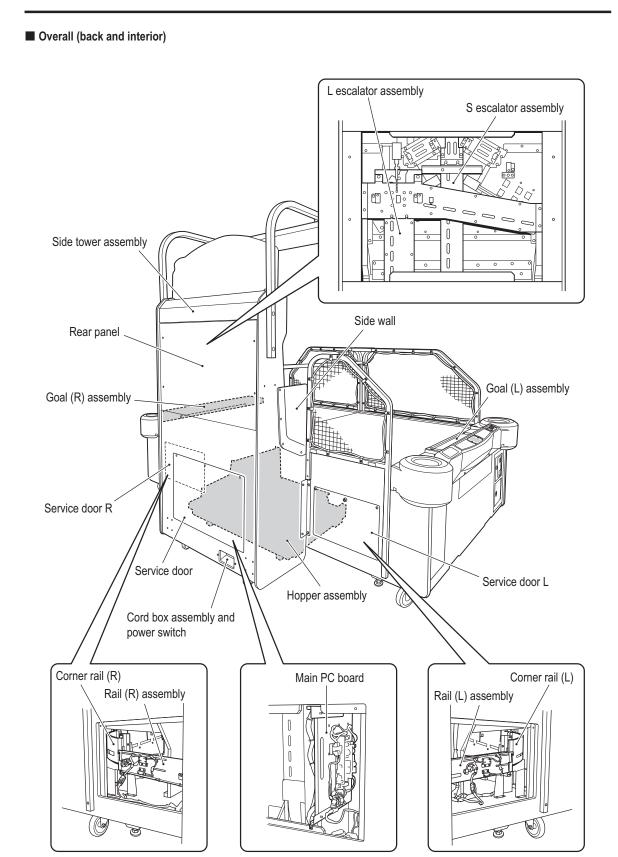

5. Installation

!WARNING

- Install the machine according to the instructions in this Operation Manual. Failure to follow these
 instructions may result in a fire, electric shock, injury or malfunction. (See "8A Installation and
 Assembly" on page 74.)
- Install the machine securely by using the level adjusters. Unstable machine installation may result in an accident or injury. (See "8A-2-2 Level Adjuster Adjustment" on page 90.)
- Fully insert the power cord plug into the outlet. Poor contact may generate heat and result in a fire or burns.
- Be sure to install the ground wire. Failure to install the ground wire may result in electric shock in the event of electrical leakage. (See "8A-3 Connecting the Power Cord and Ground" on page 106.)

5-1 Installation Conditions

5-1-1 Installation Locations to Avoid



- The machine is designed for indoor use. Do not install the machine outdoors. Also, never install the machine in the following locations.
 - · A location exposed to direct sunlight
 - · A location exposed to rain or water leaks
 - A damp location
 - A dusty location
 - · A location close to heaters
 - A hot location
 - · An extremely cold location
 - · A location exposed to condensation caused by temperature differences
 - · A location that obstructs an emergency exit or fire extinguishing equipment
 - · An unstable location or a location exposed to vibration

9

12

ପ Installation Conditions

Test Mode

Troubleshooting


5-1-2 Play Zone for the Installed Machine



• Create a play zone around the machine so that players do not bump into bystanders or passersby.



- Leave a space of 100 cm or more between the machine and the wall or other machines so that parts can be removed when performing service work.
- A ceiling height of 2 m 10 cm or more is required.

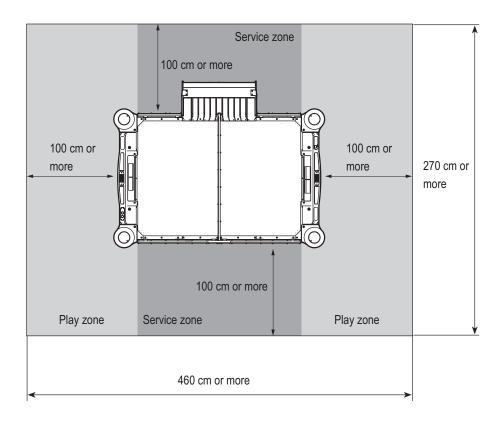

5-2 Required Dimensions for the Delivery Route (Such as Doors and Corridors)

Entranceways and the delivery route must be larger than the dimensions noted below.

■Table

```
Width (W) 2,570 x Depth (D) 1,690 x Height (H) 1,350 [mm] Weight 280 kg
```

In addition, the table can be disassembled as follows. (Condition when shipped from the factory)

Table top assembly

Width (W) 2,080 x Depth (D) 1,490 x Height (H) 120 [mm]

Weight 95 kg

• Cabinet (L) assembly (without net L and S)

Width (W) 1,530 x Depth (D) 1,240 x Height (H) 840 [mm]

Weight 85 kg

• Cabinet (R) assembly (without net L and S)

Width (W) 1,530 x Depth (D) 1,240 x Height (H) 840 [mm]

Weight 75 kg

Side tower assembly

```
Width (W) 960 x Depth (D) 1,030 x Height (H) 2,050 [mm] Weight 115 kg
```

The side tower assembly can be further disassembled as follows. (Condition when shipped from the factory)

Side tower cabinet

Width (W) 920 x Depth (D) 620 x Height (H) 1,700 [mm]

Weight 90 kg

Hopper assembly

Width (W) 880 x Depth (D) 520 x Height (H) 530 [mm]

Weight 25 kg

Moving and transporting 6.

!WARNING

Do not leave the machine on a slope. It may fall over or result in an accident.

Moving (On the Same Floor) 6-1




- Move the machine carefully to avoid damaging it.
- The plastic parts are weak. Do not exert strong force on these areas.
- When moving the machine, be sure to raise the level adjusters to their highest level.
- Be sure to turn off the power switch before starting work.
- Handle the power cord carefully.

6-2 Transporting


6-2-1 Transporting Manually (Such as Carrying on Stairs)

WARNING


- Before transporting the machine manually, be sure to disassemble it into the table and side tower assembly, and disassemble the hopper assembly from the side tower assembly for easier carrying.
 Overburdening yourself by attempting to transport the fully assembled machine may result in an accident or injury.
- Disassemble the table in accordance with the delivery route. (See "5-2 Required Dimensions for the Delivery Route (Such as Doors and Corridors)" on page 26.)
- When transporting the machine manually, be sure to use the following number of people.
 Overburdening yourself may result in an accident or injury.
 - Table (280 kg): 12 people or more

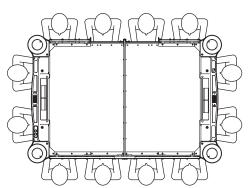

 Side tower cabinet (excluding the hopper assembly: 90 kg): 4 people or more

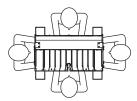

· Hopper assembly (25 kg): 2 people or more

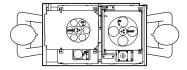


WARNING


• When transporting the machine manually, be sure to use the following number of people. Overburdening yourself may result in an accident or injury.

[When the table is disassembled]


• Table top assembly (95 kg): 4 people or more • Cabinet (L) assembly (85 kg): 4 people or

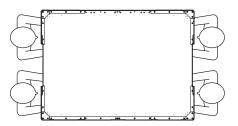

- Goal (L) assembly (17 kg): 2 people or more
- Goal (R) assembly (17 kg): 2 people or more

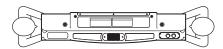


- Cabinet (L) assembly (85 kg): 4 people or more
- Cabinet (R) assembly (75 kg): 4 people or more

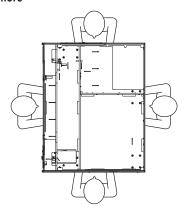

NOTICE

Do not subject the machine to impact while lowering it.

6-2-2 Loading and Unloading to and from a Vehicle

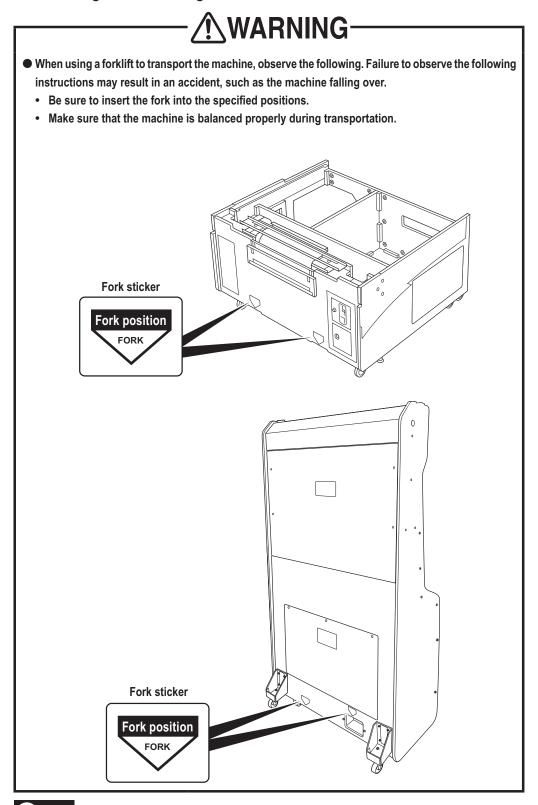

NOTICE

Do not subject the machine to impact while lowering it.


Transporting on a Vehicle 6-2-3

MARNING

 When transporting the machine on a vehicle, secure the machine firmly so that it does not move during vehicle transport. Failure to secure the machine may result in an accident.

NOTICE

- Do not subject the machine to impact while lowering it.
- Remove any pucks from inside the side tower cabinet when transporting the
- When securing the machine with a rope, observe the following.
 - · Be sure to secure the machine with the rope or belt in the position shown in the figure below.
 - · Place blankets or other shock absorbing material between the machine and the rope or belt to protect the machine surfaces.
- Place Styrofoam or other shock absorbing material between the machine and the truck bed and any other equipment or items to protect the machine surfaces.
- When transporting the machine in rainy weather, use a vehicle with a cargo cover, a container truck, or similar vehicle to protect the machine from direct exposure to rain.

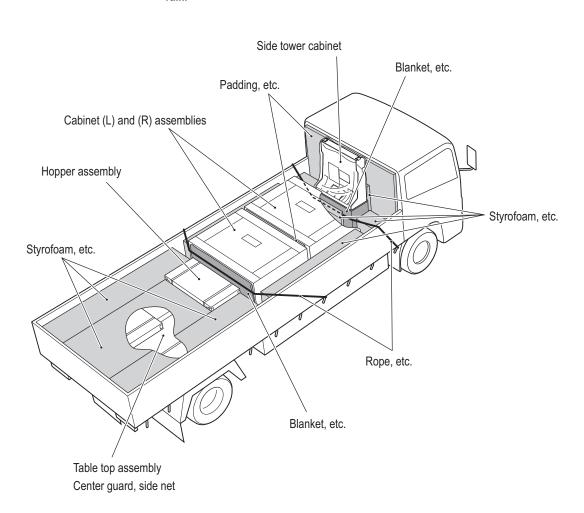

7. Operation

!WARNING

- Should an abnormality occur, turn off the power switch immediately to stop operations. Then, be sure to disconnect the power cord plug from the outlet. Operating the machine while the abnormality persists may result in a fire or accident.
- Dust accumulating on the power cord plug may result in a fire. Inspect the plug regularly and remove any dust.
- Fully insert the power cord plug into the outlet. Poor contact may generate heat and result in a fire or burns.
- Before operating the machine, be sure to check that installation has been performed according to the
 instructions and specified procedures (See "5 Installation" on page 24.) in this Operation Manual.
 Failure to install the machine correctly may result in a fire, electric shock, injury or malfunction.
- The warning labels attached to the machine contain important information for ensuring safety. Be sure to observe the following. (For the warning label locations, see "1-4 Machine Warning Labels" on page 3.)
 - To ensure that the warning labels attached to the machine are always clearly visible, install the
 machine in an appropriate location with ample illumination and keep the labels clean at all times.
 Make sure that the labels are not hidden by other machines or objects.
 - . Do not remove or alter the warning labels.
 - If a warning label becomes excessively dirty or damaged, replace it with a new one.

 To order warning labels, contact your distributor.
- To ensure safe use of the machine, be sure to perform the pre-operation inspection (See "7-4 Pre-operation Inspection" on page 35.) and service (See "8B Service" on page 109.) described in this Operation Manual. Omitting these inspections or service may result in an accident.



- Due to the nature of this product, the mallets and pucks may get stolen. If possible, install and operate the machine in a location where it can be observed by venue staff.
- Mallets and pucks may be left on the playing field after game play has finshed. In these cases, return the mallets to the mallet holders, and place the pucks inside the goals.
- Caution players and bystanders not to place drinks or other items on the playing field. In the event that drinks are spilled onto the machine by accident, wipe away any liquid immediately.

7-1 **People Who Should Avoid Playing**

!\WARNING

- To ensure the safety of players, be careful not to let the following types of people play. Otherwise, this may result in an accident.
 - · People who disregard the warning labels attached to the machine

7-2 **Safety Precautions for Playing**

?∖WARNING

- If you discover anyone behaving as follows, be sure to caution them. Otherwise, this may result in an accident.
 - · A person other than the player in the play zone
- Make sure that players do not perform the following actions, as this may cause pucks to fly out of the machine and strike people or otherwise result in injury or an accident.
 - · Striking pucks with more power than is necessary
 - · Striking pucks while off-balance, leaning in or an otherwise unstable body posture
 - Using items other than the supplied mallets and pucks




- Make sure that players do not perform the following actions, as this may result in injury or an accident.
 - · Holding mallets by the circumference.
 - Placing hands not holding a mallet in the playing field.
 - · Placing hands inside the goal holes.
- Accessories such as necklaces and bracelets, neckties, wristwatches, small items in breast pockets and other loose items may fall and enter the goals as a result of vigorous movements during game play. Instruct players to remove these items before playing in order to prevent damage or an accident. Otherwise, this may result in an accident.

7-3 Important Parts for Ensuring Player and Bystander Safety

WARNING

• This machine includes important parts used to ensure the safety of players and bystanders. Operating the machine while these "important parts for ensuring player and bystander safety" are broken, damaged or deteriorated, or with defective installation may result in an injury to the players or bystanders. If you discover an abnormality, replace the affected part immediately. To order parts, contact your distributor.

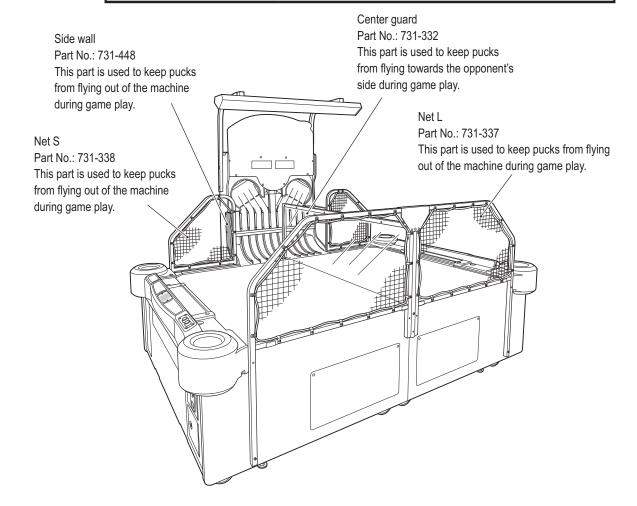

7-4 Pre-operation Inspection

Check the items below before starting machine operations. If there is an abnormality, resolve it by referring to "8B-3 Troubleshooting" on page 130.

7-4-1 Safety Inspection Items (Before Power On)

- Before operating the machine, check the following locations. This is required to prevent accidents
 or injury.
 - (1) Are all warning labels in place? (See "1-4 Machine Warning Labels" on page 3.)
 - (2) Are all warning labels legible? (See "1-4 Machine Warning Labels" on page 3.)
 - (3) Are all level adjusters adjusted properly? (See "8A-2-2 Level Adjuster Adjustment" on page 90.)
 - (4) Is the specified play zone provided? (See "5-1-2 Play Zone for the Installed Machine" on page 25.)
 - (5) Is the power cord laid out safely so that it will not cause players or other customers to trip over it?
 - (6) Is the power cord securely connected to the outlet and the power supply input of the machine? (See "8A-3 Connecting the Power Cord and Ground" on page 106.)
 - (7) Is the power cord plug free from dust?
 - (8) Are the mallets damaged?
 - (9) Are the mallet grips loose?
 - (10) Are the net S, net L, center guard or side guards damaged? (See "7-3 Important Parts for Ensuring Player and Bystander Safety" on page 34.)
 - (11) Are the goal covers or corner covers damaged?
 - (12) Are the guide L or guide R damaged?

Inspect the following items after turning on the power switch. If you discover an abnormality, turn off the power switch immediately to stop operations. Then, disconnect the power cord plug from the outlet and contact your distributor.

- (13) Is any part of the power cord or plug abnormally hot?
- (14) Does touching the machine give a tingling electric shock?
- (15) Is there a burning smell, abnormal noise or vibration?
- (16) Is there any other abnormality or malfunction?

7-4-2 Function Inspection Items (After Power On)

(1) Check the lights. (Do the score LED, time LED, circle LED and game select illuminated buttons light up?)

(See "7-8-2 Score LED, Time LED, Circle LED and Game Select Illuminated Button Test" on page 42.)

Check the switch inputs.

(See "7-8-3 Switch Input Test" on page 43.)

(3) Check the blower fan.

(See "7-8-4 Blower Fan ON/OFF Test and Sensor Check" on page 45.)

(4) Check each solenoid.

(See "7-8-5 Solenoid ON/OFF Test and Sensor Check" on page 46.)

(5) Check the L hopper motor operation.

(See "7-8-6 L Hopper Motor ON/OFF Test and Sensor Check" on page 47.)

(6) Check the S hopper motor operation.

(See "7-8-7 S Hopper Motor ON/OFF Test and Sensor Check" on page 48.)

(7) Check the audio. (Is sound produced by each speaker?)

(See "7-8-8 Sound Test" on page 49.)


(8) Check the mini pucks. (Are there ten mini pucks in each of the mini puck stock areas on the right and left?)

(See "7-8-7 S Hopper Motor ON/OFF Test and Sensor Check" on page 48.)

7-5 **Opening and Closing Doors**

7-5-1 **Opening and Closing the Selector Door**


Use the supplied service key to open the selector door.

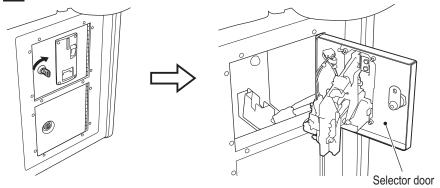

To close the door, perform the procedure in reverse.

7-5-2 **Opening and Closing the Coin Box Door**

Use the supplied cash box key to open the coin box door.

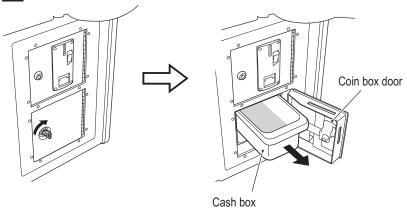


To close the door, perform the procedure in reverse.

7-5-3 Opening and Closing the Goal (L) and (R) Assemblies

The description below explains how to open and close the (L) side. Follow the same procedure to open and close the (R) side.


- Use the supplied service key to unlock the lock (①) on the left side of the goal (L) assembly, and then remove the service key from the lock.
- Insert the removed service key into the lock (②) on the right side of the goal (L) assembly, unlock the lock, and then open the goal (L) assembly.

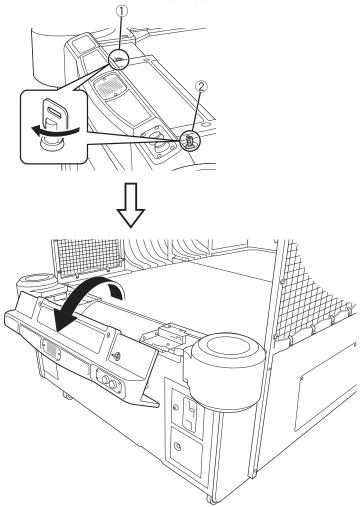

To close the door, perform the procedure in reverse.

Explanation of the Power Switch and Adjustment 7-6 **Switches**

Turning the Power Switch On 7-6-1

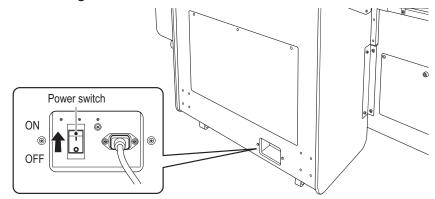




- After finishing the installation work, turn on the power switch.
- When turning the power switch on and off, wait 30 seconds or more between operations. Do not turn the power switch on and off needlessly. It may corrupt the contents of the backup memory.

7-6-2 **Adjustment Switches**

The adjustment switches are located inside the selector door.

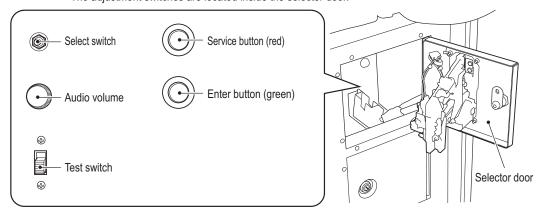

Select switch

In Test mode, flip this switch up or down to select an item or setting (numerical value).

Audio volume

This adjusts the speaker volume.

Turn counter-clockwise to decrease the volume. Turn clockwise to increase the volume.

Test switch

Set this switch to ON to enter Test mode. This is used to test each part of the machine, such as the switch input test, in the Test mode. (See "7-8 Test Mode" on page 41.)

Service button (red)

Press this button to increase the credit count without operating the coin counter.

Enter button (green)

After selecting an item or setting (numerical value) with the Select switch, press this button to enter or execute the selection.

7-7 Playing the Game

This machine is an air hockey game where players use mallets to hit pucks supplied automatically during the set time into the opponent's goal to score points. Two game modes can be selected: "Big Bang Mode" that uses two kinds of pucks (big, mini), and "Normal Hockey Mode" that uses only big pucks.

7-7-1 Big Bang Mode

- (1) The start sound is output, and then a big puck is supplied to the playing field. At the same time, the time LED blinks.
- (2) Players use the mallets to hit the big puck towards the opponent's goal.
- (3) When the big puck enters a goal, 100 points are added to the score LED of the scoring player, and the goal sound (ascending musical scale) is output three times from the speaker on the side where the goal was scored.
- (4) A big puck is supplied to the playing field on the side where the goal was scored.
- (5) 20 mini pucks are supplied to the game all at once at random times during game play and toward the end of game play.
- (6) When a mini puck enters a goal, 30 points are added to the score LED of the scoring player and the goal sound (ascending musical scale) is output one time.
- (7) The countdown sound is output starting from 10 seconds before the game ends. When the end whistle is output, the game ends and subsequent goals are not added to the score.
 - *The number of mini puck supply times varies according to "7-9-4 Big Bang Mode play time", "7-9-6 Mini puck supply frequency more/less setting for Big Bang Mode" and the goal status during game play.

7-7-2 Normal Hockey Mode

- (1) The start sound is output, and then a big puck is supplied to the playing field. At the same time, the time LED blinks.
- (2) Players use the mallets to hit the big puck towards the opponent's goal.
- (3) When the big puck enters a goal, 100 points are added to the score LED of the scoring player, and the goal sound (ascending musical scale) is output three times from the speaker on the side where the goal was scored.
- (4) A big puck is supplied to the playing field on the side where the goal was scored.
- (5) The countdown sound is output starting from 10 seconds before the game ends. When the end whistle is output, the game ends and subsequent goals are not added to the score.

7-7-3 Starting the Game and Game End

- (1) Insert a number of coins equal to the set game cost into the coin slot.
 - When the coins are inserted, the game select illuminated button (red) starts to blink.
- (2) Press the Big Bang Mode button (red) or the Normal Hockey Mode button (green) to select the game. The selected illuminated button lights and the game starts.
 - *If no selection is made, Big Bank Mode is automatically selected after a short while.
- (3) When the set time is exceeded, the game ends.
 - *In Big Bang Mode, the set time may be extended slightly depending on the number of mini puck supply times.

88

8B

7-8 Test Mode

The machine displays the test contents on the signboard that displays the score and timer.

7-8-1 Test Item Selection Mode


- Use the supplied service key to open the selector door and set the Test switch to ON (slide the switch upward) to enter the Test Item Selection Mode. (See "7-6-2 Adjustment Switches" on page 39.)
- 2 Flip the Select switch up and down to select the item.
- 3 Perform the test for each item.
- 4 After finishing all the tests, set the Test switch to OFF.



 Before setting the Test switch to OFF, make sure that there are ten mini pucks in each of the mini puck stock areas on the right and left.

each of the mini puck stock areas on the right and left.			
Item order	Item name (Display in Test Item Selection Mode)	ltem	Reference page
1	8.8.8.	Score LED, Time LED, Circle LED and Game Select Illuminated Button Test	Page 42
2	8.8.8.8	Switch Input Test	Page 43
3	8.8.8.8	Blower Fan ON/OFF Test and Sensor Check	Page 45
4	8.8.8.	Solenoid ON/OFF Test and Sensor Check	Page 46
5	<i>B.B.B.B.</i>	L Hopper Motor ON/OFF Test and Sensor Check	Page 47
6	<i>5.8.8.8.</i>	S Hopper Motor ON/OFF Test and Sensor Check	Page 48
7	8.8.8.8	Sound Test	Page 49
8	8.8.8.5	Ticket Dispenser Test * This is displayed only when the ticket dispenser usesetting is "on". (See "7-8-9 Ticket Dispenser Test" on page 50.)	Page 50

7-8-2 Score LED, Time LED, Circle LED and Game Select Illuminated Button Test

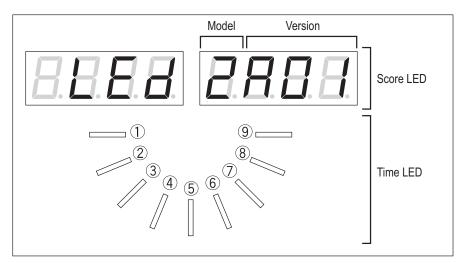

Test item selection display (Score LED, time LED, circle LED and game select illuminated button test)


In this Test Item Selection Mode, "LEd" is displayed in the left side score LED. The "model (1-digit number)" and "version (one alphabet character + 2-digit number)" are displayed in the right side score LED.

The model is indicated by a number, and has the following meaning.

Model No.	2
Model contents	Foreign

- 2 Press the Enter switch (green) to start the test as follows.
 - (1) Numbers are displayed in the score LED, switching repeatedly in order of 0, 1, 2, 3, 4, 5, 6, 7, 8 and 9.
 - (2) The time LED switches repeatedly in the order of all off, (9) only lighted, (9) and (8) only lighted, ..., all lighted.
 - (3) The circle LED (illuminator assembly) switches repeatedly in the order of lighted red, green, blue, light blue, purple, yellow, white, and off.
 - (4) The game select illuminated buttons (red) (green) alternately light and turn off repeatedly.
- Press the Enter switch (green) again to return to the Test Item Selection Mode.

7-8-3 **Switch Input Test**

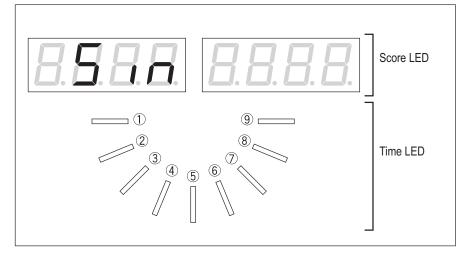


Test item selection display (Switch input test)

In this Test Item Selection Mode, "Sin" is displayed in the left side score LED.

43

Troubleshooting

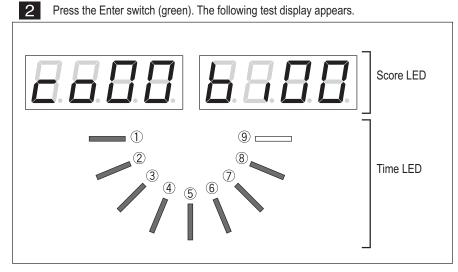


Switch input test display

- The coin switch counter value (two digits) is displayed in the left side score LED. The right side displays the bill counter input count (two digits).
 - (1) The value counts up each time there is switch input.
 - (2) The value returns to 00 after 99.
- The time LED displays the switch input states as follows.
 (ON: Lighted, OFF: Off)

LED No.	Switch name
1	Service button (red)
2	Enter button (green)
3	Selector switch UP
4	Selector switch DOWN
5	Game select illuminated button (red)
6	Game select illuminated button (green)
7	COIN
8	Bill counter input signal
9	Not used

Press both the Service switch (red) and the Enter switch (green) at the same time to return to the Test Item Selection Mode.

7-8-4 Blower Fan ON/OFF Test and Sensor Check

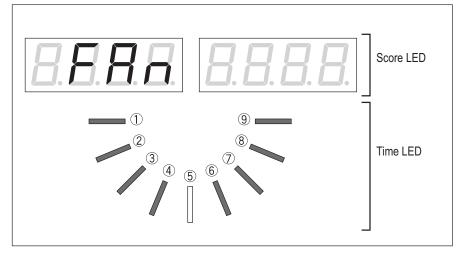


Test item selection display (Blower fan ON/OFF test)

- In this Test Item Selection Mode, "FAn" is displayed in the left side score LED.
- The time LED displays the sensor states as follows. (ON: Lighted, OFF: Off)

LED No.	Sensor name	Reference page	
1	Rail (L) sensor (lower)	Page 147	
2	Rail (L) sensor (middle)	D 445	
3	Rail (L) sensor (upper)	Page 145	
4	Goal (L) sensor	Page 144	
5			
6	Goal (R) sensor	Page 144	
7	Rail (R) sensor (upper)	D 445	
8	Rail (R) sensor (middle)	Page 145	
9	Rail (R) sensor (lower)	Page 147	

3 Press the game select illuminated button (red) to control the blower fan ON and OFF. (ON: Lighted, OFF: Off)

7-8-5 Solenoid ON/OFF Test and Sensor Check

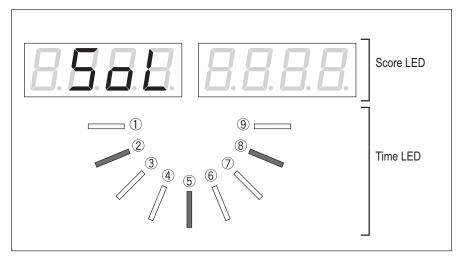

Test item selection display (Solenoid ON/OFF test)

- 1 In this Test Item Selection Mode, "SoL" is displayed in the left side score LED.
- The time LED displays the sensor states as follows. (ON: Lighted, OFF: Off)


LED No.	Sensor name	Reference page
1	Stock sensor (L)	Page 166
2	Stopper sensor (L)	Page 165
3		
4		
5	L divider sensor	Page 170
6		
7		
8	Stopper sensor (R)	Page 165
9	Stock sensor (R)	Page 166

- Press the game select illuminated button (red) to control the L divider solenoid ON and OFF, and press the game select illuminated button (green) to control the S stopper solenoids (L) and (R) ON and OFF. (ON: Lighted, OFF: Off)
 - * Each solenoid automatically turns off 3 seconds after it is turned on.



 Before setting the Test switch to OFF, make sure that there are ten mini pucks in each of the mini puck stock areas on the right and left.

7-8-6 L Hopper Motor ON/OFF Test and Sensor Check

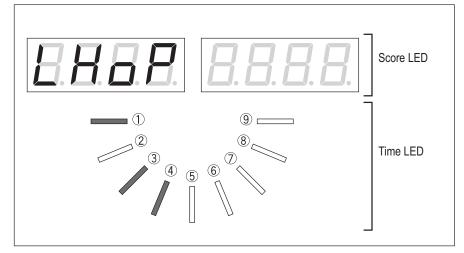

Test item selection display (L hopper motor ON/OFF test)

- In this Test Item Selection Mode, "LHoP" is displayed in the left side score LED.
- The time LED displays the sensor states as follows. (ON: Lighted, OFF: Off)


LED No.	Sensor name	Reference page	
1	L hopper motor sensor	Page 156	
2			
3	L divider (L) outlet sensor	D 474	
4	L divider (R) outlet sensor	Page 171	
(5)			
6			
7			
8			
9			

Press the game select illuminated button (red) to release a big puck from the L side, and press the game select illuminated button (green) to release a big puck from the R side. The illuminated button lights up while releasing the big puck, and turns off after the big puck is released.



Even when the machine state is normal, the "L Hopper Idling Error (Err14)" may occur when puck supply operation is performed immediately after installation is complete. In this case, perform the test again.

7-8-7 S Hopper Motor ON/OFF Test and Sensor Check

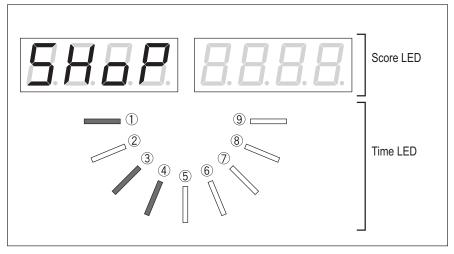

Test item selection display (S hopper motor ON/OFF test)

- In this Test Item Selection Mode, "SHoP" is displayed in the left side score LED.
- The time LED displays the sensor states as follows. (ON: Lighted, OFF: Off)


LED No.	Sensor name	Reference page	
1	S hopper motor sensor	Page 160	
2			
3	S divider (L) outlet sensor	D 400	
4	S divider (R) outlet sensor	Page 168	
5			
6			
7			
8			
9			

Press the game select illuminated button (red) to release and add mini pucks. The illuminated button lights up while releasing and adding pucks, and turns off after the mini pucks have been added.



- Even when the machine state is normal, the "S Hopper Idling Error (Err13)" may occur when puck supply operation is performed immediately after installation is complete. In this case, perform the test again.
- Before setting the Test switch to OFF, make sure that there are ten mini pucks in each of the mini puck stock areas on the right and left.

7-8-8 **Sound Test**

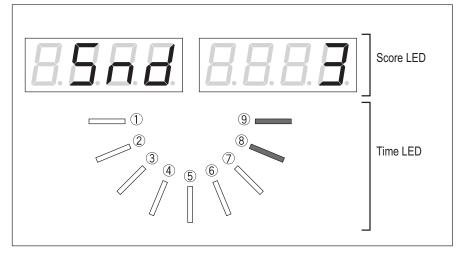


Test item selection display (Sound test)

- In this Test Item Selection Mode, "Snd" is displayed in the left side score LED.
- Press the game select illuminated button (red) to play the speaker test sound from only the L side speaker, only the R side speaker, and both the L and R side speakers, in that order.
- The sound volume (0 to 15) is displayed in the right side score LED.
 - * The sound volume (0 to 15) is displayed as a binary value in the time LED.

7-8-9 Ticket Dispenser Test

* This item is displayed only when the ticket dispenser use setting is "on". (See "7-9-11 Ticket Dispenser Use Setting" on page 63.)

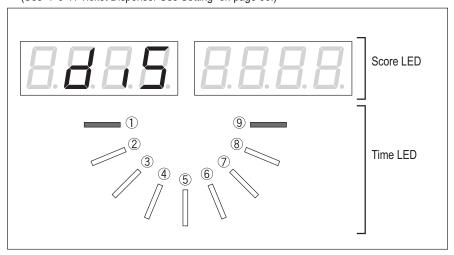

Test item selection display (Ticket dispenser test)

- In this Test Item Selection Mode, "diS" is displayed in the left side score LED.
- The time LED displays the status of the following sensors. (ON: lighted, OFF: off)

LED No.	Sensor name	Reference page
1	Ticket dispenser (L) ticket payout sensor	_
2		
3		
4		
5		
6		
7		
8		
9	Ticket dispenser (R) ticket payout sensor	_

Press the game select illuminated button (red) to pay out one ticket from the L side, and the game select illuminated button (green) to pay out one ticket from the R side. The respective illuminated button lights while the ticket is being paid out, and turns off when payout is finished.


7-9 Setting Mode

The machine displays the setting contents on the signboard that displays the score and timer.

7-9-1 Setting Item Selection Mode

- Use the supplied service key to open the selector door, and set the Test switch to ON (slide the switch upward) while pressing the Enter switch (green) to enter the Setting Mode. (See "7-6-2 Adjustment Switches" on page 39.)
- 2 Flip the Select switch up and down to select the item.
- Press the Enter switch (green) to enter the selected item.
- 4 Flip the Select switch up and down to select the setting value.
- Press the Enter switch (green) to return to the Setting Item Selection Mode.
- After finishing all the settings, set the Test switch to OFF. Changed setting values are saved when the Test switch is set to OFF.
 - *If the power switch is turned off before the Test switch is set to OFF, the setting values will not be reflected.


	Item name		
Item order	(Display in Setting Item Selection Mode)	Item	Reference page
1	8.8.8.8.	Number of coins per game	Page 53
2	8888	Number of plays per game	Page 54
3	8.8.8.	Big Bang Mode play time	Page 55
4	8.8.8.	Normal Hockey Mode play time	Page 56
5	<i>8.8.8.8</i> .	Mini puck supply frequency more/less setting for Big Bang Mode	Page 57
6	8.8.8.	3-puck setting for Normal Hockey Mode	Page 58
7	8588	Attract BGM ON/OFF	Page 59
8	<i>8.8.8.</i>	Mini puck low warning ON/OFF	Page 60
9	8.8.8.	Error log	Page 61
10	8.8.8	Ticket dispenser use setting	Page 63
11	8888	Number of tickets paid to winner * This is displayed only when the ticket dispenser use setting is "on". (See "7-9-12 Number of Tickets Paid to Winner" on page 64.)	Page 64
12	8.8.8.	Number of tickets paid to loser * This is displayed only when the ticket dispenser use setting is "on". (See "7-9-13 Number of Tickets Paid to Loser" on page 65.)	Page 65
13	8.8.8.	Number of tickets paid in case of a tie * This is displayed only when the ticket dispenser use setting is "on". (See "7-9-14 Number of Tickets Paid in case of a Tie" on page 66.)	Page 66
14	8.888	Game mode setting	Page 67
15	8.8.8.8.	Return all settings to default settings (factory settings)	Page 68

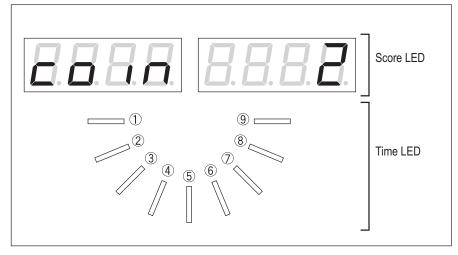

Setting item selection display (Number of coins per game)

- In this Setting Item Selection Mode, "coin" is displayed in the left side score LED and the number of coins is displayed in the right side score LED.
- Press the Enter switch (green). The right side score LED display blinks and the machine enters the Setting Change Mode.
- In the Setting Change Mode, flip the Select switch up and down to change the value.
 - The values that can be set are FrEE, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18 and 19.
 - Flip the Select switch up to increase the value. The value returns to FrEE after 19.
 - Flip the Select switch down to decrease the value. The value returns to 19 after FrEE.
 - Set "FrEE" to set the Free Play Mode.
 - * The default setting (factory setting) is "2".
- Press the Enter switch (green) again to return to the Setting Item Selection Mode.


7-9-3 Number of plays per game

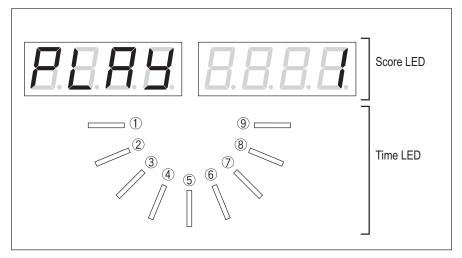

Setting item selection display (Number of plays per game)

- In this Setting Item Selection Mode, "PLAy" is displayed in the left side score LED and the number of plays is displayed in the right side score LED.
- Press the Enter switch (green). The right side score LED display blinks and the machine enters the Setting Change Mode.
- 3 In the Setting Change Mode, flip the Select switch up and down to change the value.
 - The values that can be set are 1, 2, 3, 4, 5, 6, 7, 8 and 9.
 - Flip the Select switch up to increase the value. The value returns to 1 after 9.
 - Flip the Select switch down to decrease the value. The value returns to 9 after 1.
 - * The default setting (factory setting) is "1".
- 4 Press the Enter switch (green) again to return to the Setting Item Selection Mode.


7-9-4 Big Bang Mode play time

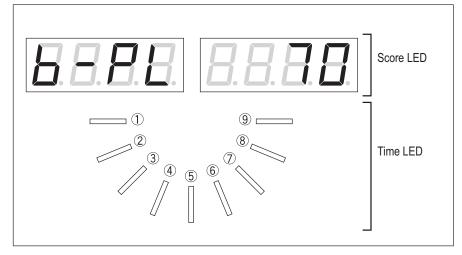

Setting item selection display (Big Bang Mode play time)

- In this Setting Item Selection Mode, "b-PL" is displayed in the left side score LED and the play time (seconds) is displayed in the right side score LED.
- Press the Enter switch (green). The right side score LED display blinks and the machine enters the Setting Change Mode.
- In the Setting Change Mode, flip the Select switch up and down to change the value.
 - The values that can be set are 60, 70, 80, 90, 100, 110, 120, 130, 140, 150, 160, 170, 180, 210, 240, 270 and 300.
 - Flip the Select switch up to increase the value. The value returns to 60 after 300.
 - Flip the Select switch down to decrease the value. The value returns to 300 after 60.
 - When a longer time is set than the Normal Hockey Mode play time, the Normal Hockey Mode play time is changed to the same time as the Big Bang Mode play time.
 - * The default setting (factory setting) is "70".
- Press the Enter switch (green) again to return to the Setting Item Selection Mode. *In Big Bang Mode, the set time may be extended slightly depending on the goal status.


7-9-5 Normal Hockey Mode play time

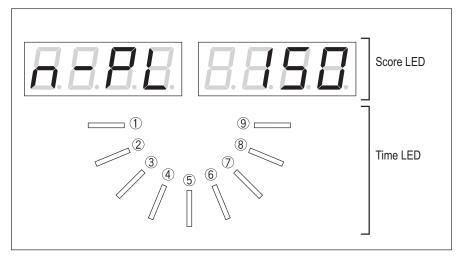

Setting item selection display (Normal Hockey Mode play time)

- In this Setting Item Selection Mode, "n-PL" is displayed in the left side score LED and the play time (seconds) is displayed in the right side score LED.
- Press the Enter switch (green). The right side score LED display blinks and the machine enters the Setting Change Mode.
- 3 In the Setting Change Mode, flip the Select switch up and down to change the value.
 - The values that can be set are 60, 70, 80, 90, 100, 110, 120, 130, 140, 150, 160, 170, 180, 210, 240, 270, 300, 330, 360, 390, 420, 450, 480, 510, 540, 570 and 600.
 However, a time shorter than the Big Bang Mode play time cannot be set.
 - Flip the Select switch up to increase the value. The value returns to the Big Bang Mode play time (minimum time) after 600.
 - Flip the Select switch down to decrease the value. The value returns to 600 after the Big Bang Mode play time (minimum time).
 - * The default setting (factory setting) is "150".
- 4. Press the Enter switch (green) again to return to the Setting Item Selection Mode.


7-9-6 Mini puck supply frequency more/less setting for Big Bang Mode

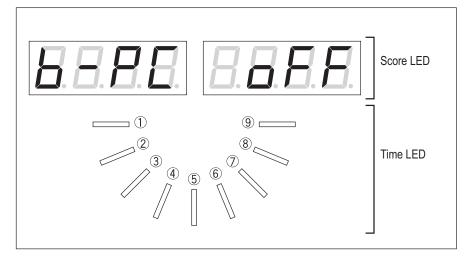

Setting item selection display (Mini puck supply frequency more/less setting for Big Bang Mode)

- In this Setting Item Selection Mode, "b-PC" is displayed in the left side score LED and "oFF" or "on" is displayed in the right side score LED.
- Press the Enter switch (green). The right side score LED display blinks and the machine enters the Setting Change Mode.
- In the Setting Change Mode, flip the Select switch up and down to change the value.
 - The values that can be set are "on" (more) and "oFF" (less).
 - * The default setting (factory setting) is "oFF" (less).
- 4 Press the Enter switch (green) again to return to the Setting Item Selection Mode.


7-9-7 3-puck setting for Normal Hockey Mode

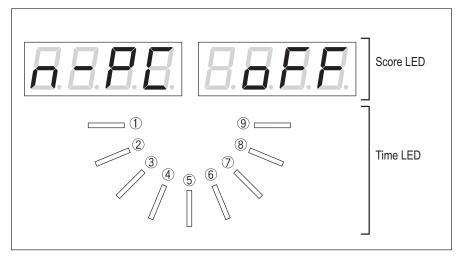

Setting item selection display (3-puck setting for Normal Hockey Mode)

- In this Setting Item Selection Mode, "n-PC" is displayed in the left side score LED and "oFF" or "on" is displayed in the right side score LED.
- Press the Enter switch (green). The right side score LED display blinks and the machine enters the Setting Change Mode.
- 3 In the Setting Change Mode, flip the Select switch up and down to change the value.
 - The values that can be set are "oFF" (1 puck) and "on" (maximum 3 pucks).
 - *The default setting (factory setting) is "oFF" (1 puck).
 - *Even when set to "on", three pucks may not be released depending on the time setting.
- 4 Press the Enter switch (green) again to return to the Setting Item Selection Mode.

7-9-8 **Attract BGM ON/OFF**

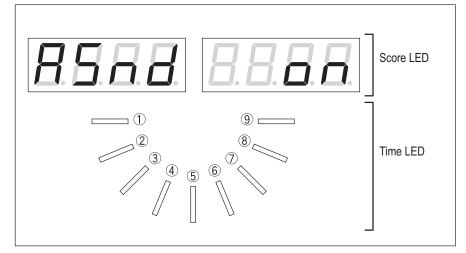


Setting item selection display (Attract BGM ON/OFF)

- In this Setting Item Selection Mode, "ASnd" is displayed in the left side score LED and "on" or "oFF" is displayed in the right side score LED.
- Press the Enter switch (green). The right side score LED display blinks and the machine enters the Setting Change Mode.
- In the Setting Change Mode, flip the Select switch up and down to change the value.
 - The values that can be set are "oFF" (Attract BGM off) and "on" (Attract BGM on).
 - * The default setting (factory setting) is "on" (Attract BGM on).
- Press the Enter switch (green) again to return to the Setting Item Selection Mode.

7-9-9 Mini puck low warning ON/OFF

This function informs when the number of mini pucks has decreased.

* When the number of mini pucks decreases by 50 pucks or more during game operation due to loss or other reasons, the 4-digit score in the left side score LED blinks while the machine is in the standby state to inform that the number of mini pucks has decreased.

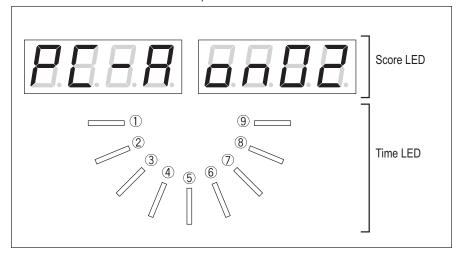

Setting item selection display (Mini puck low warning ON/OFF)

- In this Setting Item Selection Mode, "PC-A" is displayed in the left side score LED and warning "on/oFF" and the mini puck decrease count is displayed in the right side score LED.
- Press the Enter switch (green). The right side score LED display blinks and the machine enters the Setting Change Mode.
- 3 In the Setting Change Mode, flip the Select switch up and down to change the setting.
 - The values that can be set are "oFF" (warning off) and "on" (warning on).
 - When set to "on", the right two digits of the right side score LED display the mini puck decrease count (number of mini pucks supplied to the playing field number of mini pucks that have entered the goals). Values less than 0 are displayed as 0, and values greater than 99 are displayed as 99.
 - To reset the mini puck decrease count to 0, press the Service switch (red) in the Setting Change Mode.
 - The mini puck decrease count is also reset to 0 when the setting value is changed from "on" to "oFF".
 - * The default setting (factory setting) is "on" (warning on).
- 4 Press the Enter switch (green) again to return to the Setting Item Selection Mode.




- Make sure that there are ten mini pucks in each of the right and left sides of the mini puck stock area before resetting the mini puck decrease count. (See "7-8-7 S Hopper Motor ON/OFF Test and Sensor Check" on page 48.)
- Be sure to press the Service switch (red) and reset the mini puck decrease count to 0 when starting up the game for the first time or when adding mini pucks.

10

11 Setting Mode

7-9-10 Error log

(1) Number of Errors Saved in Error Log Display Mode

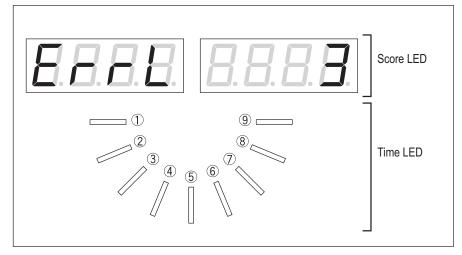


Setting item selection display (Error log)

- In this Setting Item Selection Mode, "ErrL" is displayed in the left side score LED and the number of errors saved in the error log is displayed in the right side score LED.
- Press the Enter switch (green) to enter the Error Log Contents Display Mode that displays the errors saved in the error log.
 - * The default setting (factory setting) is "0".
 - * The machine can save up to ten error log entries.

Troubleshooting


(2) Error Log Contents Display Mode

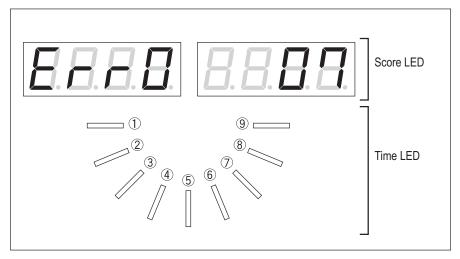

Setting item selection display (Error log contents display mode)

- "Err0" to "Err9" is displayed in the left side score LED, and the corresponding error code saved in the error log is displayed in the right side score LED.
 - An error code of "00" indicates that no error is saved.
 - "Err0" is the newest error, and the errors become progressively older as the value increases.
- 2 Flip the Select switch up and down to change the value.
 - Flip the Select switch up to increase the value. The value returns to Err0 after Err9.
 - Flip the Select switch down to decrease the value. The value returns to Err9 after Err0.
- Press the Service switch (red) in this error log contents display mode to clear the entire error log.
- 4 Press the Enter switch (green) again to return to the Setting Item Selection Mode.

7-9-11 Ticket Dispenser Use Setting

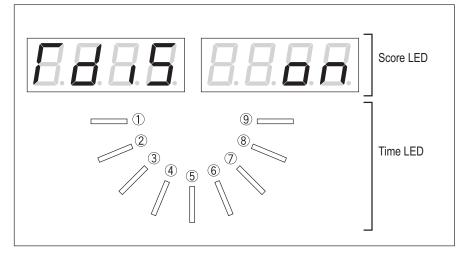


Setting item selection display (Ticket dispenser use setting)

- In this Setting Item Selection Mode, "TdiS" is displayed in the left side score LED, and "on" or "oFF" is displayed in the right side score LED.
- Press the Enter switch (green). The right side score LED display blinks and the machine enters the Setting Change Mode.
- In the Setting Change Mode, flip the Select switch up and down to change the value.
 - The values that can be set are "oFF" (Ticket dispenser not used) and "on" (Ticket dispenser
 - * The default setting (factory setting) is "oFF" (Ticket dispenser not used).
- Press the Enter switch (green) again to return to the Setting Item Selection Mode.

7-9-12 Number of Tickets Paid to Winner

* This item is displayed only when the ticket dispenser use setting is "on". (See "7-9-11 Ticket Dispenser Use Setting" on page 63.)

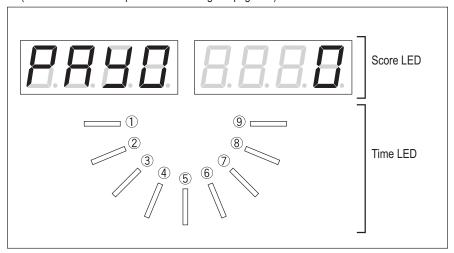


Setting item selection display (Number of tickets paid to winner)

- In this Setting Item Selection Mode, "PAy0" is displayed in the left side score LED, and the number of tickets paid to the winner is displayed in the right side score LED.
- Press the Enter switch (green). The right side score LED display blinks and the machine enters the Setting Change Mode.
- In the Setting Change Mode, flip the Select switch up and down to change the value.
 - The values that can be set are 0, 1, ..., 49 and 50.
 - Flip the Select switch up to increase the value. The value returns to 0 after 50.
 - Flip the Select switch down to decrease the value. The value returns to 50 after 0.
 - When a value less than the number of tickets paid to the loser is set, the number of tickets paid to the loser is changed to the same value as the number of tickets paid to the winner.
 - When a value less than the number of tickets paid in case of a tie is set, the number of tickets paid in case of a tie is changed to the same value as the number of tickets paid to the winner.
 - * The default setting (factory setting) is "0".
- 4 Press the Enter switch (green) again to return to the Setting Item Selection Mode.

7-9-13 Number of Tickets Paid to Loser

* This item is displayed only when the ticket dispenser use setting is "on". (See "7-9-11 Ticket Dispenser Use Setting" on page 63.)

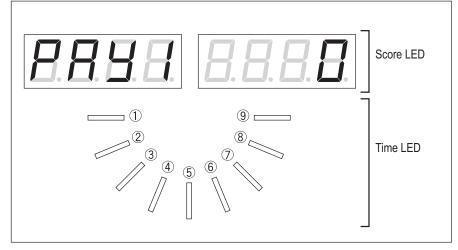


Setting item selection display (Number of tickets paid to loser)

- In this Setting Item Selection Mode, "PAy1" is displayed in the left side score LED, and the number of tickets paid to the loser is displayed in the right side score LED.
- Press the Enter switch (green). The right side score LED display blinks and the machine enters the Setting Change Mode.
- 3 In the Setting Change Mode, flip the Select switch up and down to change the value.
 - The values that can be set are 0, 1, ..., 49 and 50.
 However, a value greater than the number of tickets paid to the winner cannot be set.
 - Flip the Select switch up to increase the value. The value returns to 0 after the number of tickets paid to the winner.
 - Flip the Select switch down to decrease the value. The value returns to the number of tickets paid to the winner after 0.
 - When a value greater than the number of tickets paid in case of a tie is set, the number of tickets paid in case of a tie is changed to the same value as the number of tickets paid to the loser.
 - * The default setting (factory setting) is "0".
- 4 Press the Enter switch (green) again to return to the Setting Item Selection Mode.

7-9-14 Number of Tickets Paid in case of a Tie

* This item is displayed only when the ticket dispenser use setting is "on". (See "7-9-11 Ticket Dispenser Use Setting" on page 63.)

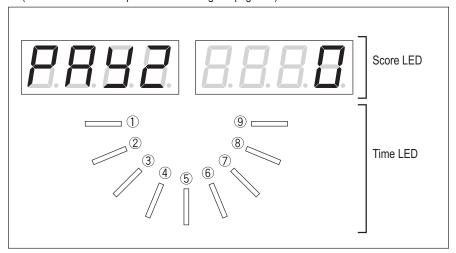


Setting item selection display (Number of tickets paid in case of a tie)

- In this Setting Item Selection Mode, "PAy2" is displayed in the left side score LED, and the number of tickets paid in case of a tie is displayed in the right side score LED.
- Press the Enter switch (green). The right side score LED display blinks and the machine enters the Setting Change Mode.
- In the Setting Change Mode, flip the Select switch up and down to change the value.
 - The values that can be set are 0, 1, ..., 49 and 50.
 However, a value greater than the number of tickets paid to the winner or less than the number of tickets paid to the loser cannot be set.
 - Flip the Select switch up to increase the value. The value returns to the number of tickets paid to the loser after the number of tickets paid to the winner.
 - Flip the Select switch down to decrease the value. The value returns to the number of tickets paid to the winner after the number of tickets paid to the loser.
 - * The default setting (factory setting) is "0".
- 4 Press the Enter switch (green) again to return to the Setting Item Selection Mode.

9


7-9-15 Game mode setting

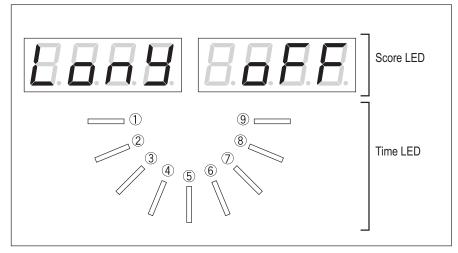

Setting item selection display (Game mode setting)

- In this Setting Item Selection Mode, "Lony" is displayed in the left side score LED and "on" or "oFF" is displayed in the right side score LED.
- Press the Enter switch (green). The right side score LED display blinks and the machine enters the Setting Change Mode.
- In the Setting Change Mode, flip the Select switch up and down to change the value.
 - The values that can be set are "oFF" (Big Bang Mode selection enabled) and "on" (Normal Hockey Mode only).
 - When set to "on" and required coins are inserted, game selection is not performed and the game starts in Normal Hockey Mode (using only big pucks). In addition, the mini puck related error checks are not performed.
 - * The default setting (factory setting) is "oFF" (Big Bang Mode selection enabled).
- Press the Enter switch (green) again to return to the Setting Item Selection Mode.

7-9-16 Return all settings to default settings (factory settings)

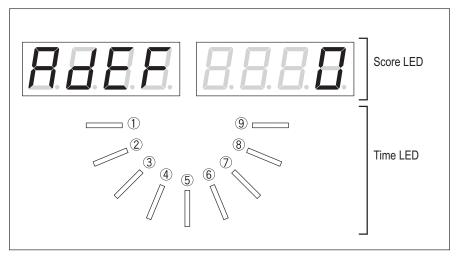

Setting item selection display (Return all settings to default settings (factory settings))

- In this Setting Item Selection Mode, "AdEF" is displayed in the left side score LED and a value indicating whether the settings are the same as the default settings (factory settings) is displayed in the right side score LED.
 - The right side score LED displays "0" when the setting values are the default settings (factory settings), or "1" when there are settings other than the default settings (factory settings).
- Press the Enter switch (green). The value in the right side score LED starts to blink.
- If the Service switch (red) is pressed while the value in the right side score LED is blinking, all settings are returned to the default settings (factory settings) and the value changes to "0".
- 4 If the Enter switch (green) is pressed while the value in the right side score LED is blinking, the value stops blinking and the machine returns to the Setting Item Selection Mode.
 - * The error log and the mini puck decrease count are also cleared.

8B

9

10


7-10 Mini Puck Low Warning and Adding Mini Pucks

7-10-1 Mini Puck Low Warning

When the mini puck low warning ON/OFF setting mode is set to ON and the number of mini pucks decreases by 50 or more, the 4-digit score in the left side score LED (signboard) blinks while the machine is in the standby state.



When this blinking is confirmed, add mini pucks.

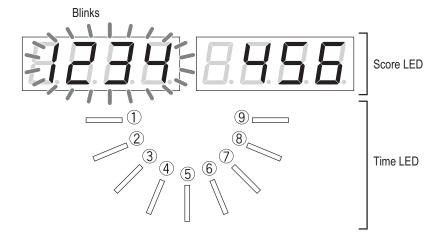

7-10-2 Adding Mini Pucks

When the mini puck low warning is displayed or the number of mini pucks is otherwise confirmed to have decreased, follow the procedure below to add mini pucks.

- Block the goals so that mini pucks cannot enter.
- Use Test mode and release all of the mini pucks to the playing field. (See "7-8-7 S Hopper Motor ON/OFF Test and Sensor Check" on page 48.)
- 3 Count the number of mini pucks, and add mini pucks so that there is a total of 120 pucks.
- 4 Unblock the goal (L) so that the mini pucks can enter.
- Put the mini pucks into the goal (L).




- Put the mini pucks into the goal (L) one to three pucks at a time. If many pucks are
 put into the goal at once, the pucks may become jammed inside the machine and
 prevent normal operation.
- Be sure to put the mini pucks into the goal (L).
- Reset the decrease count of the mini puck low warning to "0". (See "7-9-9 Mini puck low warning ON/OFF" on page 60.)

7-11 Daily Cleaning

7-11-1 Cleaning the Playing Field




- Be careful not to scratch the playing field when cleaning.
- Do not use thinner, benzene, gasoline, alcohol or other organic solvents. This may degrade the materials.
- Do not use wax or other substances that may block the air holes. The pucks will not slide well.
- If the air holes in the playing field become blocked by dust or dirt, the pucks will not slide well. Periodically clean the air holes in the playing field.
- Wipe away any dirt using a soft cloth moistened with water or a neutral cleanser diluted with water and then firmly wrung out.

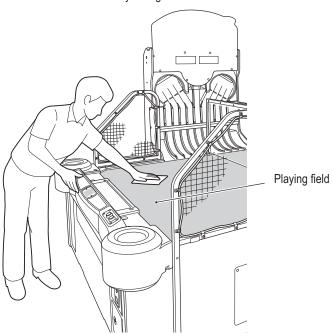

- Wipe dry so that no detergent or water remains, and then allow to dry thoroughly.
- When the air holes are clogged with dust or dirt, insert a paper clip or other pin-like object into the air holes and remove the dirt.



 Check the air holes by sliding a puck over the playing field in the condition with the blower fan rotating. If the puck does not slide well, remove any dust and dirt from the air holes.

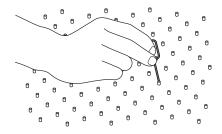


11

7-11-2 Cleaning the Goal Covers and Corner Covers



- Do not use thinner, benzene, gasoline, alcohol or other organic solvents. This may degrade the materials.
- Wipe away any dirt using a soft cloth moistened with water or a neutral cleanser diluted with water and then firmly wrung out.

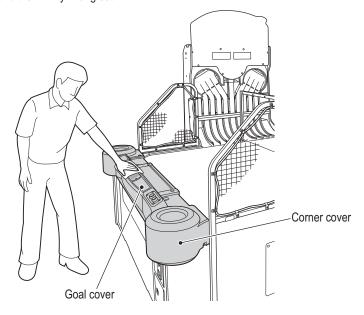


Wipe dry so that no detergent or water remains, and then allow to dry thoroughly.

7-11-3 Cleaning the Pucks and Mallets



- Do not use thinner, benzene, gasoline, alcohol or other organic solvents. This may degrade the materials.
- Wipe away any dirt using a soft cloth moistened with water or a neutral cleanser diluted with water and then firmly wrung out.

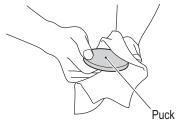




Wipe dry so that no detergent or water remains, and then allow to dry thoroughly.

Troubleshooting

7-11-4 Cleaning the Signboard and Cover Panel



- Do not use thinner, benzene, gasoline, alcohol or other organic solvents. This may degrade the materials.
- 1 Wipe away any dirt using a soft cloth moistened with water or a neutral cleanser diluted with water and then firmly wrung out.

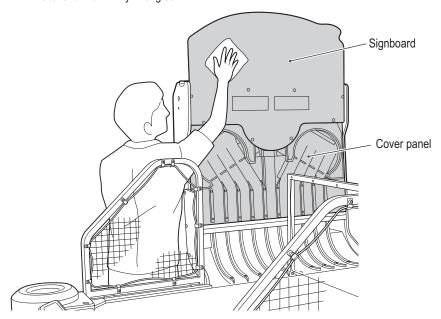

Wipe dry so that no detergent or water remains, and then allow to dry thoroughly.


9 10

11

7-11-5 Cleaning the Sloped Areas



- Do not use thinner, benzene, gasoline, alcohol or other organic solvents. This may degrade the materials.
- Wipe away any dirt using a soft cloth moistened with water or a neutral cleanser diluted with water and then firmly wrung out.

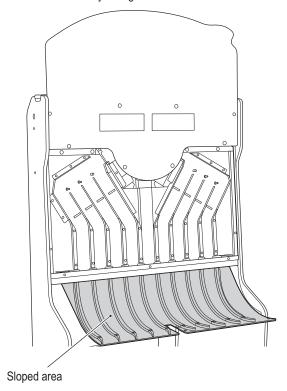

Wipe dry so that no detergent or water remains, and then allow to dry thoroughly.

Troubleshooting

8A. Installation and Assembly

8A-1 Number of Workers, Work Time and Work Space

8A-1-1 Number of Workers and Work Time

(1) Number of Workers


The work should be performed by four technicians.

(2) Work Time

The estimated work time for four workers (technicians) is 2 hours.

8A-1-2 Securing Work Space

Secure the following space around the cabinet for performing the installation work.

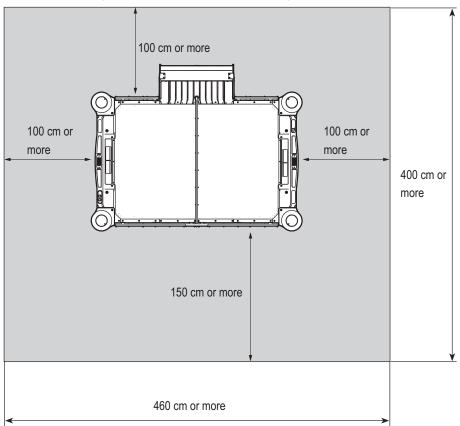

9 10

11

Number of Workers, Work Time and Work Space/ Assembly


8A-2 **Assembly**

8A-2-1 Assembling the Table


(1) Assembling the Table, Goals and Corner Covers

Join the cabinet (L) and (R) assemblies with 12 Phillips hexagon socket head bolts (with flat and spring washers) (M8 x 35) and 12 square washers (M8), and connect the three connectors.


Phillips hexagon socket head bolt (with flat and spring washers) (M8 x 35)

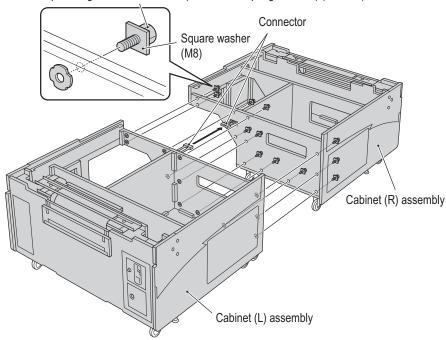


Open the coating clip, and release the bundled harness.

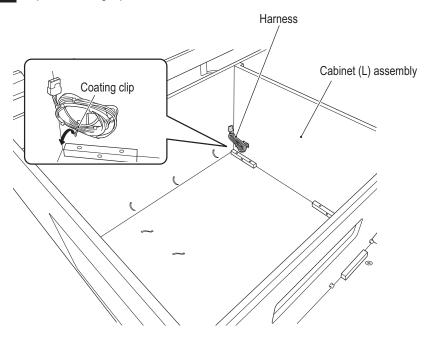


3 Attach the harness released in step 2 with the six coating clips as shown in the figure.

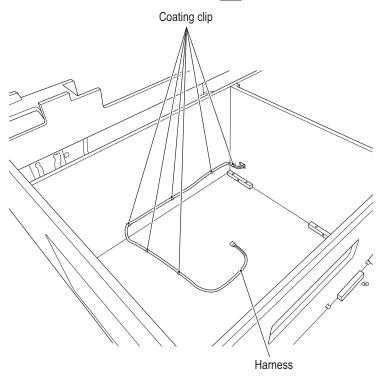


- Open the goal (L) assembly. (See "7-5-3 Opening and Closing the Goal (L) and (R) Assemblies" on page 38.)
- 5 Lead out the two connectors through the holes, and secure them with the coating clips.

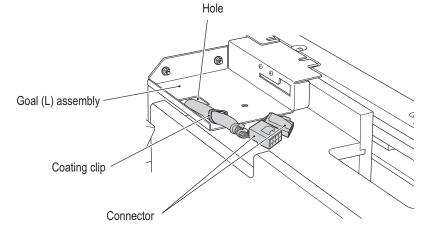

6 Remove the two flange socket bolts (M5 x 16).

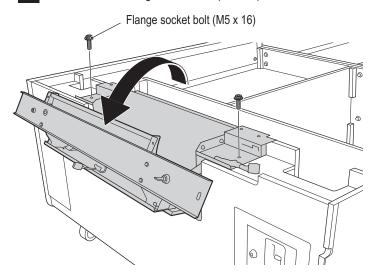


- Close the goal (L) assembly. (See "7-5-3 Opening and Closing the Goal (L) and (R) Assemblies" on page 38.)
- Lift the goal (L) assembly straight up with two people, and remove it.

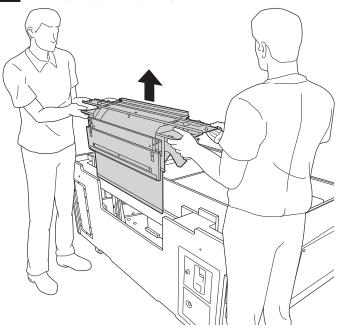


Follow the same procedure as steps 4 to 8 to remove the goal (R) assembly.

Attach the blower brackets (L) and (R) to the table top assembly with thee flange socket bolts (M5 x 16) each.

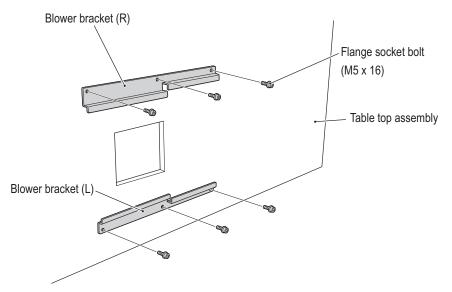




 Do not place the table top assembly on the floor or other location with the surface to which the blower brackets (L) and (R) are attached on the bottom. Doing so may cause the parts to deform.

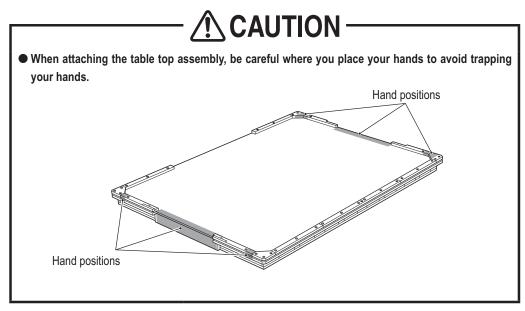

11 Lift up the table top assembly with four people as shown in the figure, and fit it onto the top of the cabinet assembled in step 1



• The table top assembly has an orientation. Assemble so that the area without the table bumper is on the same side as the opening in the cabinet.

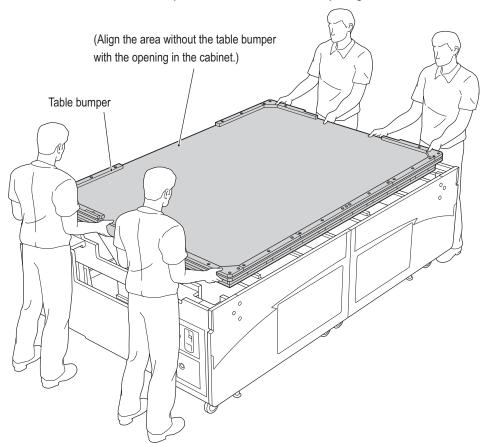


8A 8B


Attach the table top assembly to the cabinet with six button head bolts (M6 x 40) and six spring washers (M6).



It may be difficult to attach the screws if the floor surface is not level. In these
cases, adjust the level adjusters so that the cabinet is level.

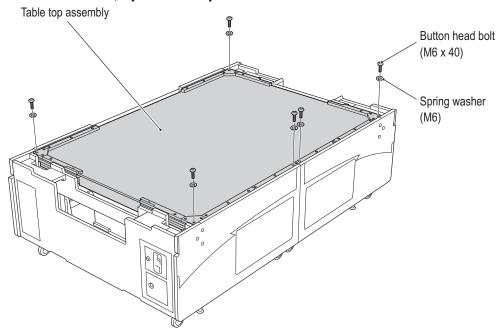

Insert the goal (L) and (R) assemblies removed in steps 8 and 9 into the cabinet from above. At this time, insert the lower edges of the goal (L) and (R) assemblies into the goal set brackets.

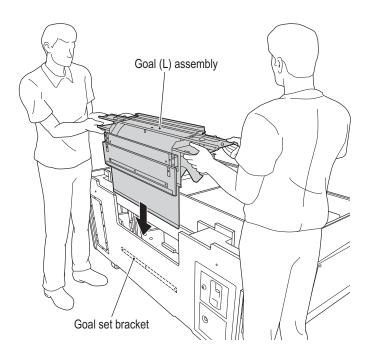

Open the goal (L) assembly. (See "7-5-3 Opening and Closing the Goal (L) and (R) Assemblies" on page 38.)

88

8B 9


10

11 | 12 | Assembly


15 Lead out and connect the two connectors through the holes, and secure them with the coating



 Store the excess harness length below the holes so that there is no slack in the connected connectors and harnesses above the holes.

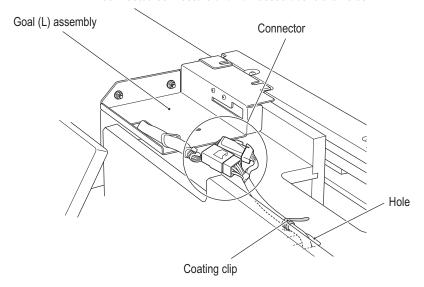

Temporarily secure the goal (L) assembly with the two flange socket bolts (M5 x 16) removed in step 6 and four flange socket bolt (M5 x 10).

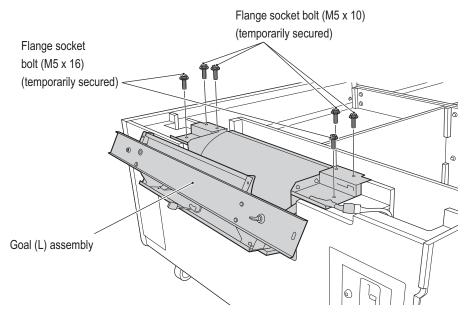




- When installing, be sure to use bolts of the specified length.
- When installing, be careful not to pinch the connectors.

Follow the same procedure as steps 14 to 16 to temporarily secure the goal (R) assembly.


Test Mode

Set the corner covers (red • L, red • R, blue • L and blue • R) on the respective corners of the cabinet, and secure them with two button head bolts (M6 x 40), one button head bolt (M6 x 25) and three flat washers (M6) each.

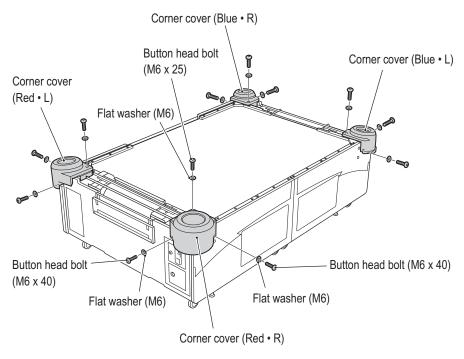



- If the bolts are difficult to tighten, loosen the screws fixing the goal bumper (L) (R) and corner bumper, shift each bumper towards the outside of the table, and then tighten the screws.
- If any of the bumper fixing screws are loose, tighten the screws.
- When installing, be careful not to pinch the harnesses and connectors.

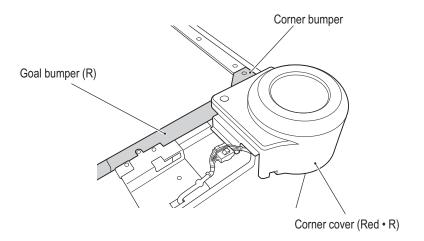

- Tighten the bolts temporarily secured in steps 16 and 17, and secure the goal (L) and (R) assemblies.
- Close the goal (L) assembly. (See "7-5-3 Opening and Closing the Goal (L) and (R) Assemblies" on page 38.)

88

8B

9 10

11 12 Assembly

Goal (L) assembly Attach the goal cover A with two Torx bolts (M5 x 16, silvery white) and two flat washers (M5), and with two Torx bolts (M5 x 20) and two flat washers (M5).




When installing, be sure to use bolts of the specified length.

21 Connect the connector, and place the goal cover A on the goal (L) assembly.

Goal cover A

Connector

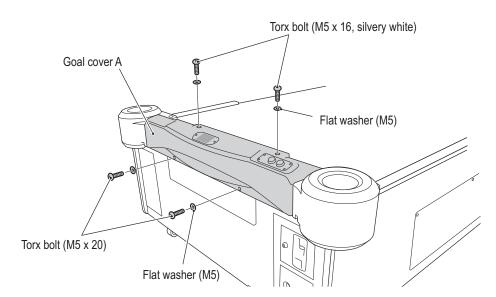


23 Open the goal (L) assembly. (See "7-5-3 Opening and Closing the Goal (L) and (R) Assemblies" on page 38.)

Test Mode

Troubleshooting

24 Secure the goal cover A with two Torx bolts (M5 x 8).

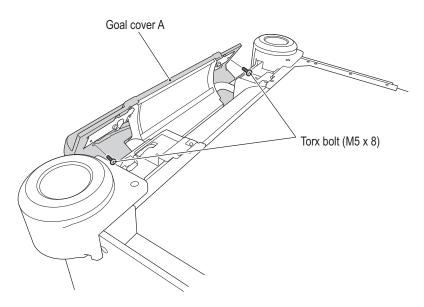


- Follow the same procedure as steps 20 to 24 to install the goal (R) assembly and goal cover B
- Close the goal (L) and (R) assemblies. (See "7-5-3 Opening and Closing the Goal (L) and (R) Assemblies" on page 38.)

[If the goal (L) and (R) assembly locks are stiff, cannot be locked, or are loose, perform the procedure below.]

Remove the goal cover of the goal to be adjusted by reversing the procedure in steps 21 to 26.

28 Loosen the four Phillips pan head screws (with flat and spring washers) (M4 x 10).

Phillips pan head screw (with flat and spring washers) (M4 x 10) (loosen)

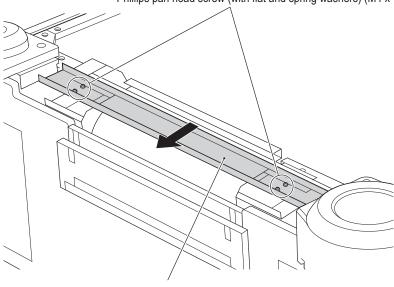

Goal outer beam

29 Shift the goal outer beam toward you until it stops, and then retighten the four Phillips pan head screws (with flat and spring washers) (M4 x 10) secure it.

*If the lock is stiff, shift the goal outer beam toward the back slightly before securing it.

Follow the procedure in steps 20 to 26 to reinstall the goal cover.

8B

9


10

(2) Installing the Nets


Attach the center guard bracket (A) with four button head bolts (M6 x 25) and four flat washers (M6).

NOTICE

• Install the center guard bracket (A) in a level manner so that it is not tilted.

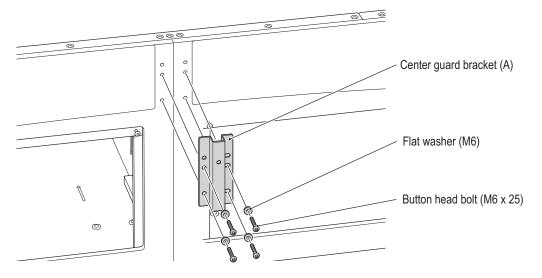


Attach the center guard bracket (B) with four button head bolts (M6 x 25) and four flat washers (M6).

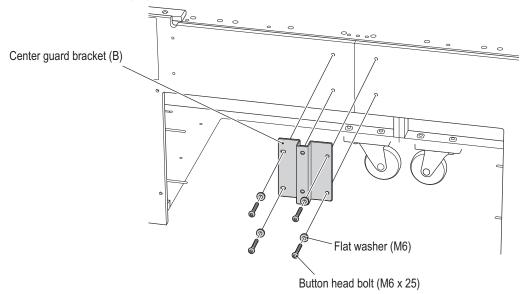


Insert the center guard into the center guard brackets (A) and (B), and then secure it with three button head bolts (M6 x 16) and three flat washers (M6).

*Install the center guard so that the center guard retainer is facing the L side.

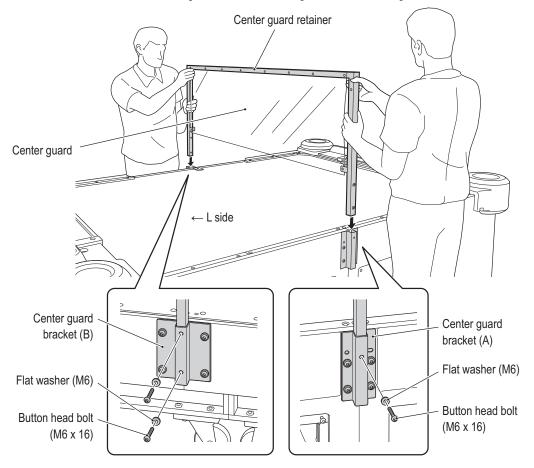

Insert the hooks of the net S frame (L) into the cabinet (L) assembly, and then secure it with four button head bolts (M6 x 50) and four flat washers (ø16 for M6).

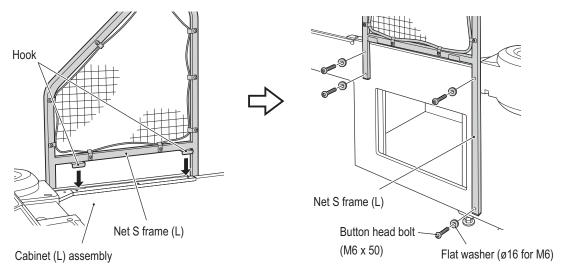

Test Mode

88

8B


9

10

11 Assembly

Troubleshooting

- 5 Follow the same procedure in step 4 to attach the net S frame (R) to the cabinet (R) assembly.
- Insert the hooks of the net L frame (L) into the cabinet (L) assembly, and then secure it with three button head bolts (M6 x 50), three flat washers (ø16 for M6), and one flange socket bolt (M5 x 35).

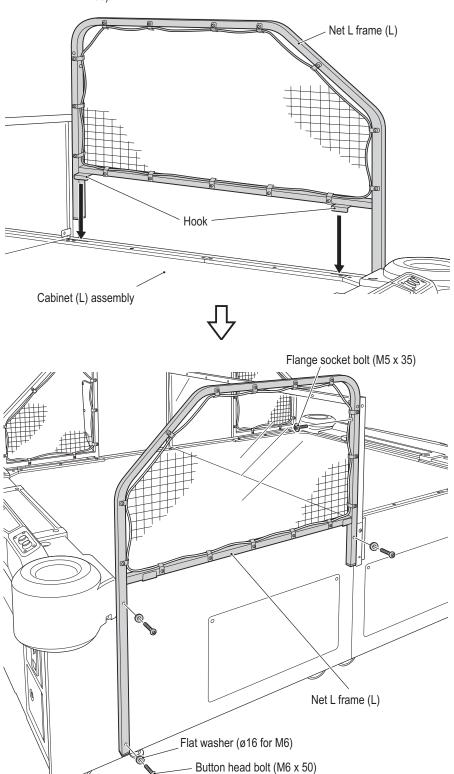

8A

8B 9

10

11 Assembly

Button head bolt (M5 x 16) Flat washer (M5)

7 Follow the same procedure in step 6 to attach the net L frame (R) to the cabinet (R) assembly.

Triangle bracket


Attach the triangle bracket with five button head bolts (M5 x 16) and five flat washers (M5).

Net R frame (L)

(3) Installing the Blower Fan

Net L frame (L)

- Remove the front door. (See "8A-5-1 Opening and Closing the Front Doors" on page 107.)
- Insert the blower mounting plate into the blower brackets (L) and (R) from the goal (L) side, and secure it wth four flange socket bolts (M5 x 30) and four flat washers (ø24 for M5).
- Connect the connector.

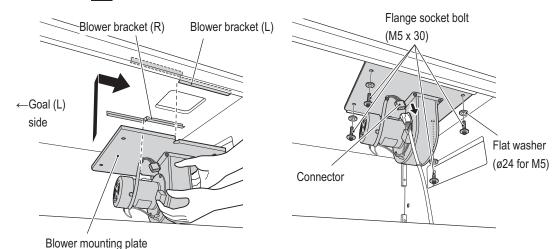

Reattach the front door. (See "8A-5-1 Opening and Closing the Front Doors" on page 107.)

Test Mode

Troubleshooting


8A-2-2 Level Adjuster Adjustment

MARNING

Adjust the level adjusters so that the table casters are at a height of approximately 5 mm from the floor.
 (The casters should be able to turn freely.) If the machine is unstable, it may move during game play.



- Adjust the level adjusters so that the table top surface is level. If the table top surface is tilted excessively, it may be difficult to collect the pucks and the machine may not function properly.
- Install the table in accordance with "5-1 Installation Conditions" on page 24.
- Adjust the level adjusters (four locations) so that the table casters are at a height of approximately 5 mm from the floor.
- 3 Secure the level adjusters with the lock nuts.

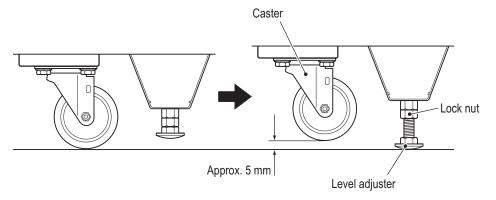

Torx bolt (M5 x 12)

8A

8B

9


10

11

Remove the wing bolt (M4 x 6), slide the S bucket and S hopper cover toward the outside, and remove them.

Signboard

Remove the wing bolt (M4 x 6), slide the L bucket and L hopper cover toward the outside, and remove them.

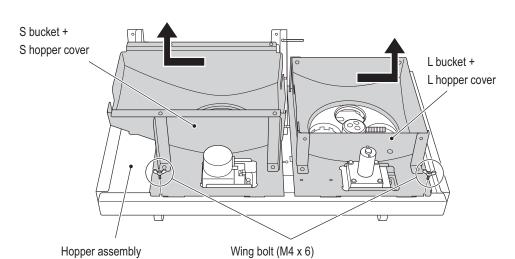


8A-2-3 Assembling the Side Tower Assembly

Attach the signboard with eight Torx bolts (M5 x 12).


MARNING

- Do not move the side tower cabinet in the condition with the caster brackets (F) removed. Doing so
 may cause the side tower cabinet to fall over.
 - Remove the four Phillips hexagon socket head bolts (with flat and spring washers) (M6 x 16), and remove the two caster brackets (F).

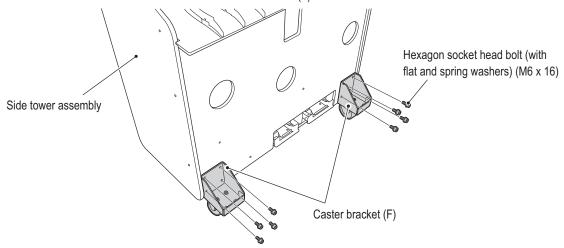




- The removed caster brackets (F) and bolts are required during transport. Be sure to keep them in a safe place.
- 5 Attach the hopper assembly with four flange socket bolts (M6 x 20).

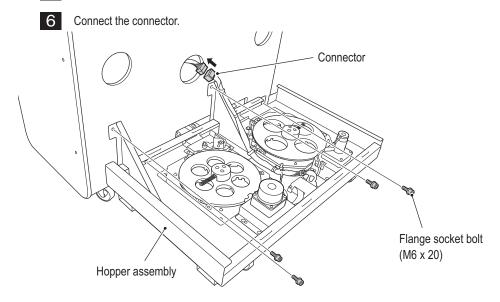


- 7 Reattach the L bucket and L hopper cover by reversing the procedure in step 3.
- 8 Reattach the S bucket and S hopper cover by reversing the procedure in step 2.

9 Attach the hopper wall with four Phillips pan head screws (with flat and spring washers) (M4 x 10).

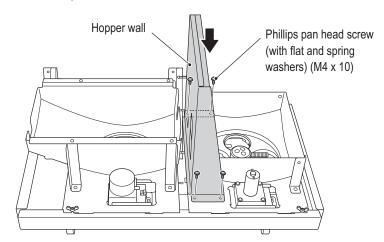

10 Remove the two Phillips pan head screws (with flat and spring washers) (M4 x 10), and remove the hopper wall B. Reverse the direction of the removed hopper wall B, and then reattach it with the removed screws.

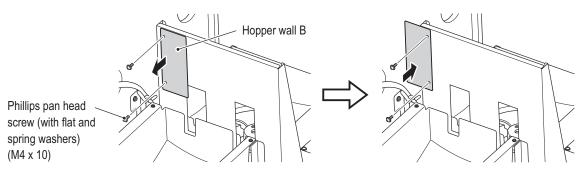

88

8B 9


10

11


8A-2-4 Installing the Light Assembly


MARNING


- The light assembly is installed while standing in a high location. Use a stool or similar platform.
 Working in an unnatural body posture may cause an injury or machine damage.
 - 1 Lead the connector extending from the light arm L through the hole in the side tower assembly and into the machine.
 - 2 Attach the light arm L with two button head bolts (M6 x 50) and two flat washers (ø7 x ø24).

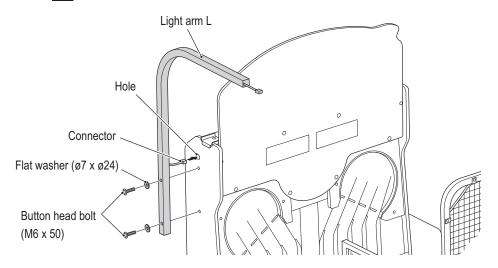


- 3 Follow the same procedure to install the light arm R.
- Insert the light arms L and R into the light frame unit, and attach them with flange socket bolts (M6 x 16).

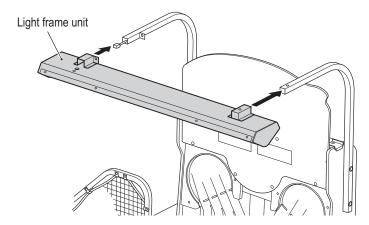

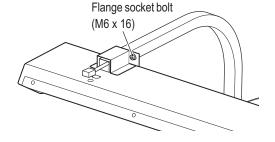


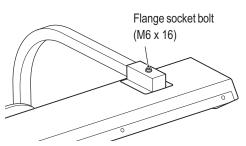

- 5 Connect the connectors.
- Attach the connector cover with a Phillips pan head screw (with flat and spring washers) (M4 x 10).

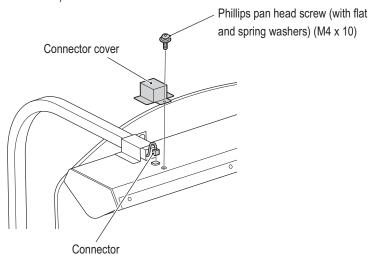

- Remove the rear panel. (See "8A-5-3 Opening and Closing the Rear Panel" on page 108.)
- Connect the connector.

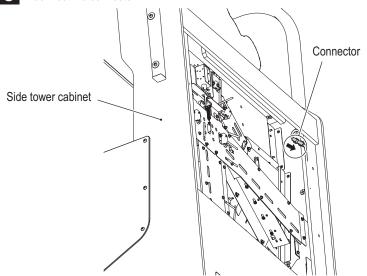

Install the rear panel. (See "8A-5-3 Opening and Closing the Rear Panel" on page 108.)


8A

8B


9 10

8A-2-5 Installing the Side Tower Assembly


Lead out the five connectors from the right and left holes in the front of the side tower cabinet.

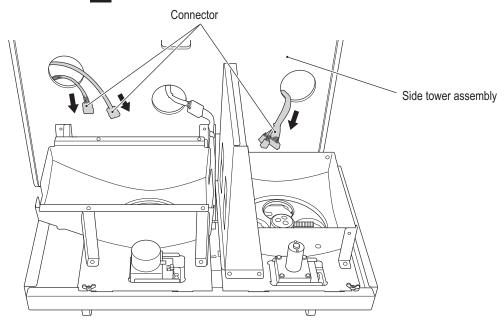


2 Remove the Torx bolt (M5 x 25).

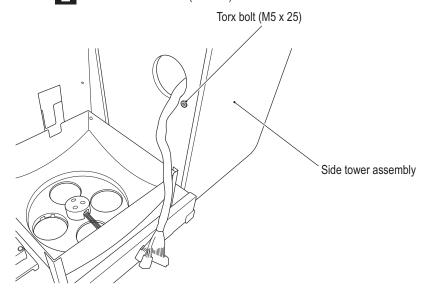

3 Secure the harness clamp of the harness led out in step 1 with the Torx bolt (M5 x 25) removed in step 2.

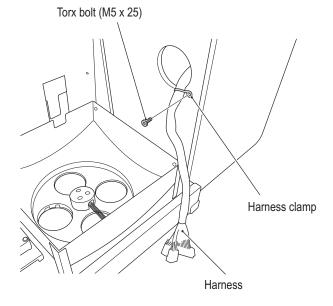


4 Attach the side tower bracket (L) and side tower bracket (R) with two flange socket bolts (M6 x 20) each.

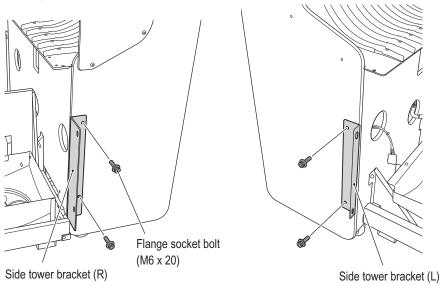


9 10

While lifting up the sloped area of the side tower assembly, insert the hopper assembly into the opening in the side surface of the table until the front of the side tower assembly touches the side surface of the table.

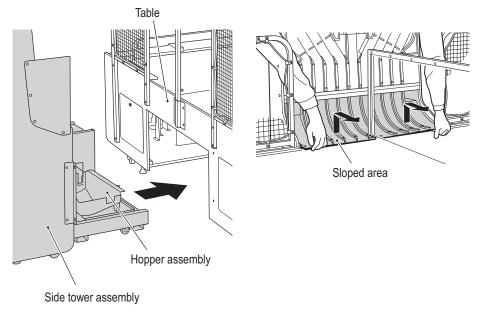


6 Attach the side tower assembly to the table with four flange socket bolts (M6 x 20).

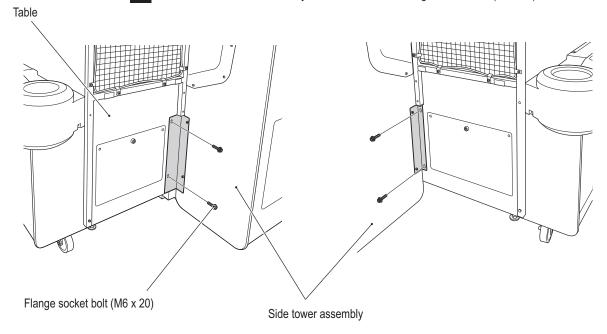


7 Attach the side tower assembly with two countersunk cap bolts (M5 x 35), two button head bolts (M5 x 35) and two button head bolts (M6 x 40).

[If the bolt holes are not aligned during this work, go to step 20.]

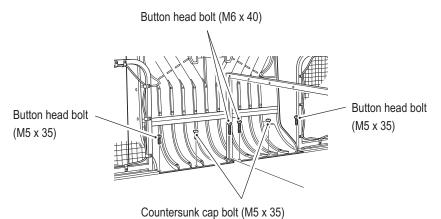

- Remove the service door L. (See "8A-5-2 Opening and Closing the Service Doors L and R" on page 107.)
- Connect the two connectors inside the cabinet (L) assembly.

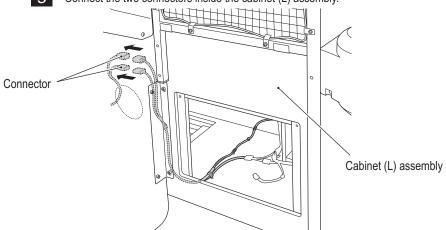

8A

8B 9


10

11 Assembly


Test Mode

Troubleshooting

Insert the tip of the rail (L) assembly into the square hole in the back side of the hopper assembly, and hook the hook on the opposite side of the rail (L) assembly onto the corner rail (L).

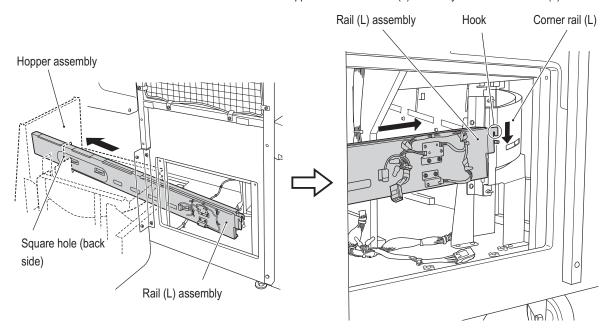


11 Connect the connector.

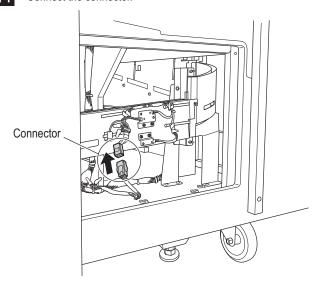


Reattach the service door L. (See "8A-5-2 Opening and Closing the Service Doors L and R" on page 107.)

Remove the service door R. (See "8A-5-2 Opening and Closing the Service Doors L and R" on page 107.)

Connect the three connectors inside the cabinet (R) assembly.

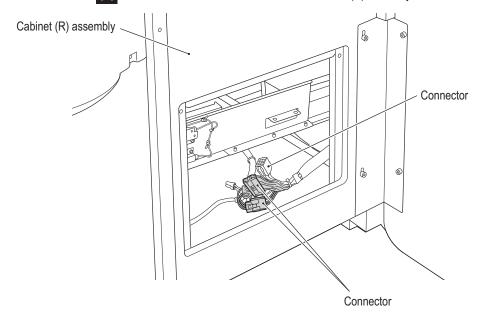


Insert the tip of the rail (R) assembly into the square hole in the front side of the hopper assembly, and hook the hook on the opposite side of the rail (R) assembly onto the corner rail (R).

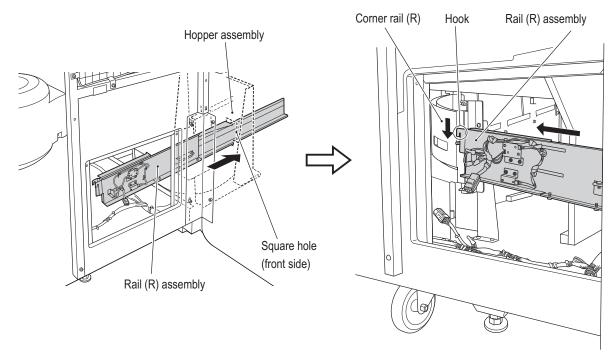


Test Mode

| Troubleshooting

16 Connect the connector.

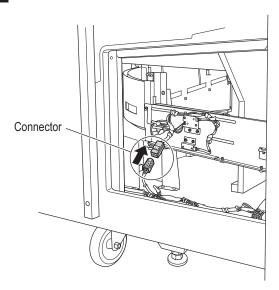

- Reattach the service door R. (See "8A-5-2 Opening and Closing the Service Doors L and R" on page 107.)
- Attach the two side walls with four Torx bolts (M5 x 16, silver) each.

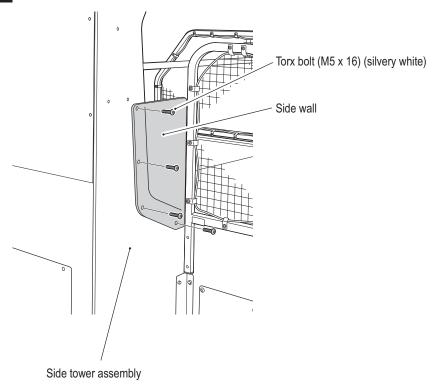


8A

8B 9

10

11 Assembly

19 Remove the four Phillips hexagon socket head bolts (with flat and spring washers) (M6 x 16), and remove the two caster brackets (R).

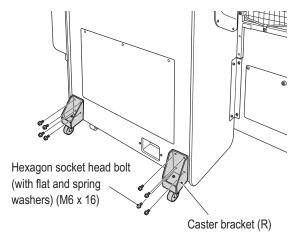



 The removed caster brackets (R) and bolts are required during transport. Be sure to keep them in a safe place.


[This completes the assembly work. Go to "8A-2-6 Preparing the Pucks and Mallets". If the bolt holes were not aligned in step 7, perform the procedure below.]

Remove the rear panel. (See "8A-5-3 Opening and Closing the Rear Panel" on page 108.)

21 Loosen the four Phillips pan head screws (with flat and spring washers) (M4 x 10).


22 Loosen the four Phillips pan head screws (with flat and spring washers) (M4 x 35), and adjust so that the sloped area matches the height of the playing field.

Phillips pan head screw (with flat and spring washers) (M4 x 35) (loosen)

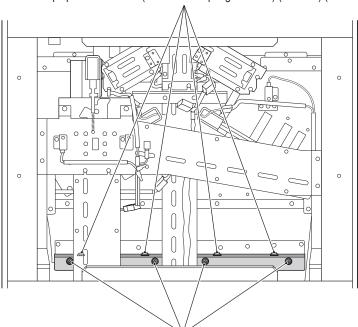


Phillips pan head screw (with flat and spring washers) (M4 x 10) (loosen)

23 Attach the side tower assembly with two countersunk cap bolts (M5 x 35), two button head bolts (M5 x 35) and two button head bolts (M6 x 40).

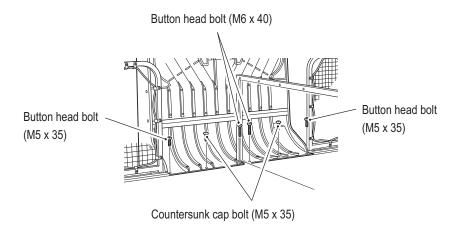

- 24 Tighten the four Phillips pan head screws (with flat and spring washers) (M4 x 35).
- Tighten the four Phillips pan head screws (with flat and spring washers) (M4 x 10).

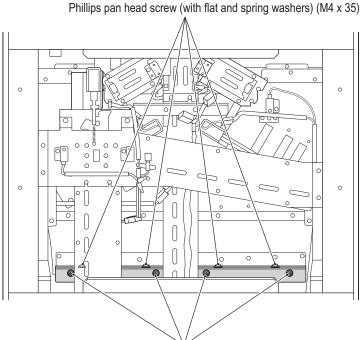


Phillips pan head screw (with flat and spring washers) (M4 x 10)

- Reattach the rear panel. (See "8A-5-3 Opening and Closing the Rear Panel" on page 108.)
- Go to step 8.

10

12 &

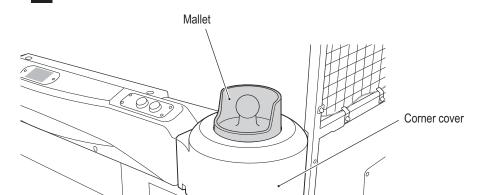


8A-2-6 Preparing the Pucks and Mallets

Place the mallets on the corner covers.

0

2 Put 50 of each of the big pucks and mini pucks (green, pink, orange) into the goal (L).

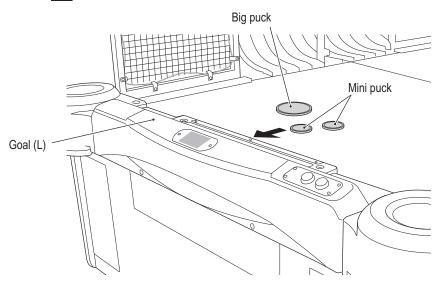


NOTICE

- Put the pucks into the goal (L) one to three pucks at a time. If many pucks are put into the goal at once, the pucks may become jammed inside the machine and prevent normal operation.
- Be sure to put the pucks into the goal (L) side.
- Do not put 60 or more big pucks or a total of 160 or more mini pucks of any color into the machine. Doing so may cause a malfunction.

8A-3 Connecting the Power Cord and Ground

MARNING

- Be sure to install the ground wire. Failure to install the ground wire may result in electric shock in the event of electrical leakage.
 - Insert the socket side of the power cord into the power supply input socket of the cordbox assembly.

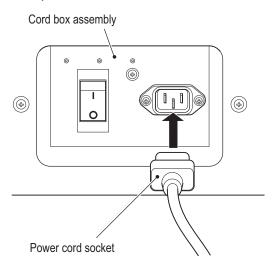

2 Insert the power cord plug into an outlet.

8A-4 Checks after Installation

After installation is complete, test each item in the Test mode, and set the necessary items in the Setting mode. (See "7-8 Test Mode" on page 41 and "7-9 Setting Mode" on page 51.)



- After installation is complete, be sure to perform the puck supply operation to add pucks into the machine. (See "L Hopper Motor ON/OFF Test and Sensor Check" on page 47 and "7-8-7 S Hopper Motor ON/OFF Test and Sensor Check" on page 48.)
- After adding mini pucks into the machine, check that there are ten mini pucks in each of the right and left sides of the mini puck stock area, and then be sure to reset the mini puck decrease count. (See "7-9-9 Mini puck low warning ON/OFF" on page 60.)


10 11

Connecting the Power Cord and Ground / Checks after Installation / Opening and Closing Doors

8A-5 **Opening and Closing Doors**

8A-5-1 Opening and Closing the Front Doors


Remove the two Torx bolts (M5 x 35), and remove the front door on the side to be opened.

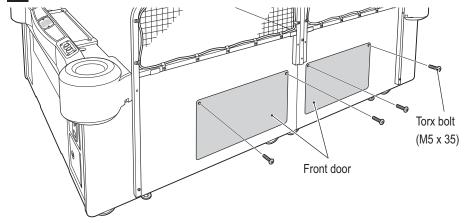


To install, perform the procedure in reverse.

Opening and Closing the Service Doors L and R

Remove the two Torx bolts (M5 x 35).

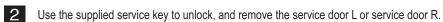


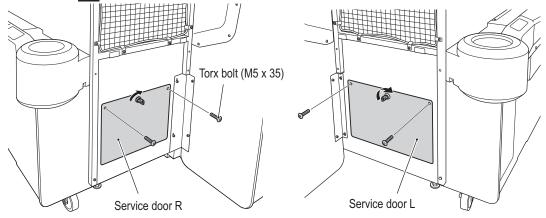

To install, perform the procedure in reverse.

8A-5-3 Opening and Closing the Rear Panel


- 1 Remove the four Torx bolts (M5 x 25).
- 2 Use the supplied service key to unlock, and remove the rear panel.

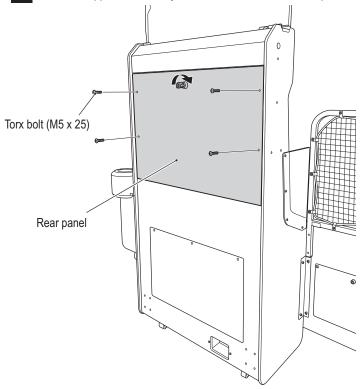

To install, perform the procedure in reverse.

8A-5-4 Opening and Closing the Service Door

Remove the three Torx bolts (M5 x 25), and remove the service door.

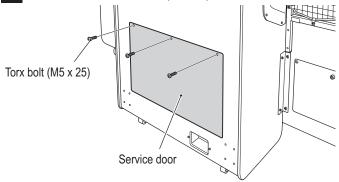

2 To install, perform the procedure in reverse.

8B. Service - Must be performed by a technician -

WARNING

■ To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before performing service work (such as repairs or correcting malfunctions).

8B-1 Inspection and Service



Perform periodic service. Failure to perform service may result in an accident.

8B-1-1 Inspection Items

Check the following inspection items periodically for any abnormalities.

- Level Adjuster Inspection
 - · Check that the level adjusters are fixed securely. (See "8A-2-2 Level Adjuster Adjustment" on page
- Power Cord Plug Inspection (2)
 - Check that the power cord is firmly inserted into the power outlet in the machine's cord box.
 - Clean any dust or other dirt from the connection parts.
 - Check for cracks or dirt on the power cord covering. If there is any abnormality on the power cord, be sure to replace it.
- Screw Looseness Inspection

Check the following parts for loose screws. Fully retighten any loose screws.

- Corner covers and goal covers (See "8A-2-1 (1) Assembling the Table, Goals and Corner Covers" on page 75.)
- Net L and S, center guard, and side wall (See "8A-2-1 (2) Installing the Nets" on page 86.)
- Goal bumpers (L) and (R), bumpers S (L) and (R), bumper L, and corner bumpers

8B-1-2 Cleaning the Puck Paths

(1) Cleaning the Insides of the Goal (L) and (R) Assemblies


The description below explains how to clean the (L) side. Follow the same procedure to clean the (R) side.

!WARNING

 To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.



- Do not use thinner, benzene, gasoline, alcohol or other organic solvents. This may degrade the materials.
- 1 Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
- Open the goal (L) assembly. (See "7-5-3 Opening and Closing the Goal (L) and (R) Assemblies" on page 38.)
- Wipe away any dirt from the puck paths using a soft cloth moistened with water or a neutral cleanser diluted with water and then firmly wrung out.

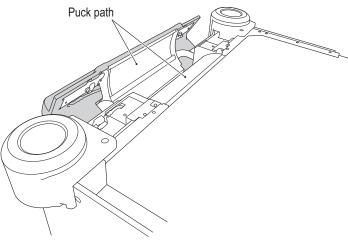

- 4 Wipe dry using a soft cloth so that no water or detergent remains, and then allow to dry completely.
- To install, perform the procedure in reverse.

10 11

ଥ Inspection and Service

(2) Cleaning the Rail (L) and (R) Assemblies

The description below explains how to clean the (L) side. Follow the same procedure to clean the (R) side.


?∖WARNING∙

 To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.




- Do not use thinner, benzene, gasoline, alcohol or other organic solvents. This may degrade the materials.
- Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
- Remove the rail (L) assembly by reversing the installation procedure. (See steps 5 9 of "8A-2-5 Installing the Side Tower Assembly" on page 96.)
- 3 Wipe away any dirt from the puck paths using a soft cloth moistened with water or a neutral cleanser diluted with water and then firmly wrung out.
 - * Use a cotton swab to clean narrow parts.

Rail (L) assembly

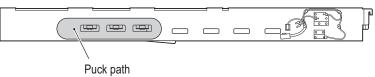

Rail (R) assembly

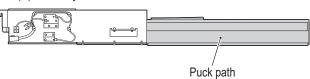

- Wipe dry using a soft cloth so that no water or detergent remains, and then allow to dry completely.
- To install, perform the procedure in reverse.


(3) Cleaning the Insides of the L and S Buckets (Hopper Assembly)

MARNING

 To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.



- Do not perform the following operations. Doing so may cause pucks to jam or other malfunctions.
 - Rotating the L hopper disk in the clockwise direction as viewed from above.
 - Rotating the S hopper disk in the counter-clockwise direction as viewed from above.
- Do not use thinner, benzene, gasoline, alcohol or other organic solvents. This may degrade the materials.
- 1 Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
- Remove the side tower assembly. (See "8B-4-4 (1) Removing and Installing the Side Tower Assembly" on page 148.)
- Remove any pucks from inside the L and S buckets.

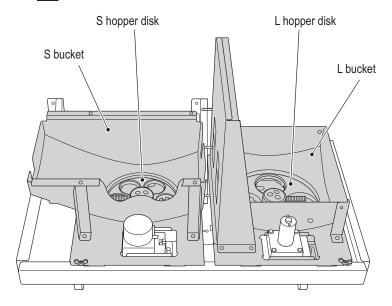

- Wipe away any dirt from the puck paths using a soft cloth moistened with water or a neutral cleanser diluted with water and then firmly wrung out.
 - * Use a cotton swab to clean narrow parts.
- Wipe dry using a soft cloth so that no water or detergent remains, and then allow to dry completely.
- 6 To install, perform the procedure in reverse.

(4) Cleaning the Hopper Disks and Hopper Bottoms (Hopper Assembly)


The description below explains how to clean the S hopper disk. Follow the same procedure to clean the L hopper disk.

/!\WARNING


To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.




- Do not perform the following operations. Doing so may cause pucks to jam or other malfunctions.
- · Rotating the L hopper disk in the clockwise direction as viewed from above.
- Rotating the S hopper disk in the counter-clockwise direction as viewed from above.
- Do not use thinner, benzene, gasoline, alcohol or other organic solvents. This may degrade the materials.
- Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
- Remove the side tower assembly. (See "8B-4-4 (1) Removing and Installing the Side Tower Assembly" on page 148.)
- Remove any pucks from inside the S bucket.
- Remove the wing bolt (M4 x 6), slide the S hopper cover toward the outside, and remove it.

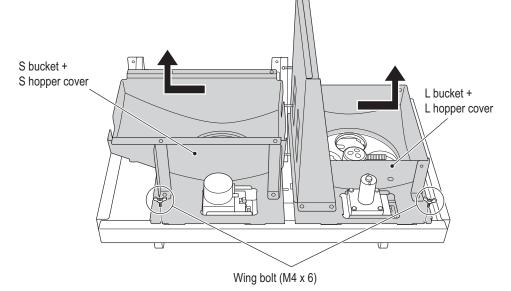

- 5 Remove the cord clip and disconnect the two connectors.
- 6 Loosen the four pan head screws (with flat and spring washers) (M4 x 10), and remove the S hopper motor bracket.

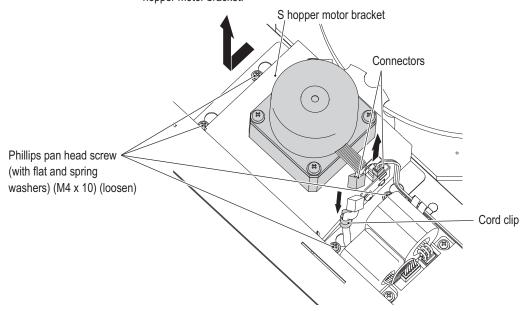


Remove the three pan head screws (with flat and spring washers) (M4 x 10), and remove the disk top.

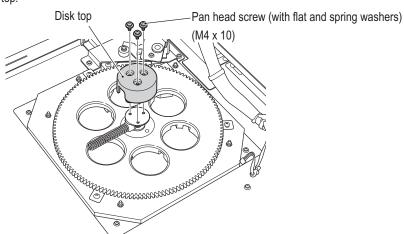


8 Remove the pan head screw (with flat and spring washers) (M4 x 10), and remove the hopper spring base.




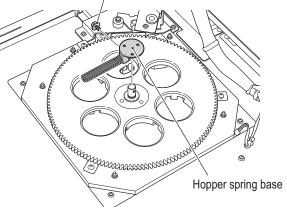

Remove the two pan head screws (with flat and spring washers) (M4 x 10), and remove the disk retainer bracket. (Perform this step only for the S hopper disk.)

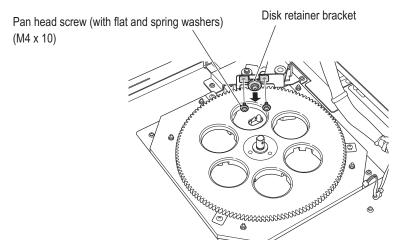

Remove the E-ring (nominal diameter: 10), and remove the flat washer (M12) and the S hopper disk.

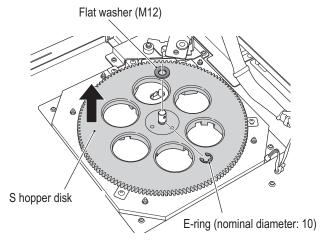

- Wipe away any dirt from the puck paths using a soft cloth moistened with water or a neutral cleanser diluted with water and then firmly wrung out.
- Wipe dry using a soft cloth so that no water or detergent remains, and then allow to dry completely.
- To install, perform the procedure in reverse.



 When installing, press the hopper motor bracket toward the hopper disk so that the hopper gear and hopper disk teeth mesh properly.


(5) Cleaning the S Slider Assembly

MARNING

 To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.



- Do not use thinner, benzene, gasoline, alcohol or other organic solvents. This may degrade the materials.
- Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
- Remove the illuminator base plates L and R. (See steps 2 5 of "8B-4-10 (1) Replacing the Circle LED" on page 174.)
- Remove the three Torx bolts (M5 x 12), and remove the cover panel retainer L.

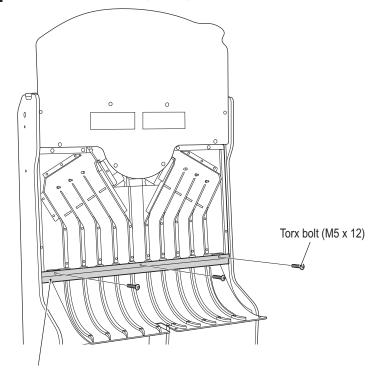

Torx bolt (M5 x 12)

Cover panel

8B 9

10

11

വ Inspection and Service

5 Wipe away any dirt from the puck paths using a soft cloth moistened with water or a neutral cleanser diluted with water and then firmly wrung out.

Remove the two Torx bolts (M5 x 12), and remove the cover panel.

- Wipe dry using a soft cloth so that no water or detergent remains, and then allow to dry completely.
- To install, perform the procedure in reverse.

0

Troubleshooting

8B-1-3 Removing Jammed Pucks



 Check that pucks are not damaged or deformed before putting them back into the machine. Otherwise, the pucks may jam again.

(1) Inside the Goal (L) or (R) Assembly

The description below explains how to remove jammed pucks from the (L) side. Follow the same procedure to remove jammed pucks from the (R) side.

MARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - 1 Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Open the goal (L) assembly. (See "7-5-3 Opening and Closing the Goal (L) and (R) Assemblies" on page 38.)
 - Remove the jammed puck.
 - To install, perform the procedure in reverse.

(2) In case of the rail (L)/(R) assembly

The description below explains how remove jammed pucks from the (L) side. Follow the same procedure to remove jammed pucks from the (R) side.

WARNING


- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the rail (L) assembly by reversing the installation procedure. (See steps 5 9 of "8A-2-5 Installing the Side Tower Assembly" on page 96.)
 - Remove the jammed puck.
 - To install, perform the procedure in reverse.

(3) Inside the Corner Rail (L) or (R)

The description below explains how to remove jammed pucks from the (L) side. Follow the same procedure to remove jammed pucks from the (R) side.



- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Open the service door L. (See "8A-5-2 Opening and Closing the Service Doors L and R" on page 107.)
 - Insert a rod (wrench, etc.) into the gap of the corner outer R (L), and remove the jammed puck.

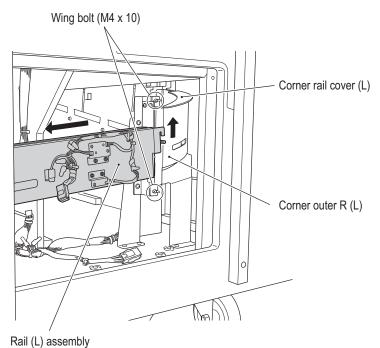

[If the jammed puck cannot be removed by the above procedure, perform the procedure below.]

- Remove the rail (L) assembly by reversing the installation procedure. (See steps 5 9 of "8A-2-5 Installing the Side Tower Assembly" on page 96.)
- Remove the two wing bolts (M4 x 10), and remove the corner rail cover (L).
- Open the corner outer R (L) slightly, insert a rod (wrench, etc.) into the gap, and remove the jammed puck.
- To install, perform the procedure in reverse.

(4) Inside the L or S Bucket (Hopper Assembly)

⚠WARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the side tower assembly. (See "8B-4-4 (1) Removing and Installing the Side Tower Assembly" on page 148.)
 - Remove any pucks from inside the L or S bucket, and then remove the jammed puck.
 - To install, perform the procedure in reverse.

(5) Inside a Hopper Disk or Hopper Bottom (Hopper Assembly)

The description below explains how to remove jammed pucks from the S hopper disk. Follow the same procedure to remove jammed pucks from the L hopper disk.

MARNING

 To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.



Do not perform the following operations. Doing so may cause pucks to jam or other malfunctions.

- Rotating the L hopper disk in the clockwise direction as viewed from above.
- Rotating the S hopper disk in the counter-clockwise direction as viewed from above.
- Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
- Remove the side tower assembly. (See "8B-4-4 (1) Removing and Installing the Side Tower Assembly" on page 148.)
- Remove the S hopper disk. (See steps 3 10 of "8B-1-2 (4) Cleaning the Hopper Disks and Hopper Bottoms (Hopper Assembly)" on page 113.)
- 4 Remove the jammed puck.
- To install, perform the procedure in reverse.

8B

9 10

11

ପ Inspection and Service

Test Mode


Troubleshooting

(6) In case of S Escalator Assembly


The description below explains how to remove jammed pucks from the L side. Follow the same procedure to remove jammed pucks from the R side.

∕!\WARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the rear panel. (See "8A-5-3 Opening and Closing the Rear Panel" on page 108.)
 - Remove the four countersunk washer nuts (M4), disconnect the connector, and remove the joint rail cover L.

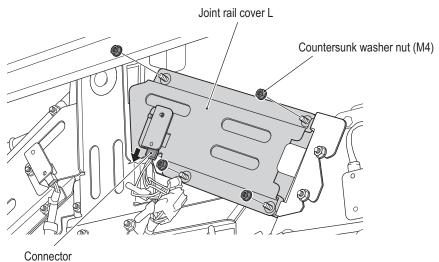



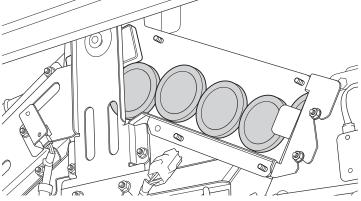


To install, perform the procedure in reverse.

(7) In case of L Escalator Assembly

WARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - 1 Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the rear panel. (See "8A-5-3 Opening and Closing the Rear Panel" on page 108. See "8A-5-3 Opening and Closing the Rear Panel" on page 108.)
 - 3 Disconnect the connector.
 - Remove the four countersunk washer nuts (M4), loosen the two countersunk washer nuts (M4), and remove the L rail (H) cover.

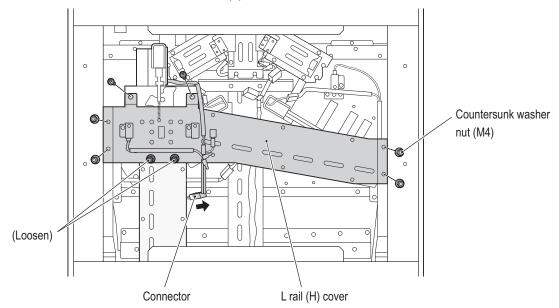

- 5 Remove the jammed puck.
- To install, perform the procedure in reverse.

(8) In case of the Slider Assembly


NWARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the cover panel. (See steps 2 4 of "8B-1-2 (5) Cleaning the S Slider Assembly" on page 116.)
 - Remove the jammed puck.
 - To install, perform the procedure in reverse.

8B-1-4 Adding Big Pucks

WARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Open the service door R. (See "8A-5-2 Opening and Closing the Service Doors L and R" on page 107.)
 - 3 Count the number of big pucks inside the L bucket.

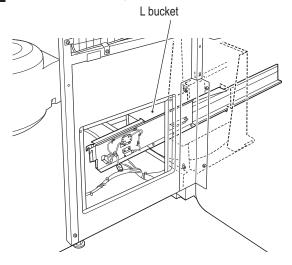


- 4 Add big pucks so that there are 20 to 30 big pucks inside the L bucket.
- To install, perform the procedure in reverse.

8B-2 **Error Display (for Technicians)**

8B-2-1 Display when an Error Occurs

When an error occurs, "Err" is displayed in the left side score LED, and the error number is displayed in the right side score LED. The same error number is displayed as a binary value in the time LED.

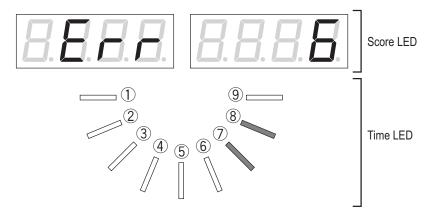

Signboard display (when error number = 6)



 Before checking for a malfunction, first make sure that all the connectors are connected securely.

Resolving Errors 8B-2-2

Error number	Error name	Cause	Action	Reference page
	Cain awitah aman	A coin selector malfunction.	Replace the coin selector.	_
'	Coin switch error	Main PC board malfunction.	Replace the main PC board.	Page 149
2 Service switch error	0	Service button malfunction.	Contact your distributor.	_
	Service switch error	Main PC board malfunction.	Replace the main PC board.	Page 149
3	Sound IC error	Main PC board malfunction.	Replace the main PC board.	Page 149
4	Communication error with time LED PC board	A time LED PC board malfunction.	Replace the time LED PC board.	Page 172
		Main PC board malfunction.	Replace the main PC board.	Page 149
5	Communication error with score LED PC board	A score LED PC board malfunction.	Replace the score LED PC board.	Page 173
		Main PC board malfunction.	Replace the main PC board.	Page 149

- Must be performed by a technician -

Error number	Error name	Cause	Action	Reference page
		A puck or foreign object is jammed inside the L side goal.	Remove the jammed puck or foreign object from inside the goal (L).	Page 118
6	Goal (L) sensor error	A puck or foreign object is jammed inside the corner rail (L).	Remove the jammed puck or foreign object from inside the goal (L).	Page 119
		The goal (L) sensor is dirty.	Clean the inside of the goal (L) sensor.	Page 144
		Goal (L) sensor malfunction.	Replace the goal (L) sensor.	Page 144
		A puck or foreign object is jammed inside the R side goal.	Remove the jammed puck or foreign object from inside the goal (R).	Page 118
7	Goal (R) sensor error	A puck or foreign object is jammed inside the corner rail (R).	Remove the jammed puck or foreign object from inside the goal (R).	Page 119
		The goal (R) sensor is dirty.	Clean the inside of the goal (R) sensor.	Page 144
		Goal (R) sensor malfunction.	Replace the goal (R) sensor.	Page 144
		Stopper solenoid (L) malfunction.	Replace the stopper solenoid (L).	Page 163
8	Stopper solenoid (L) error	Stopper (L) sensor malfunction.	Replace the stopper (L) sensor.	Page 165
		Switching regulator (24V) malfunction.	Replace the switching regulator (24V).	Page 151
		Stopper solenoid (R) malfunction.	Replace the stopper solenoid (R).	Page 163
9	Stopper solenoid (R) error	Stopper (R) sensor malfunction.	Replace the stopper solenoid (R) sensor.	Page 165
		Switching regulator (24V) malfunction.	Replace the switching regulator (24V).	Page 151
		L divider solenoid malfunction.	Replace the L divider solenoid.	Page 169
10	L divider solenoid error	L divider sensor malfunction.	Replace the L divider sensor.	Page 170
	L divider soletion effor	Switching regulator (24V) malfunction.	Replace the switching regulator (24V).	Page 151

1
2
3
4
5
6
7
8A
8B
9
10
2 3 4 5 6 7 8A 8B 9 10 11 12
11
Error Display (for Technicians)

Error number	Error name	Cause	Action	Reference page
	S hopper motor error	A mini puck is jammed inside the hopper.	Remove the jammed puck.	Page 120
11		A foreign object other than a mini puck has entered the hopper.	Remove the foreign object from inside the hopper.	Page 112
		S hopper sensor malfunction.	Replace the S stopper sensor.	Page 160
		S hopper motor malfunction.	Replace the S stopper motor.	Page 157
		A big puck is jammed inside the hopper.	Remove the jammed puck.	Page 120
		A foreign object other than a big puck has entered the hopper.	Remove the foreign object from inside the hopper.	Page 112
12	L hopper motor error	L hopper motor sensor malfunction.	Replace the L hopper motor sensor.	Page 156
		L hopper motor malfunction.	Replace the L hopper motor.	Page 153
		Switching regulator (24V) malfunction.	Replace the switching regulator (24V).	Page 151
		There are no mini pucks inside the hopper.	Add mini pucks to the hopper.	Page 105
13	S hopper idling error	A puck is standing on edge inside the hopper.	Remove all of the pucks from the hopper, and then put the pucks back into the hopper correctly.	Page 120
		A mini puck is jammed inside the hopper.	Remove the jammed puck.	Page 120
		S divider outlet sensor malfunction.	Replace the S divider outlet sensor.	Page 168
		There are no big pucks inside the hopper.	Add big pucks to the hopper.	Page 105
14	L hopper idling error	A puck is standing on edge inside the hopper.	Remove all of the pucks from the hopper, and then put the pucks back into the hopper correctly.	Page 120
		A big puck is jammed inside the hopper.	Remove the jammed puck.	Page 120
		L divider outlet sensor malfunction.	Replace the L divider outlet sensor.	Page 171

- Must be performed by a technician -

Error number	Error name	Cause	Action	Reference page
15	Rail (L) jamming error	A puck is jammed inside the rail (L).	Remove the jammed puck.	Page 118
16	Rail (R) jamming error	A puck is jammed inside the rail (R).	Temove the jammed puck.	rage 110
17	S divider (L) outlet sensor error	A puck is jammed in the S	Remove the jammed puck.	D 404
18	S divider (R) outlet sensor error	divider outlet.	Remove the janimed puck.	Page 121
		A puck is jammed inside the corner rail.	Remove the jammed puck.	Page 119
19	Corner rail jamming error (L)	The rail (L) sensor is dirty.	Clean the inside of the rail (L) sensor.	Page 145
		The rail (L) sensor malfunction.	Replace the rail (L) sensor.	Page 145
		A puck is jammed inside the corner rail.	Remove the jammed puck.	Page 119
20	Corner rail jamming error (R)	The rail (R) sensor is dirty.	Clean the inside of the rail (R) sensor.	Page 145
		The rail (R) sensor malfunction.	Replace the rail (R) sensor.	Page 145
21	S divider (L) outlet sensor	S divider (L) outlet sensor is dirty.	Clean the S divider (L) outlet sensor.	Page 168
21	skip error	S divider (L) outlet sensor malfunction.	Replace the S divider (L) outlet sensor.	Page 168
22	S divider (R) outlet sensor	S divider (R) outlet sensor is dirty.	Clean the S divider (R) outlet sensor.	Page 168
22	skip error	S divider (R) outlet sensor malfunction.	Replace the S divider (R) outlet sensor.	Page 168
00	S hopper motor sensor	S hopper motor sensor is dirty.	Replace the S hopper motor sensor.	Page 160
23	error	S hopper motor sensor malfunction.	Replace the S hopper motor sensor.	Page 160
0.4	L hopper motor sensor	L hopper motor sensor is dirty.	Replace the L hopper motor sensor.	Page 156
24	error	L hopper motor sensor malfunction.	Replace the L hopper motor sensor.	Page 156

	•	
6		2

Error number	Error name	Cause	Action	Reference page
25	Ticket dispenser (L) error	The dispenser has run out of tickets. A ticket dispenser (L) malfunction.	Add tickets. Replace the ticket dispenser (L).	_
26	Ticket dispenser (R) error	The dispenser has run out of tickets. A ticket dispenser (R) malfunction.	Add tickets. Replace the ticket dispenser (R).	_
99	Start-up error	The power switch was turned off, and then immediately turned back on again.	Turn off the power switch, wait for 30 seconds or more, and then turn on the power switch again.	Page 106

8B-3 Troubleshooting

!WARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
- If the problem is not described in "8B-3 Troubleshooting" or the problem persists despite taking the appropriate action, turn off the power switch immediately to stop operation, and contact your distributor. Continuing operations may result in an accident.



- Before checking for a malfunction, first make sure that all the connectors are connected securely.
- Never perform a conductivity check of the boards with a tester or any other tool.
 The IC may be damaged by the internal voltage of the tester.
- When sending parts for repair, be sure to pack them properly. Particularly when sending the main PC board, wrap the part in sponge or air bubble wrapping before packing it in a cardboard box to make sure that the part is not exposed to external force.

8B-3-1 Overall

Symptom	Main cause	Action	Reference page
The machine does not start	The power cord is disconnected from the outlet or the machine, or is not connected securely.	Connect the power cord correctly and securely. Turn on the power switch again.	Page 106
even when the power switch is turned on.	The PCB base is not installed correctly.	Install the PCB base correctly.	Page 149
	Main PC board malfunction.	Replace the main PC board.	Page 149
	Switching regulator malfunction.	Replace the switching regulator.	Page 151
Operation is not stable.	The power supply voltage is not within the range of AC 110 V to 130 V (or 210 V to 230 V).	Disconnect any high-capacity devices (such as an air conditioner or large machine) from the same line to secure the specified power supply voltage.	_
The power turns off during operation.	The circuit protector has operated to turn off the power switch. *The circuit protector turns off the current when an abnormal current occurs.	Turn on the power switch again. If the circuit protector operates frequently, there is a mechanical abnormality. Contact your distributor.	_

8B-3-2 Table top assembly

Symptom	Main cause	Action	Reference page
	The machine is in Attract (standby) mode.	When the game starts, the blower fan operates so that the pucks slide.	Page 40
	The inside of the playing field.	Clean the playing field.	Page 70
The pucks do not slide.	A puck is deformed.	Replace the deformed puck with a spare puck.	Page 105
	A puck is dirty.	Clean the puck.	Page 71
	The blower fan malfunction.	Replace the blower fan.	Page 139
	SSR malfunction.	Replace the SSR.	Page 152

8B-3-3 Goal (L) and (R) Assemblies

Symptom	Main cause	Action	Reference page
	One or both of the goal coin locks are not closed.	Use the service key and close the goal.	Page 38
	A deformed puck is being used.	Replace the deformed puck with a spare puck.	Page 105
Pucks jam frequently.	A puck is dirty.	Clean the puck.	Page 71
	A foreign object has entered the goal.	Remove the foreign object.	Page 110
	The inside of the goal is dirty.	Clean the inside of the goal.	Page 110
Cound is not output	The volume setting is low.	Adjust the volume.	Page 39
Sound is not output.	Main PC board malfunction.	Replace the main PC board.	Page 149

8B-3-4 Rail (L) and (R) Assemblies

Symptom	Main cause	Action	Reference page
	The rail is not installed correctly.	Install the rail correctly.	Page 96
	A deformed puck is being used.	Replace the deformed puck with a spare puck.	Page 105
Pucks jam frequently.	A puck is dirty.	Clean the puck.	Page 71
	A foreign object has entered the rail.	Remove the foreign object.	Page 111
	The inside of the rail is dirty.	Clean the inside of the rail.	Page 111

8B-3-5 Coin Assembly

Symptom	Main cause	Action	Reference page
The game does not start	Coin selector malfunction.	Replace the coin selector.	_
even when sufficient coins are inserted.	Main PC board malfunction.	Replace the main PC board.	Page 149

8B-3-6 Hopper assembly

Symptom	Main cause	Action	Reference page
The hopper disk does not operate.	A foreign object has entered the hopper.	Remove the side tower assembly, and remove the foreign object from inside the hopper.	Page 120
	A puck is jammed inside the hopper.	Remove the side tower assembly, and remove all pucks from inside the hopper.	Page 120
	The hopper motor bracket is not installed correctly.	Install the hopper motor bracket correctly.	Page 153
	The hopper gear is not installed correctly.	Install the hopper gear correctly.	Page 153
	Hopper motor malfunction.	Replace the hopper motor.	Page 153
	Hopper motor driver PC board malfunction.	Replace the hopper motor driver PC board.	Page 161
	Switching regulator (24V) malfunction.	Replace the switching regulator (24V).	Page 151
	Main PC board malfunction.	Replace the main PC board.	Page 149
	There are not enough pucks.	Add spare pucks to the hopper.	Page 105
The hopper disk operates, but pucks do not come out.	A puck is standing on edge inside the hopper.	Remove the side tower assembly, remove all pucks from inside the hopper, and then put the pucks back into the hopper correctly.	Page 120
	The hopper spring is not installed correctly.	Install the hopper spring correctly.	Page 113
Mini pucks frequently mix into the L hopper.	The pendulum stopper on rail (L) assembly is not installed correctly.	Install the pendulum stopper correctly.	_
	The rail (R) assembly puck paths are dirty.	Clean the puck paths.	Page 111

8B-3-7 Slider Assembly

Symptom	Main cause	Action	Reference page
Mini pucks are not supplied during game play.	Normal Hockey Mode was selected at the start of the game.	Select Big Bang Mode at the start of the game.	Page 40
	The machine is set to operate in Normal Hockey Mode only.	Change the setting to "OFF".	Page 67
	There are not enough pucks.	Add spare pucks to the hopper.	Page 105
	One or more deformed pucks is mixed into the pucks.	Remove any deformed pucks, and replace with spare pucks.	Page 105
	The stopper base is not installed correctly.	Install the stopper base correctly.	Page 163
	Stopper solenoid malfunction.	Replace the stopper solenoid.	Page 163
	Main PC board malfunction.	Replace the main PC board.	Page 149
	Switching regulator (24V) malfunction.	Replace the switching regulator (24V).	Page 151
S (mini) pucks stack and become jammed.	The cover panel is not installed correctly.	Install the cover panel correctly.	Page 116
	The illuminator assembly is not installed correctly.	Install the illuminator assembly correctly.	Page 174

8B-3-8 S Escalator Assembly

Symptom	Main cause	Action	Reference page
Pucks remain inside the joint rail cover.	S divider outlet sensor malfunction.	Replace the S divider outlet sensor.	Page 168

8B-3-9 L Escalator assembly

Symptom	Main cause	Action	Reference page
Multiple big pucks are supplied at once.	The L rail (H) cover is not installed correctly.	Install the L rail (H) cover correctly.	Page 122
	L divider outlet sensor malfunction.	Replace the L divider outlet sensor.	Page 171
L divider solenoid does not operate.	A foreign object has entered the L escalator assembly.	Remove the L rail (H) cover, and remove the foreign object.	Page 122
	L divider solenoid malfunction.	Replace the L divider solenoid.	Page 169
	Switching regulator (24V) malfunction.	Replace the switching regulator (24V).	Page 151

8B-3-10 Signboard assembly

Symptom	Main cause	Action	Reference page
The time LED PC board does not light.	A time LED PC board malfunction.	Replace the time LED PC board.	Page 172
	Main PC board malfunction.	Replace the main PC board.	Page 149
The score LED PC board does not light.	A score LED PC board malfunction.	Replace the score LED PC board.	Page 173
	Main PC board malfunction.	Replace the main PC board.	Page 149

8B-3-11 Illuminator assembly

Symptom	Main cause	Action	Reference page
The circle LED does not light.	A circle LED malfunction.	Replace the circle LED.	Page 174
	Main PC board malfunction.	Replace the main PC board.	Page 149

8B-4 Removing, Installing and Replacing Assemblies and Parts

8B-4-1 Table

(1) Removing and Installing the Goal (L) and (R) Assemblies


The description below explains how to remove and install the L side. Follow the same procedure to remove and install the R side.

!WARNING

 To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.

CAUTION

- When lifting up the goal (L) or (R) assembly, be sure to perform the work with two or more people.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the two button head bolts (M6 x 40), one button head bolt (M6 x 25) and three flat washers (M6) from each corner cover.

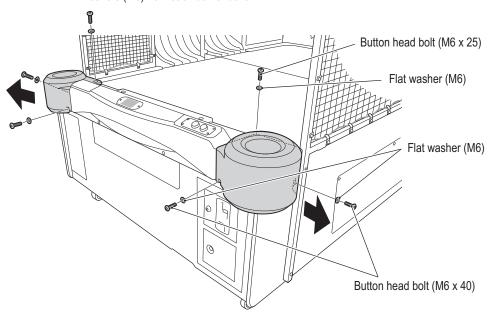


3 Slide the corner covers toward the outside, and remove them.

NOTICE

- When removing and installing, be careful not to pinch the harness and connectors.
- 4 Open the goal (L) assembly. (See "7-5-3 Opening and Closing the Goal (L) and (R) Assemblies" on page 38.)


5 Disconnect the two connectors.

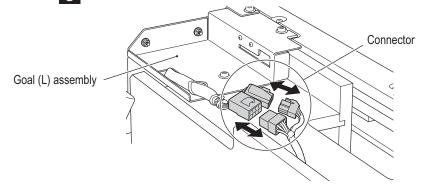


Remove the four flange socket bolts (M5 x 10) and two flange socket bolts (M5 x 16) from the right and left of the goal (L) assembly.



When installing, be sure to use bolts of the specified length.

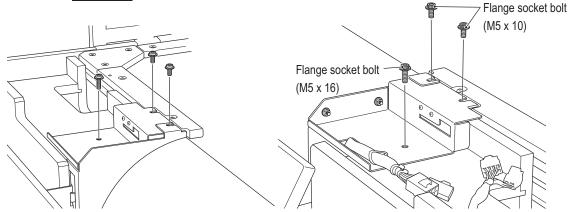

- Close the goal (L) assembly. (See "7-5-3 Opening and Closing the Goal (L) and (R) Assemblies" on page 38.)
- Lift the goal (L) assembly straight up with two people, and remove it.

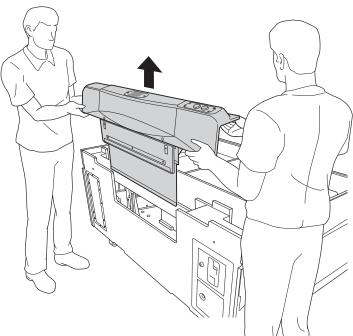

- 9 To install, perform the procedure in reverse.
- (2) Removing and Installing the Rail (L) and (R) Assemblies


WARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the rail (L) and (R) assemblies by reversing the installation procedure. (See steps to 14 of "8A-2-5 Installing the Side Tower Assembly" on page 96.)


(3) Replacing the Blower Fan

∕!\WARNING


- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Open the front door. (See "8A-5-1 Opening and Closing the Front Doors" on page 107.)
 - Disconnect the connector.
 - Remove the four flange socket bolts (M5 x 30) and the four flat washers (Ø24 for M5).

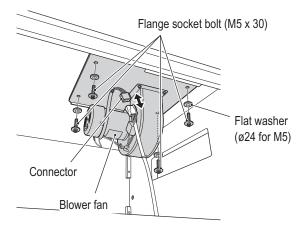

Slide the blower mounting plate toward the left side, and remove it.

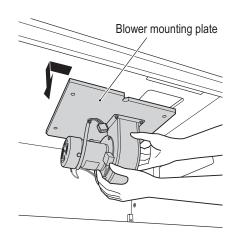

Remove the four flange socket bolt (M5 x 16), the four Flat washer(ø24 for M5), and remove the blower fan from the blower fan mounting plate.

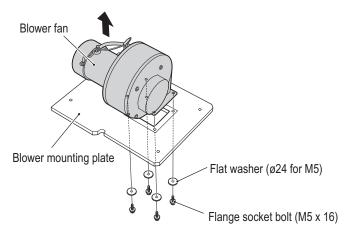

7 To install, perform the procedure in reverse.

8B

9 10

11

12

Removing, Installing and Replacing Assemblies and Parts

Test Mode


Troubleshooting

Goal (L) and (R) Assemblies 8B-4-2


(1) Replacing the Illuminated Buttons and Lamps




- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the four button head bolts (M4 x 8), and remove the Select switch panel.
 - Disconnect the two connectors.

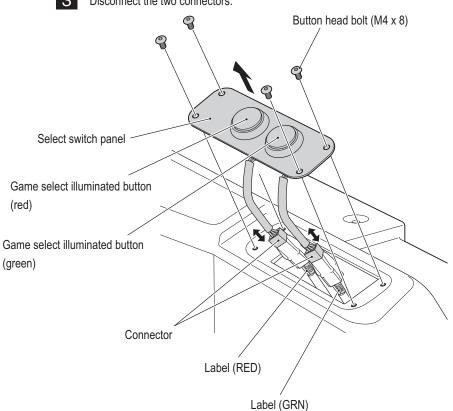


4 Disconnect the connector (green side).

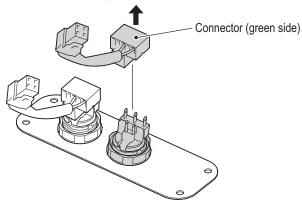

Twist the illuminated button (green) (terminal side) in the clockwise direction, and remove it.

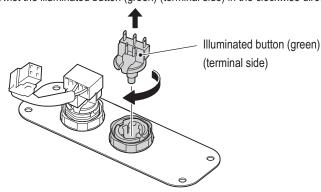

Remove the LED lamp from the illuminated button (green) (terminal side), and replace the malfunctioned part.

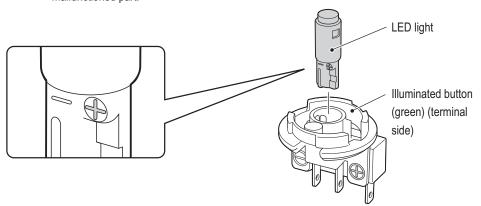

*The LED lamp has a polarity. Be careful of the direction of the LED lamp + mark when installing the LED lamp.

10

8B

To install, perform the procedure in reverse.

* Follow the same procedure for replacement of the illuminated button (red).




- When installing, connect the connectors to the connectors with matching labels.
- When installing, check that the connectors are aligned properly, and insert them all the way until they are securely locked.
- When installing, be careful not to pinch the harnesses and connectors.
- After replacement, be sure to check the button operation and LED lamp lighting. (See "7-8 Test Mode" on page 41.)

(2) Replacing the Goal (L) and (R) Sensors (Photosensor Side) and (Photo-emitter Side)


The description below explains how to replace the (L) side. Follow the same procedure for replacement of the (R) side.

WARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the goal (L) assembly. (See "8B-4-1 (1) Removing and Installing the Goal (L) and (R) Assemblies" on page 136.)
 - 3 Disconnect the two connectors of the goal (L) sensor (photosensor side) and (photo-emitter side).

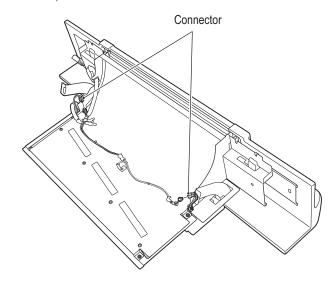

Remove the two countersunk washer nuts (M3), and remove the goal (L) sensor (photosensor side) and (photo-emitter side).

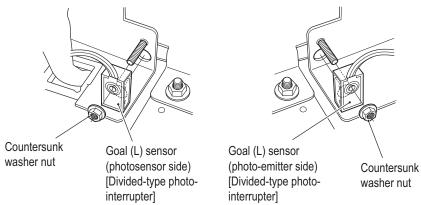

10

11

Removing, Installing and Replacing Assemblies and Parts

Rail (L) and (R) Assemblies 8B-4-3

(1) Replacing the Rail (L) and (R) Sensors (Upper) and (Middle)


The description below explains how to replace the (L) side. Follow the same procedure for replacement of the (R) side.

MARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the rail (L) assembly by reversing the installation procedure. (See steps 5 9 of "8A-2-5 Installing the Side Tower Assembly" on page 96.)
 - Disconnect the two connectors of the rail (L) sensor (upper) and (middle).
 - Remove the two countersunk washer nuts (M3), and remove the rail sensor bracket (B).




When assembling, press the rail sensor bracket (B) toward the hook side.

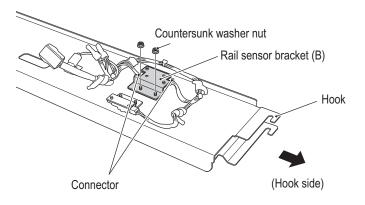

Remove the two pan head screws (M3 x 6), and remove the rail (L) sensors (upper) and (middle).



 When assembling, press the rail (L) sensors (upper) and (middle) in the direction of the arrow in the figure below.

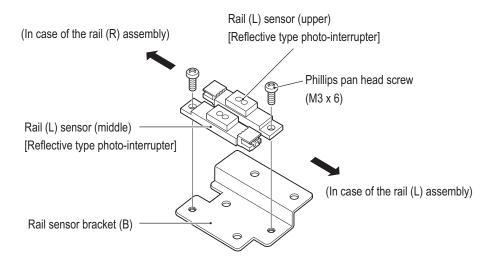

11

12

Removing, Installing and Replacing Assemblies and Parts

(2) Replacing the Rail (L) and (R) Sensors (Lower)


The description below explains how to replace the (L) side. Follow the same procedure for replacement of the (R) side.

/!\WARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the rail (L) assembly. Reverse the installation procedure. (See steps 5 to 9 of "8A-2-5 Installing the Side Tower Assembly" on page 96.)
 - Disconnect the connector of the rail (L) sensor (lower).
 - Remove the two countersunk washer nuts (M3), and remove the rail sensor bracket (A).




When assembling, press the rail sensor bracket (A) toward the hook side.

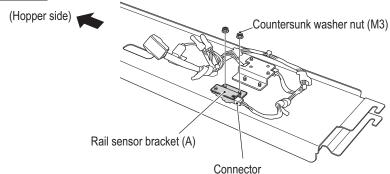

Remove the pan head screw (M3 x 6), and remove the rail (L) sensor (lower).



 When assembling, press the rail (L) sensors (lower) in the direction of the arrow in the figure below.

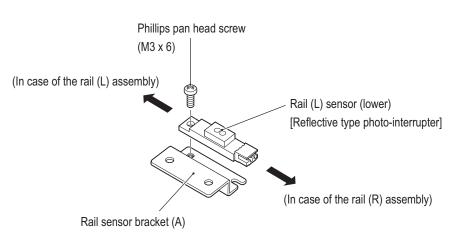

8B-4-4 Side tower assembly

(1) Removing and Installing the Side Tower Assembly

WARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - 1 Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - 2 Remove the side tower assembly by reversing the installation procedure. (See steps 2 16 of "8A-2-5 Installing the Side Tower Assembly" on page 96.)
 - To install, perform the procedure in reverse.

8B 9

10

11

Removing, Installing and Replacing Assemblies and Parts

Test Mode

Troubleshooting


(2) Replacing the Main PC Board

∕!\WARNING


• To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.

NOTICE

- PC boards are sensitive to static electricity. If a person handles a PC board while charged with static electricity, the parts on the PC board may be damaged. Before handling a PC board, discharge the static electricity from your body; for example, by touching the surface of grounded metal.
- Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
- Remove the two wing bolts (M5 x 16), disconnect the 15 connectors, and pull out the PCB base.

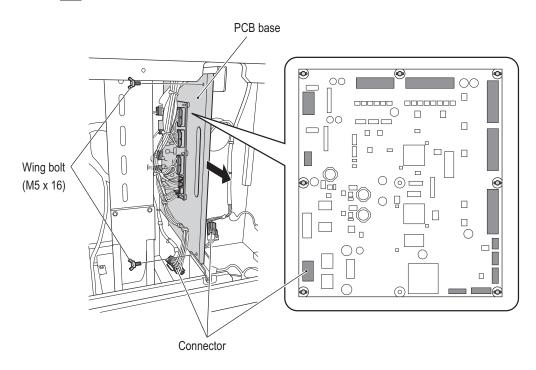

3 Unlock the 7 spacer locks, and replace the main PC board.

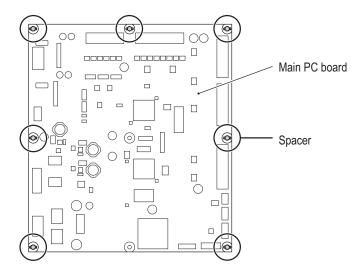


(3) Replacing the Switching Regulator

/!\WARNING

 To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.

NOTICE

- PC boards are sensitive to static electricity. If a person handles a PC board while charged with static electricity, the parts on the PC board may be damaged. Before handling a PC board, discharge the static electricity from your body; for example, by touching the surface of grounded metal.
- Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
- Pull out the PCB base. (See "8B-4-4 (2) Replacing the Main PC Board" on page 149.)
- Disconnect the connectors (two in case of 12 V, three in case of 24 V) of the switching regulator to be replaced.

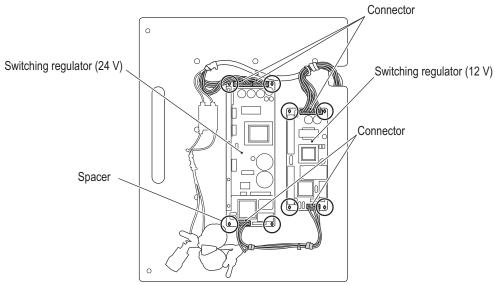


- Unlock the four spacer locks, and replace the switching regulator.
- To install, perform the procedure in reverse.

(4) Replacing the SSR

WARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - 1 Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Pull out the PCB base. (See "8B-4-4 (2) Replacing the Main PC Board" on page 149.)
 - 3 Disconnect the four Faston terminals.

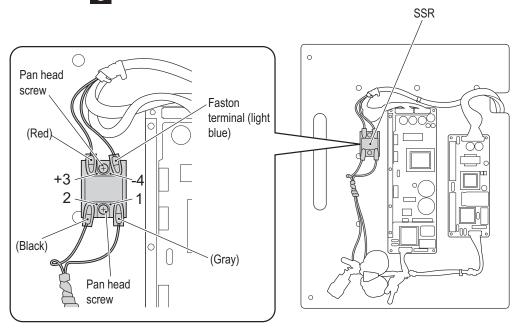

- 4 Remove the two pan head screws (with spring washer) (M4 x 16), and remove the SSR.
- To install, perform the procedure in reverse.



- The SSR has a polarity.
 The numbers indicated in the figure are marked on the SSR, so be careful and install the SSR with the correct alignment.
- When installing, be careful not to mix up the Faston terminal colors.

8B

9 10

11

12

Removing, Installing and Replacing Assemblies and Parts

Test Mode


Troubleshooting

8B-4-5 Hopper assembly


(1) Replacing the L Hopper Motor

! WARNING


- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the side tower assembly by reversing the installation procedure. (See steps 2 15 of "8A-2-5 Installing the Side Tower Assembly" on page 96.)
 - 3 Remove the wing bolt (M4 x 6), and remove the L hopper cover.

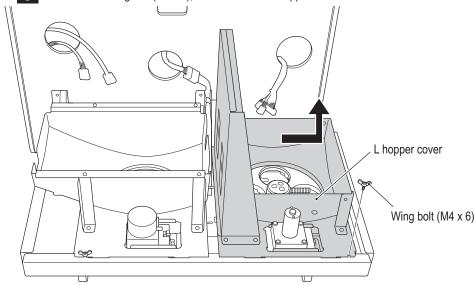


Remove the cord clip and disconnect the connector.

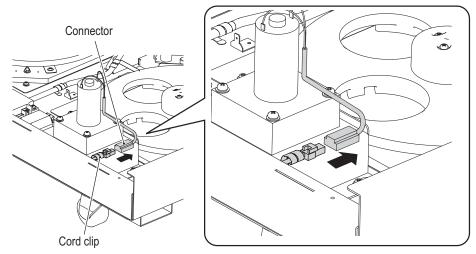


Loosen the four pan head screws (with flat and spring washers) (M4 x 10), and remove the L hopper motor bracket.

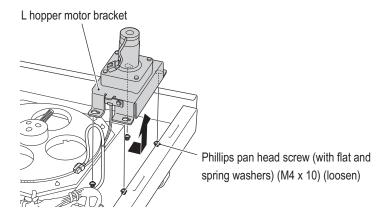


6 Disconnect the connector.

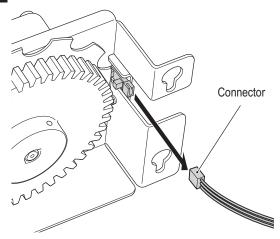

- Remove the encoder bracket. (See the step 3 of "8B-4-5 (2) Replacing the L Hopper Motor Sensor" on page 156.)
- Remove the two double points (M4 x 10), and remove the L hopper gear.

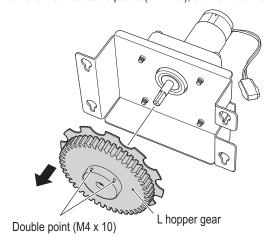


9 Remove the four Phillips pan head screws (with flat and spring washers) (M5 x 40), and replace the L hopper motor.

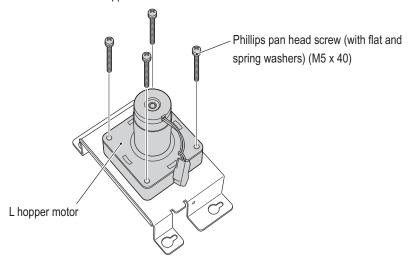

To install, perform the procedure in reverse.




 When installing, align the lower surface of the hopper gear with the tip of the motor shaft.

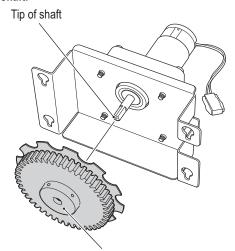

Hopper gear bottom surface

 When installing, install so that the double points are perpendicular to the flat surfaces of the motor shaft.

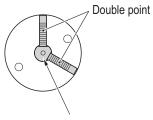


Motor shaft

 When installing, press the hopper motor bracket toward the hopper disk so that the hopper gear and hopper disk teeth mesh properly.


(2) Replacing the L Hopper Motor Sensor

⚠WARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the L hopper motor bracket. (See steps 2 6 of "8B-4-5 (1) Replacing the L Hopper Motor" on page 153.)
 - Remove the Phillips pan head screw (with flat and spring washers) (M4 x 10), and remove the encoder bracket.

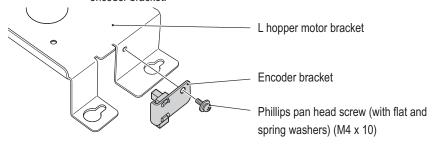

4 Release the lock, and replace the L hopper motor sensor.

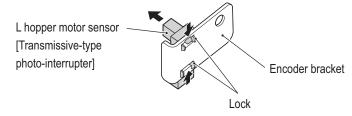

8B 9

10


11 12

Removing, Installing and Replacing Assemblies and Parts


(3) Replacing the S Hopper Motor

∕NWARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the side tower assembly by reversing the installation procedure. (See steps 2 15 of "8A-2-5 Installing the Side Tower Assembly" on page 96.)
 - Remove the wing bolt (M4 x 6), slide the S hopper cover toward the outside, and remove it.

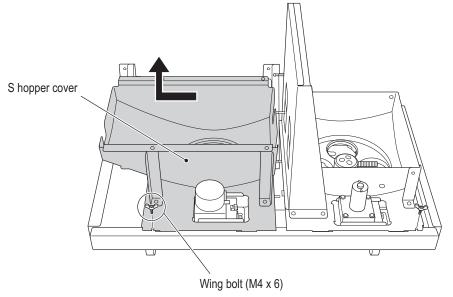


- Remove the cord clip and disconnect the two connectors.
- Loosen the four pan head screws (with flat and spring washers) (M4 x 10), and remove the S hopper motor bracket.

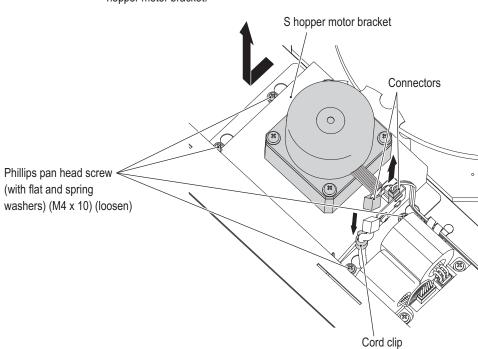


- Must be performed by a technician -

- Remove the encoder bracket. (See the step 3 of "8B-4-5 (4) Replacing the S Hopper Motor Sensor" on page 160.)
- Remove the two double points (M4 x 10), and remove the S hopper gear.

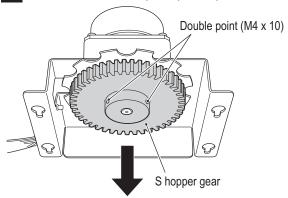


8 Remove the four Phillips pan head screws (with flat and spring washers) (M5 x 8), and replace the S hopper motor.

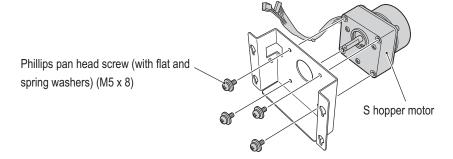

To install, perform the procedure in reverse.




• When installing, align the bottom surface of the hopper gear with the tip of the motor shaft.

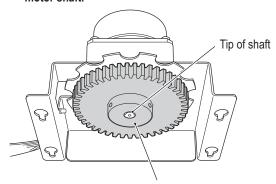

Hopper gear bottom surface

 When installing, install so that the double points are perpendicular to the flat surfaces of the motor shaft.

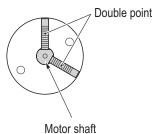


 When installing, press the hopper motor bracket toward the hopper disk so that the hopper gear and hopper disk teeth mesh properly.


(4) Replacing the S Hopper Motor Sensor

⚠WARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - 1 Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the S hopper motor bracket. (See steps 2 5 of "8B-4-4 (3) Replacing the S Hopper Motor" on page 157.)
 - Remove the Phillips pan head screw (with flat and spring washers) (M4 x 10), and remove the encoder bracket.

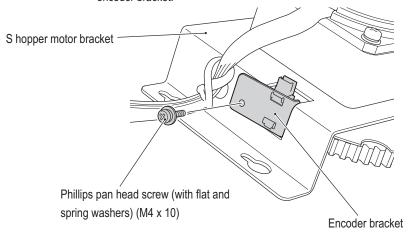

4 Release the lock, and replace the S hopper motor sensor.

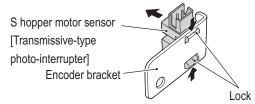


(5) Replacing the S Hopper Motor Driver PC Board

⚠WARNING


 To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.

NOTICE

- PC boards are sensitive to static electricity. If a person handles a PC board while charged with static electricity, the parts on the PC board may be damaged. Before handling a PC board, discharge the static electricity from your body; for example, by touching the surface of grounded metal.
- Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
- Remove the side tower assembly by reversing the installation procedure. (See steps 2 15 of "8A-2-5 Installing the Side Tower Assembly" on page 96.)
- Remove the one wing bolt (M4 x 6) each, and remove the L hopper cover and the S hopper cover.

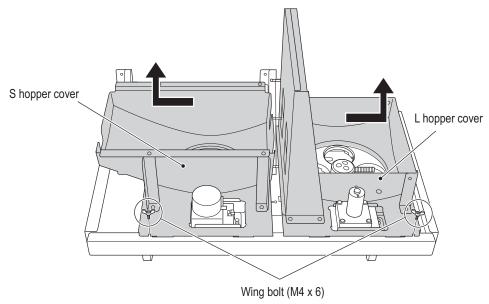

Disconnect the four connectors, remove the four Phillips pan head screws (with flat and spring washers) (M4 x 25), and replace the S hopper motor driver PC board.

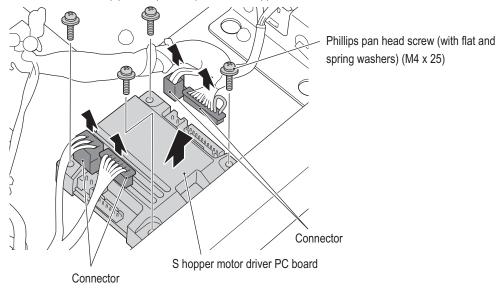

10

11

Removing, Installing and Replacing Assemblies and Parts

Test Mode

Troubleshooting


Slider Assembly 8B-4-6

(1) Replacing the Stopper Solenoids (L) and (R)


The description below explains how to replace the (L) side. Follow the same procedure for replacement of the (R) side.

WARNING


- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the rear panel. (See "8A-5-3 Opening and Closing the Rear Panel" on page 108.)
 - Disconnect the connector, remove the four countersunk washer nuts (M4) and two Phillips pan head screws (with flat and spring washers) (M4 x 10), loosen the two countersunk washer nuts (M4), and remove the L rail (H).

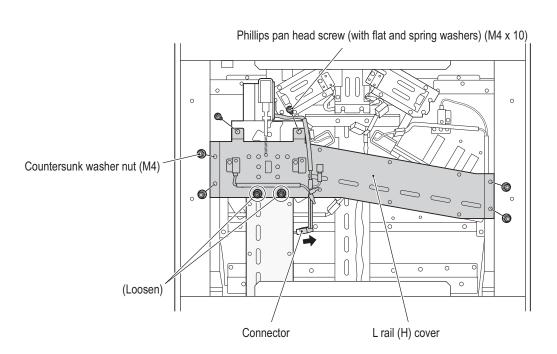

Disconnect the two connectors, remove the two countersunk washer nuts (M4), and remove the stopper base L.

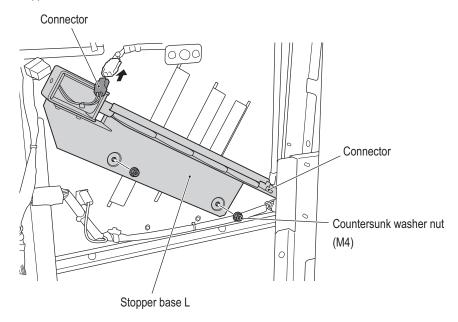

Remove the four Phillips pan head screw (with flat and spring washers) (M3 x 6), and replace the stopper solenoid.

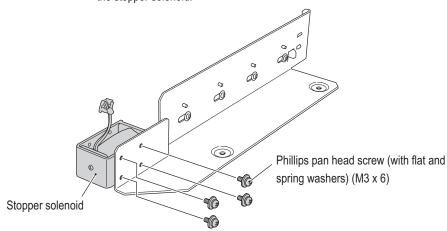

11 12


Removing, Installing and Replacing Assemblies and Parts

(2) Replacing the Stopper (L) and (R) Sensors


The description below explains how to replace the (L) side. Follow the same procedure for replacement of the (R) side.

⚠WARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the stopper base L. (See steps 2 4 of "8B-4-6 (1) Replacing the Stopper Solenoids (L) and (R)" on page 163.)

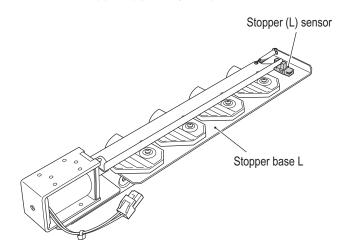

Release the lock, and replace the stopper (L) sensor.

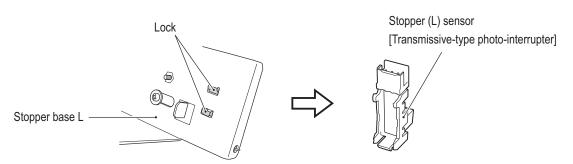


(3) Replacing the Stock (L) and (R) Sensors

The description below explains how to replace the (L) side. Follow the same procedure for replacement of the (R) side.

MARNING


- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the rear panel. (See "8A-5-3 Opening and Closing the Rear Panel" on page 108.)
 - 3 Disconnect the connector, remove the countersunk washer nut (M4), and remove the slider sensor bracket.

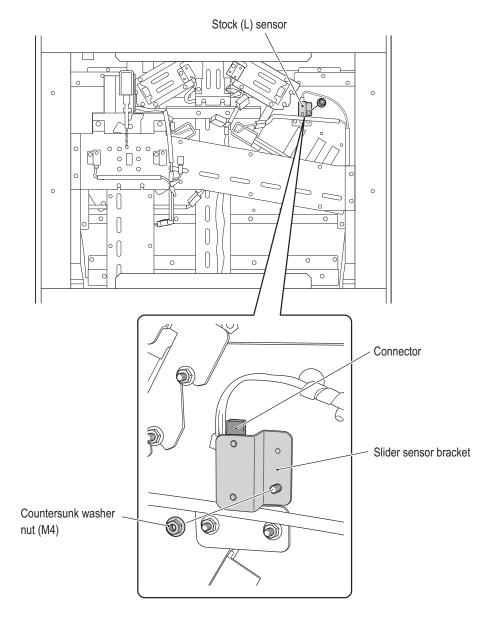

Removing, Installing and Replacing Assemblies and Parts

Troubleshooting

4 Remove the Phillips pan head screw (M3 x 6), and replace the stock (L) sensor.

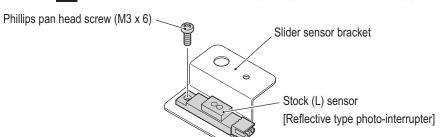


8B-4-7 S escalator Assembly

(1) Replacing the S divider (L) and (R) Outlet Sensors


The description below explains how to replace the (L) side. Follow the same procedure for replacement of the (R) side.

WARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the rear panel. (See "8A-5-3 Opening and Closing the Rear Panel" on page 108.)
 - 3 Disconnect the connector, remove the countersunk washer nut (M4), and remove the escalator sensor bracket.

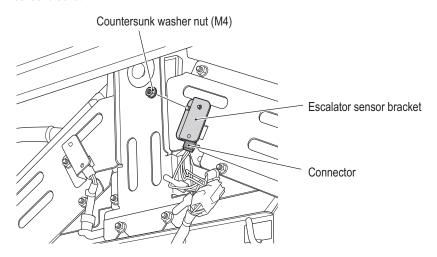

4 Remove the Phillips pan head screw (M3 x 6), and replace the S divider (L) outlet sensor.

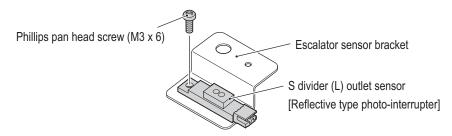


8B-4-8 L escalator assembly


(1) Replacing the L divider Solenoid

WARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the rear panel. (See "8A-5-3 Opening and Closing the Rear Panel" on page 108.)
 - 3 Disconnect the connector.

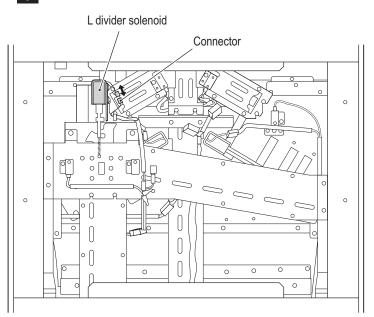


4 Remove the four Phillips pan head screws (with flat and spring washers) (M3 x 6), and replace the L divider solenoid.

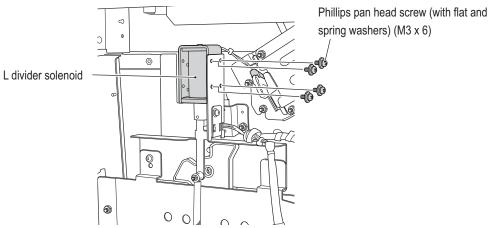


(2) Replacing the L divider Sensor

MARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the rear panel. (See "8A-5-3 Opening and Closing the Rear Panel" on page 108.)
 - Disconnect the connector, remove the Phillips pan head screw (with flat and spring washers) (M4 x 10), and remove the encoder bracket.

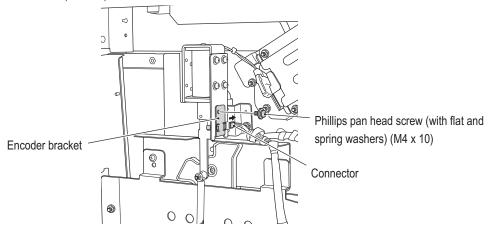

4 Release the lock, and replace the L divider sensor.

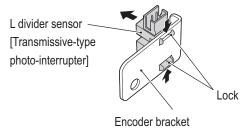


(3) Replacing the L divider (L) and (R) Outlet Sensors


The description below explains how to replace the (L) side. Follow the same procedure for replacement of the (R) side.

/!\WARNING

- To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.
 - Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
 - Remove the rear panel. (See "8A-5-3 Opening and Closing the Rear Panel" on page 108.)
 - Disconnect the connector, remove the countersunk washer nut (M4), and remove the escalator sensor bracket.

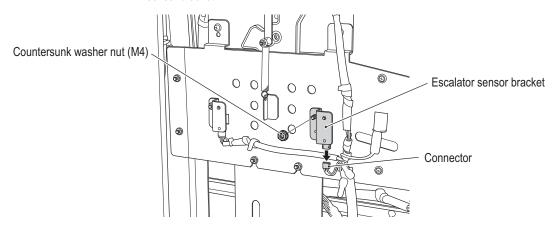

Remove the Phillips pan head screw (M3 x 6), and replace the L divider (L) outlet sensor.

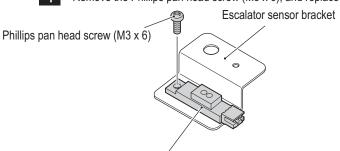

L divider (L) outlet sensor [Reflective type photo-interrupter]

8B-4-9 Signboard assembly


(1) Replacing the Time LED (Time LED PC Board)

!WARNING


 To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.



- PC boards are sensitive to static electricity. If a person handles a PC board while charged with static electricity, the parts on the PC board may be damaged. Before handling a PC board, discharge the static electricity from your body; for example, by touching the surface of grounded metal.
- Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
- 2 Remove the side tower assembly by reversing the installation procedure. (See steps 2 15 of "8A-2-5 Installing the Side Tower Assembly" on page 96.)
- Remove the eight Torx bolts (M5 x 12), and remove the signboard.

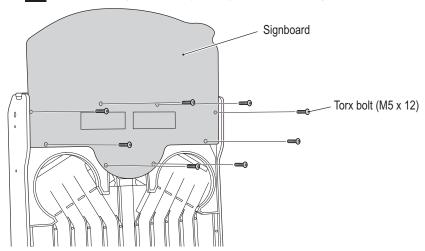

Disconnect the connector, remove the five Phillips pan head screws (with flat and spring washers) (M4 x 10), and replace the time LED (time LED PC board).

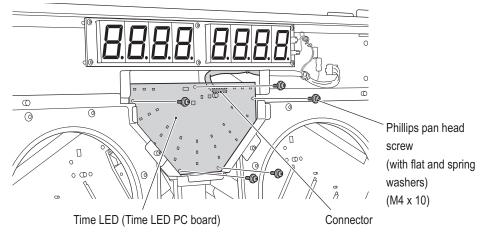

To install, perform the procedure in reverse.


(2) Replacing the Score LED (Score LED PC Board)

/!\WARNING

■ To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.

NOTICE

- PC boards are sensitive to static electricity. If a person handles a PC board while charged with static electricity, the parts on the PC board may be damaged. Before handling a PC board, discharge the static electricity from your body; for example, by touching the surface of grounded metal.
- Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
- Remove the side tower assembly by reversing the installation procedure. (See steps 2 15 of "8A-2-5 Installing the Side Tower Assembly" on page 96.)
- Disconnect the two connectors, remove the six Phillips pan head screws (with flat and spring washers) (M4 x 10), and replace the score LED (score LED PC board).

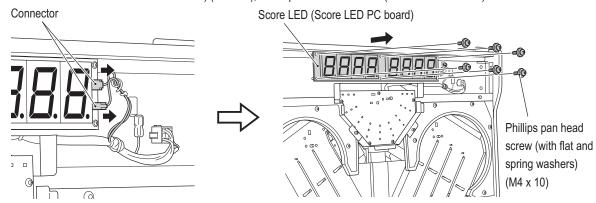

8B-4-10 Illuminator assembly

(1) Replacing the Circle LED

The description below explains how to replace the L side. Follow the same procedure for replacement of the R side.

WARNING

To avoid electric shock, accidents or injuries to yourself or other people, or damage to the electronic circuits, be sure to turn off the power switch before starting work.



- PC boards are sensitive to static electricity. If a person handles a PC board while charged with static electricity, the parts on the PC board may be damaged. Before handling a PC board, discharge the static electricity from your body; for example, by touching the surface of grounded metal.
- When installing, be careful not to pinch the harnesses and connectors.
- Turn off the power switch. (See "7-6-1 Turning the Power Switch On" on page 39.)
- 2 Remove the side tower assembly by reversing the installation procedure. (See steps 2 15 of "8A-2-5 Installing the Side Tower Assembly" on page 96.)
- Remove the rear panel. (See "8A-5-3 Opening and Closing the Rear Panel" on page 108.)

88

8B


9 10

11


12

Removing, Installing and Replacing Assemblies and Parts


Disconnect the connector, and remove the Phillips pan head screw (with flat and spring washers) (M4 x 10).

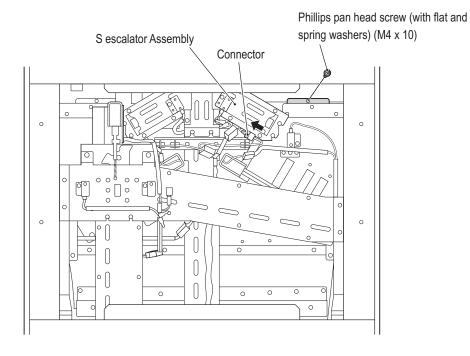


Remove the five Torx bolts (M5 x 25), and remove the illumination place (L) and illumination base plate (L).

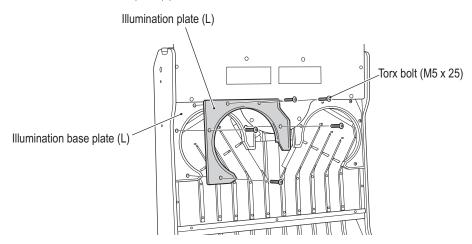

Remove the four Phillips countersunk wood screws (3.1 x 8), and remove the illumination base plate.

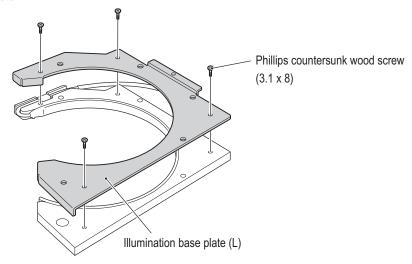


7 Disconnect the connector, and remove the circle LED.

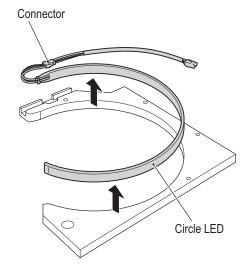


8B-4-11 Replacing the LED Fluorescent Light

- Remove the side tower assembly. (See the side tower assembly installation procedure.)
- Remove the light frame unit. (See the light assembly installation procedure.)
- Remove the five Phillips truss head machine screws (M4 x 10), and remove the two light cover retainers and the light cover.

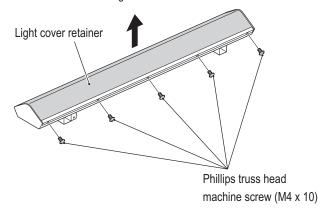

4 Replace the LED fluorescent light.

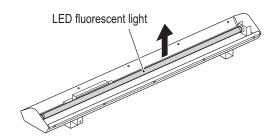



Use only the specified LED fluorescent light.

9. Disposal


WARNING


- When disposing of the machine, follow the applicable regulations for collection, transportation and disposal.
- When delegating the collection, transportation and disposal of the machine, be sure to delegate to specialists in each field.


Test Mode | Troubleshooting


10. Parts List


10-1 Overall

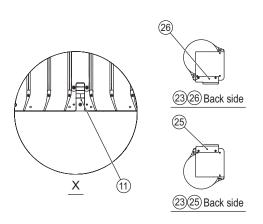

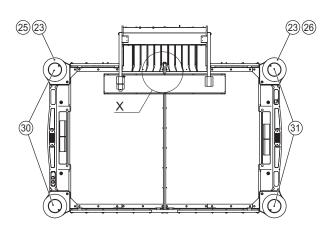

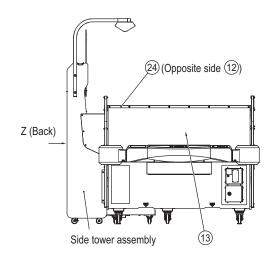

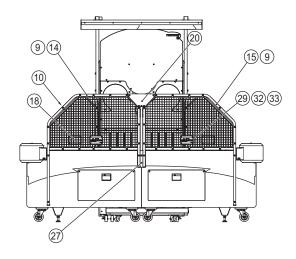

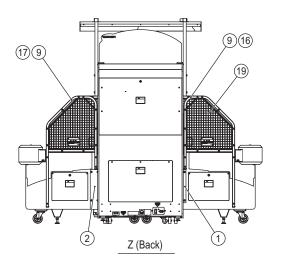



(Condition with the side tower accomply removed)
--

	Condition	with	the	side	tower	assembly	removed)	١
- 1	Condition	VVILII	uic	Siuc	LOWE	assembly	I CITIO V CU	,

No.	Name	Qty.	Type and rating	Part No.
1	Side tower bracket (L)	1		731-320
2	Side tower bracket (R)	1		731-321
3	Mallet	4		731-322
1	Big puck	100	(1 set: 10 pucks)	731-323
5	Mini puck (green)	100	(1 set: 10 pucks)	731-324
3	Mini puck (pink)	100	(1 set: 10 pucks)	731-325
7	Mini puck (orange)	100	(1 set: 10 pucks)	731-326
}	Operation Manual (English)	1		731-695
)	Pipe cap	8		731-328
0	Net fixing bracket	50		731-329
11	Bumper SS	1		731-330
12	Center guard frame	1		731-331
13	Center guard	1		731-332
14	Net L frame (L)	1		731-333
15	Net L frame (R)	1		731-334
16	Net S frame (L)	1		731-335
17	Net S frame (R)	1		731-336
18	Net L	2		731-337
19	Net S	2		731-338
20	Triangle bracket	1		731-339
23	Corner cover	4		731-340
24	Center guard retainer	1		731-341
25	Corner cover bracket (L)	2		731-342
26	Corner cover bracket (R)	2		731-343
27	Center guard bracket A	1		731-344
28	Center guard bracket B	1		731-345
29	Sticker plate	4		731-346
30	Stand sticker (red) EXP	2		731-704
31	Stand sticker (blue) EXP	2		731-703
32	Caution sticker Do Not Approach Net EXP	4		461-771
33	Tie-wrap (1,000)	18	CONVEX CV-100N	007-143

10-2 Table top assembly

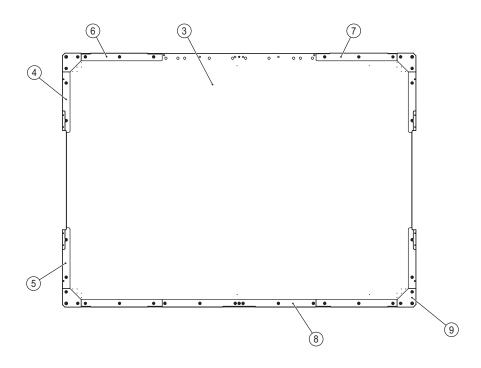

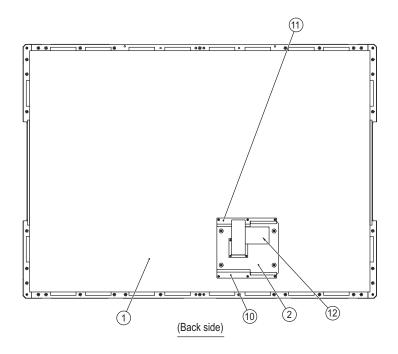

88

8B


9

Test
Mode

-	
-	
2	
\subseteq	
0	
æ	
<u>s</u>	
=	
9	
으	
=	
.=	
g	

No.	Name	Qty.	Type and rating	Part No.
1	Air chamber	1		731-615
2	Blower mounting plate	1		731-616
3	Field (PAC)	1		731-680
4	Goal bumper (L)	2		731-618
5	Goal bumper (R)	2		731-619
6	Bumper S (L)	2		731-620
7	Bumper S (R)	2		731-621
8	Bumper L	1		731-622
9	Corner bumper	4		731-624
10	Blower bracket (L)	1		731-625
11	Blower bracket (R)	1		731-626
12	Blower fan	1	MBS20-BHL	005-532

10-3 Cabinet (L) assembly

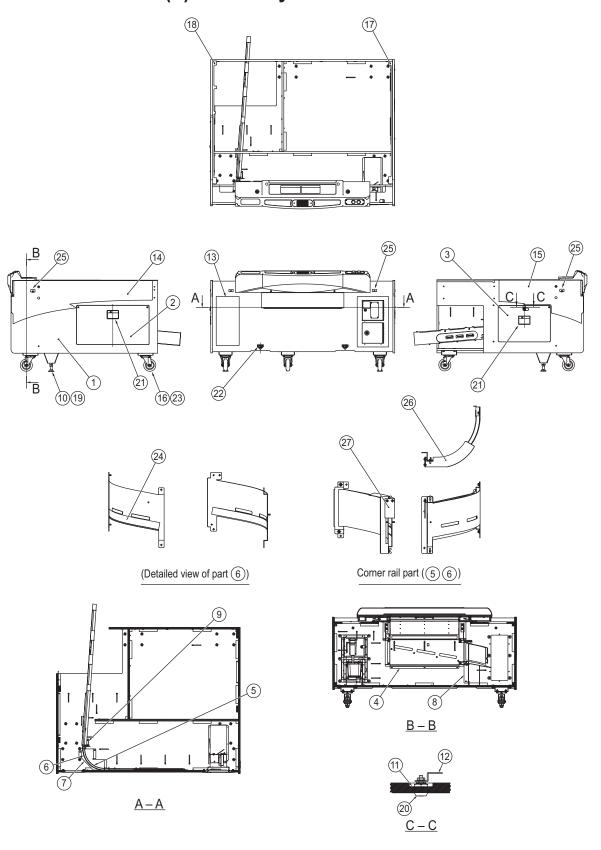



8B

9

No.	Name	Qty.	Type and rating	Part No.
1	Table cabinet (L)	1		731-635
2	Front door	1		731-636
3	Service door L	1		731-637
4	Goal set bracket	1		731-638
5	Corner inner R (L)	1		731-639
6	Corner outer R (L)	1		731-640
7	Corner bracket 1 (L)	1		731-641
8	Corner bracket 2 (L)	1		731-642
9	Corner bracket 3 (L)	1		731-643
10	Adjuster bracket	2		731-644
11	Key washer	1		731-645
12	Key plate	1		731-646
13	Redemption dummy cover	1		731-647
14	Cabinet sticker _L (red) _A_PAC	1		731-681
15	Cabinet sticker _S (red) _A_PAC	1		731-683
16	Caster bracket (B)	4		731-653
17	Air chamber bracket F (L)	1		731-650
18	Air chamber bracket R (L)	1		731-651
19	Leveling bolt	2	KYW16-75-6B	102-045
20	COIN LOCK	1	F750-DS8	101-175
21	Warning sticker Service (B) EXP	2		461-677
22	Fork sticker PH	2		461-539
23	Caster (swivel type)	4	ML-40039SNB	102-271
24	Sliding surface sheet (B)	1		731-652
25	Corner cover spacer	4		731-656
26	Corner rail cover (L)	1		731-654
27	Corner rail stopper	1		731-655


10-4 Goal (L) assembly

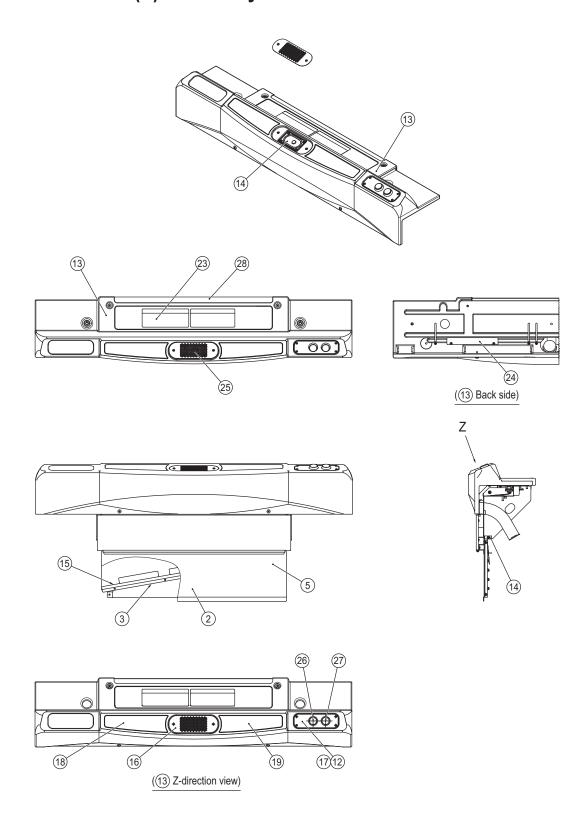


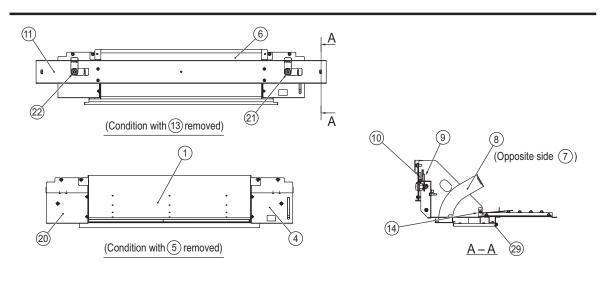

No.	Name	Qty.	Type and rating	Part No.
1	Goal inner R (L)	1		731-360
2	Goal outer lower (L)	1		731-361
3	Slope	1		731-362
4	Lock bracket R	1		731-363
5	Goal back plate	1		731-364
6	Goal outer R	1		731-365
7	Stopper (L)	1		731-366
8	Stopper (R)	1		731-367
9	Clasp	2		731-368
10	Lock hole plate	2		731-369
11	Goal outer beam	1		731-370
12	Select switch panel	1		731-371
13	Goal cover (A)	1		731-372
14	Divided-type photo-interrupter	1	OMT-15D	000-633
15	Cushioning rubber	2		731-373
16	Speaker panel (R)	1		731-374
17	Button plate sticker EXP	1		731-696
18	Instruction sticker (A) (red) EXP	1		731-701
19	Instruction sticker (B) (red) EXP	1		731-699
20	Lock bracket L	1		731-379
21	COIN LOCK	1	F750-DS8	101-175
22	COIN LOCK	1	F750-DS8 (two openings)	101-237
23	Warning sticker Goal (red) EXP	1		461-769
24	Harness fixing bracket	1		731-381
25	Speaker	1	F2E35A07-4	006-195
26	Illuminated button (red)	1	75V-L012-20	000-847
27	Illuminated button (green)	1	75V-L012-23	000-848
28	Goal guard sticker (red)	1		731-382
29	Goal hinge spacer	1		731-383


10-5 Rail (L) assembly

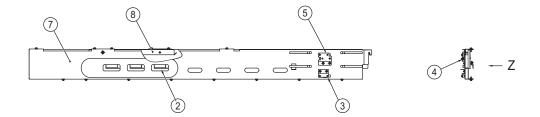

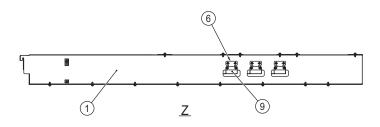

No.	Name	Qty.	Type and rating	Part No.
1	Rail L (A)	1		731-405
2	Pendulum	2		731-406
3	Rail sensor bracket A	1		731-407
4	Reflective-type photo-interrupter	3	GP2A25J00004	000-748
5	Rail sensor bracket B	1		731-408
6	Pendulum stopper	2		731-409
7	Rail L (B)	1		731-410
8	L back stopper	1		731-411
9	Pendulum stopper B	3		731-412


10-6 Coin assembly

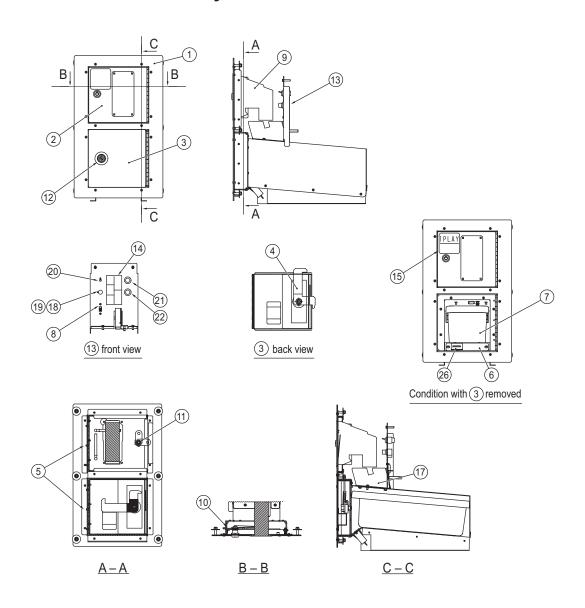



10. Parts List


No.	Name	Qty.	Type and rating	Part No.
1	Coin cabinet	1		731-425
2	Selector door	1		731-426
3	Coin box door	1		731-427
4	Stopper plate	1		731-428
5	Coin box door hinge	2		731-429
6	Counter bracket	1		731-430
7	Cash box	1		718-446
8	Slide switch	1	SDS-103A-03#13BJ	000-681
9	Coin selector	1	PFB-730 (front plate: black) for 100 yen coins	100-449
10	Key tag	1	M7	101-229
11	COIN LOCK	1	F750-DS8	101-175
12	Cam lock	1	N92-L10	101-142
13	Service panel	1		731-431
14	Service sticker	1		731-432
15	Game cost sticker (EXP)	1		731-702
17	Coin slope	1		731-435
18	Analog interface	1	RK1631110-F20-C0-B103-L	008-066
19	Volume knob	1	K-8075-6.1	008-060
20	Toggle switch	1	SDSA-331G-CR	000-337
21	Pushbutton (red)	1	SDP-103C-22RB	000-336
22	Pushbutton (green)	1	SDP-103C-22GB	000-619
23	Coin counter	1	FX-06PD52 (12VDC)	003-054


10-7 Cabinet (R) assembly

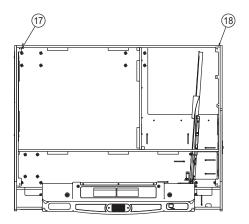

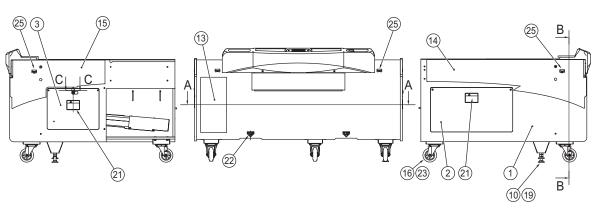

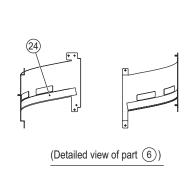

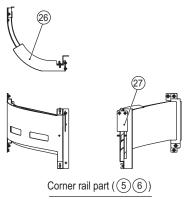

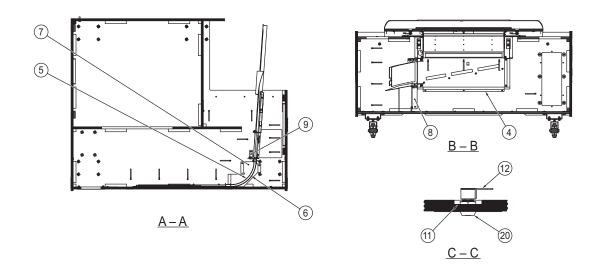


No.	Name	Qty.	Type and rating	Part No.
1	Table cabinet (R)	1		731-665
2	Front door	1		731-636
3	Service door R	1		731-666
4	Goal set bracket	1		731-638
5	Corner inner (R)	1		731-667
6	Corner outner (R)	1		731-668
7	Corner bracket 1 (R)	1		731-669
8	Corner bracket 2 (R)	1		731-670
9	Corner bracket 3 (R)	1		731-671
10	Adjuster bracket	2		731-644
11	Key washer	1		731-645
12	Key plate	1		731-646
13	Redemption dummy cover	1		731-647
14	Cabinet sticker _L (blue) _A_PAC	1		731-682
15	Cabinet sticker _S (blue) _A_PAC	1		731-684
16	Caster bracket (B)	4		731-649
17	Air chamber bracket F (R)	1		731-674
18	Air chamber bracket R (R)	1		731-675
19	Leveling bolt	2	KYW16-75-6B	102-045
20	COIN LOCK	1	F750-DS8	101-175
21	Warning sticker Service (B) (EXP)	2		461-539
22	Fork sticker PH	2		461-678
23	Caster (swivel type)	4	ML-40039SNB	102-271
24	Sliding surface sheet (B)	1		731-652
25	Corner cover spacer	4		731-656
26	Corner rail cover (R)	1		731-676
27	Corner rail stopper	1		731-655

[] [] Cabinet (R) Assembly / Goal (R) Assembly


Test Mode


Troubleshooting


10-8 Goal (R) assembly

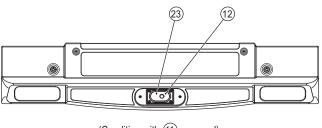



(Condition with 11) removed)

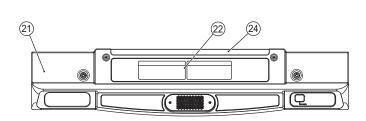


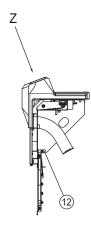


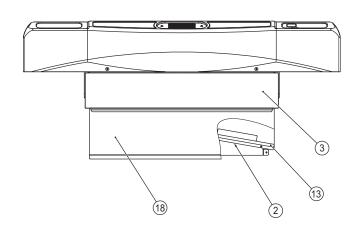

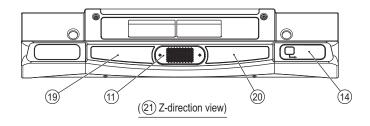

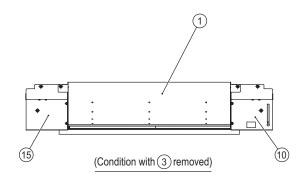

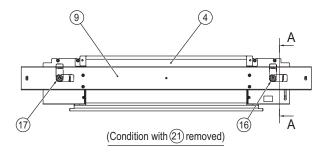


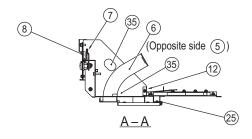


8B

No.	Name	Qty.	Type and rating	Part No.
1	Goal inner R (R)	1		731-390
2	Slope	1		731-362
3	Goal back plate	1		731-364
4	Goal outer R	1		731-365
5	Stopper (L)	1		731-366
6	Stopper (R)	1		731-367
7	Clasp	2		731-368
8	Lock hole plate	2		731-369
9	Goal outer beam	1		731-370
10	Lock bracket R	1		731-363
11	Speaker panel (B)	1		731-391
12	Divided-type photo-interrupter	1	OMT-15D	000-633
13	Cushioning rubber	2		731-373
14	Dummy plate sticker EXP	1		731-697
15	Lock bracket L	1		731-379
16	COIN LOCK	1	F750-DS8	101-175
17	COIN LOCK	1	F750-DS8 (two openings)	101-237
18	Goal outer lower (R)	1		731-394
19	Instruction sticker (A) (blue) EXP	1		731-700
20	Instruction sticker (B) (blue) EXP	1		731-698
21	Goal cover (B)	1		731-397
22	Warning sticker Goal (blue) EXP	1		461-768
23	Speaker	1	F2E35A07-4	006-195
24	Goal guard sticker (blue)	1		731-398
25	Goal hinge spacer	1		731-383


10-9 Rail (R) assembly

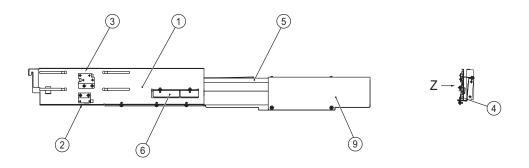

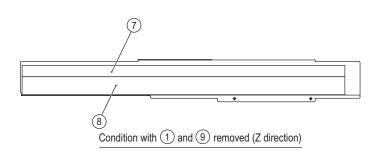


No.	Name	Qty.	Type and rating	Part No.
1	Rail R (A)	1		731-415
2	Rail sensor bracket A	1		731-407
3	Rail sensor bracket B	1		731-408
4	Reflective-type photo-interrupter	3	GP2A25J00004	000-748
5	Rail R (B)	1		731-416
6	Alignment plate	1		731-417
7	Sliding surface sheet (A)	1		731-418
8	Sliding surface sheet (C)	1		731-419
9	Rail R wall	1		731-420


Test Mode

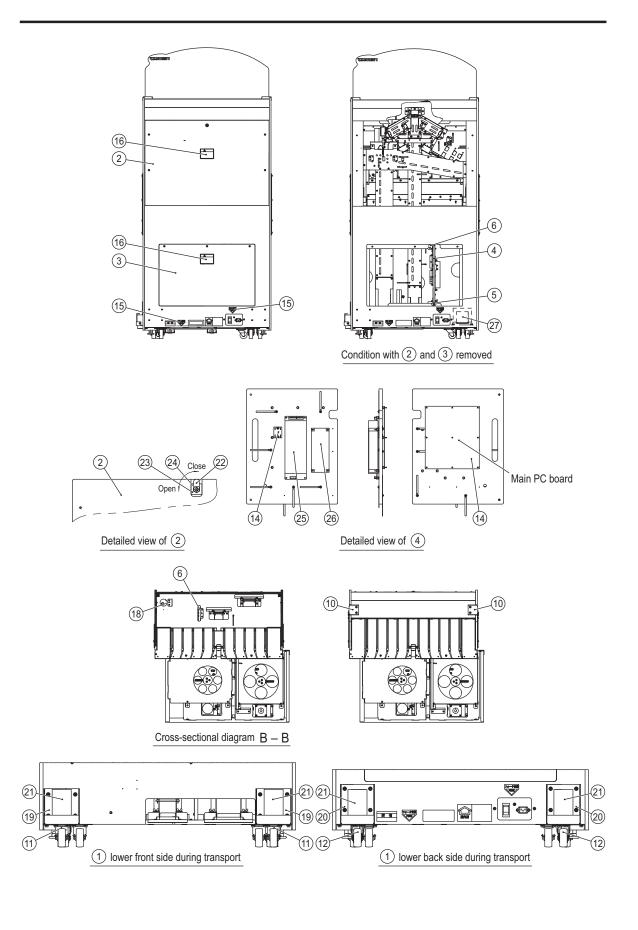



No.	Name	Qty.	Type and rating	Part No.
1	Side tower cabinet (EXP)	1		731-705
2	Rear panel	1		731-441
3	Service door	1		731-442
4	PCB base	1		731-443
5	Rack rail L	1		731-444
6	Rack rail U	1		731-445
7	Slider bracket	2		731-446
8	Signboard bracket	2		731-447
9	Adjuster bracket	2		450-120
10	Rope hook (E)	2		450-142
11	Caster (swivel type)	6	ML-20050S	102-268
12	Caster (stationary type)	2	ML-20050R	102-269
13	Leveling bolt	2	KYW16-75-6B	102-045
14	SSR	1	S5C-215LV	004-739
15	Fork sticker PH	2		461-678
16	Warning sticker Service (B) EXP	2		461-677
17	Side wall	2		731-448
18	EX connector panel	1		731-449
19	Caster bracket (F)	2		731-450
20	Caster bracket (R)	2		731-451
21	Warning sticker Installation and Transport	4		461-770
22	Key plate B	1		731-452
23	Key washer	1		731-453
24	COIN LOCK	1	F750-DS8	101-175
25	Switching regulator (24 V)	1	VS150P-24	009-169
26	Switching regulator (12 V)	1	VS100E-12	009-270
27	Transformer	1	S133V100PV	004-746


10-11 Hopper assembly

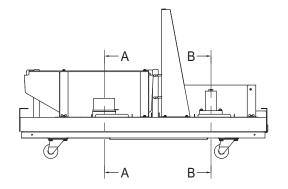


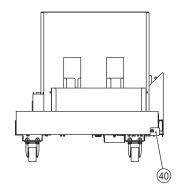

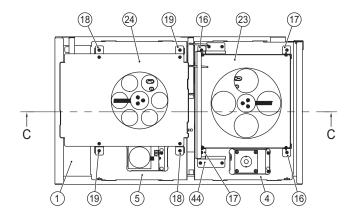

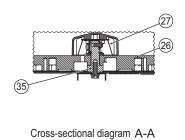


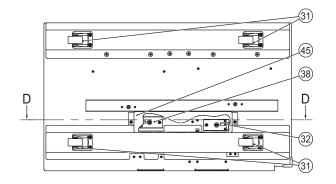


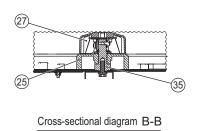

9 10

11 | 12 | Hopper assembly

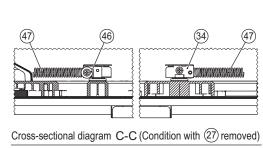

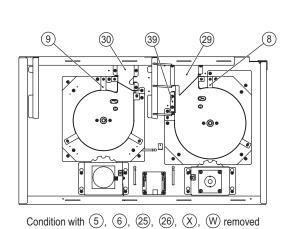

(52)


Condition with 5 and 6 removed

3

(O)


2


 $\langle z \rangle$

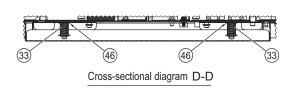

Test Mode

Troubleshooting

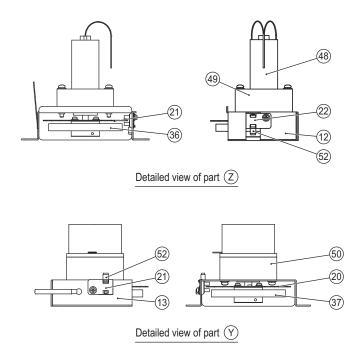


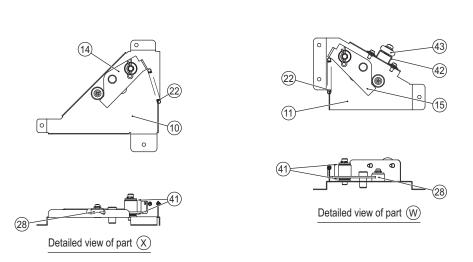

No.	Name	Qty.	Type and rating	Part No.
1	Hopper base	1		731-455
2	L hopper bottom	1		731-456
3	S hopper bottom	1		731-457
4	L hopper cover	1		731-458
5	S hopper cover	1		731-459
6	L hopper under	1		731-460
7	S hopper under	1		731-461
8	L hopper puck guide	1		731-462
9	S hopper puck guide	1		731-463
10	L hopper latch base	1		731-464


No.	Name	Qty.	Type and rating	Part No.
11	S hopper latch base	1		731-465
12	L hopper motor bracket	1		731-466
13	S hopper motor bracket	1		731-467
14	L hopper latch	1		731-468
15	S hopper latch	1		731-469
16	L bucket base A	2		731-470
17	L bucket base B	2		731-471
18	S bucket base A	2		731-472
19	S bucket base B	2		731-473
20	Encoder disk	2		731-474
21	Encoder bracket	2		731-475
22	Latch spring	2		731-476
23	L bucket	1		731-477
24	S bucket	1		731-478
25	L hopper disk	1		731-479
26	S hopper disk	1		731-480
27	Disk top	2		731-481
28	Latch stopper rubber	2		731-482
29	L hopper exit	1		731-483
30	S hopper exit	1		731-484
31	Caster (swivel type)	4	ML-112-ANB	102-270
32	Guide pin L	1		731-485
33	Guide pin spring	2		731-486
34	Hopper spring base	2		731-487
35	Disk shaft	2		731-488
36	L hopper gear	1		731-489
37	S hopper gear	1		731-490
38	Guide pin S	1		731-491
39	L hopper exit B	1		731-492
40	Point cover (S)	1		450-416
41	Flange bushing	4	80F-0805	104-014
42	Disk retainer bracket	1		731-493
43	Roller	1		731-494
44	Hopper wall	1		731-495
45	Guide pin cover	1		731-496
46	S washer	2		731-497
47	Hopper spring	2		731-498
48	DC motor (L hopper motor)	1	DMN37H8HP-017	005-524
49	Gear head (for DC brush motor)	1	8DG60-10	005-525
50	DC brushless motor (S hopper motor) (with gear head)	1	-2000.0	005-531
51	Motor driver PC board	1	TD12900A-244M03	005-527
52	Transmissive-type photo-interrupter	2	GP5A71AJ000F	000-749
53	Hopper wall B	1	OI ONI INCOOL	731-499

10-12 Slider assembly

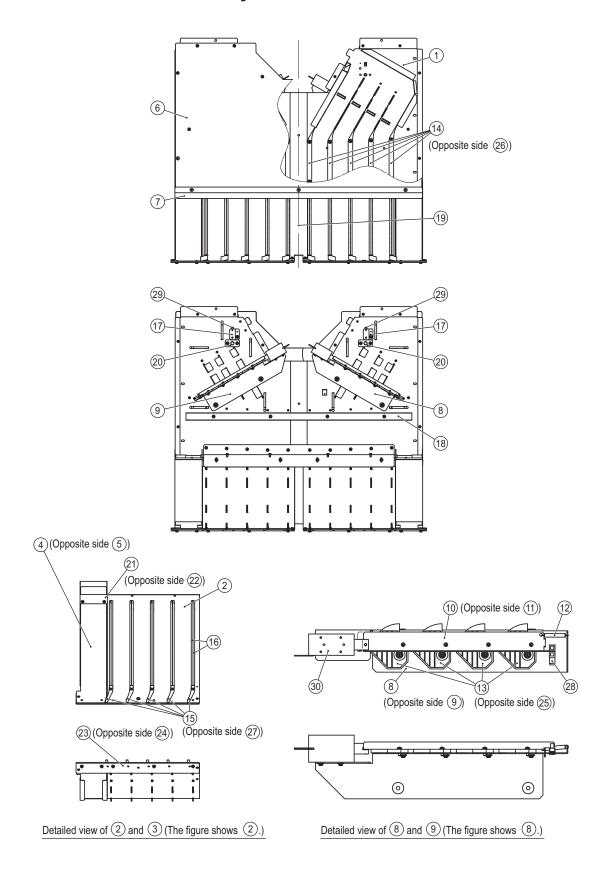

No.	Name	Qty.	Type and rating	Part No.
1	Slider base	1		731-505
2	S slope L	1		731-506
3	S slope R	1		731-507
4	L slope L	1		731-508
5	L slope R	1		731-509
6	Cover panel (PAC)	1		731-685
7	Cover panel retainer L	1		731-511
8	Stopper base L	1		731-512
9	Stopper base R	1		731-513
10	Stopper link L	1		731-514
11	Stopper link R	1		731-515
12	Stopper spring	2		731-516
13	Stopper L	4		731-517
14	Slider rail L	5		731-518
15	Guide L	5		731-519
16	Slope rail	20		731-520
17	Slider sensor bracket	2		731-521
18	Beam	1		731-522
19	Blind	1		731-523
20	Entrance pin	2		731-524
21	Slope joint U (L)	1		731-525
22	Slope joint U (R)	1		731-526
23	Slope bumper L	1		731-527
24	Slope bumper R	1		731-528
25	Stopper R	4		731-529
26	Slider rail R	5		731-530
27	Guide R	5		731-531
28	Transmissive-type photo-interrupter (Stopper sensor)	2	GP5A71AJ000F	000-749
29	Reflective-type photo-interrupter (Stock sensor)	2	GP2A25J00004	000-748
30	Solenoid	2	SDC-1564-BNG	004-756

10-13 S escalator assembly

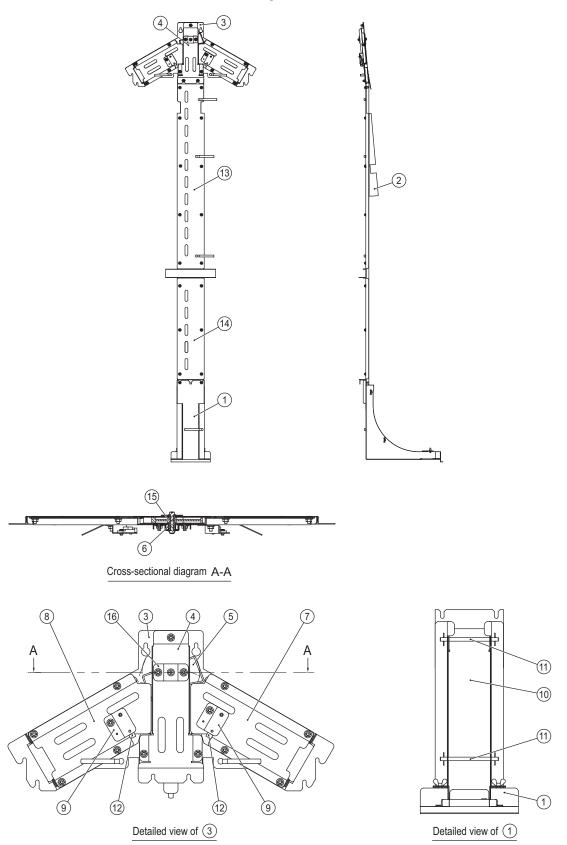



88

8B

No.	Name	Qty.	Type and rating	Part No.
1	S rail (R)	1		731-540
2	S rail (V)	1		731-541
3	S divider base	1		731-542
4	S divider cover	1		731-543
5	S divider	1		731-544
6	S divider spring	1		731-546
7	Joint rail cover L	1		731-548
8	Joint rail cover R	1		731-549
9	Escalator sensor bracket	2		731-556
10	S rail (R) lid	1		731-550
11	Lid pin S	2		731-551
12	Reflective-type photo-interrupter	2	GP2A25J00004	000-748
13	S rail (V) cover (U)	1		731-552
14	S rail (V) cover (L)	1		731-553
15	S divider shaft	1		731-554
16	Shaft retainer	1		731-555


10-14 L escalator assembly

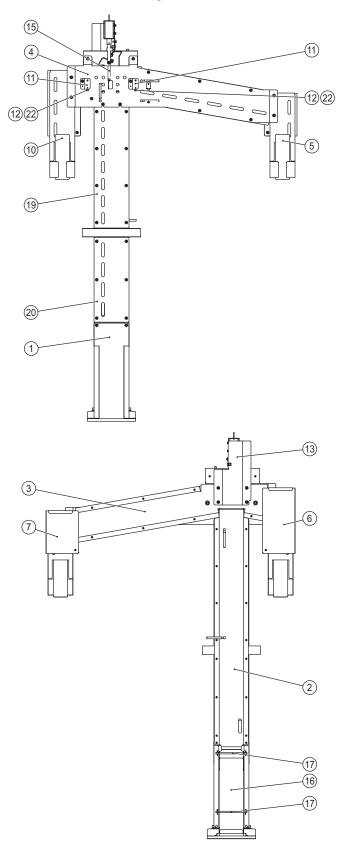


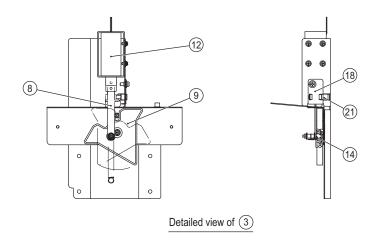

No.	Name	Qty.	Type and rating	Part No.
1	L rail (R)	1		731-560
2	L rail (V)	1		731-561
3	L rail (H)	1		731-562
4	L rail (H) cover	1		731-563
5	L slope top L	1		731-564
6	L slope top bracket _L	1		731-565
7	L slope top bracket _R	1		731-566
3	Divider link	1		731-567
9	L divider	1		731-568
10	L slope top R	1		731-569
11	Escalator sensor bracket	2		731-556
12	Solenoid	1	SDC-1564-BNG	004-756
13	Solenoid base	1		731-570
14	Divider link shaft	1		731-571
15	Sivider spring	1		731-572
16	L rail (R) lid	1		731-573
17	Lid pin L	2		731-574
18	Encoder bracket	1		731-475
19	L rail (V) cover (U)	1		731-575
20	L rail (V) cover (L)	1		731-576
21	Transmissive-type photo-interrupter (L divider sensor)	1	GP5A71AJ000F	000-749
22	Reflective-type photo-interrupter (L divider outlet sensor)	2	GP2A25J00004	000-748


10-15 Signboard assembly

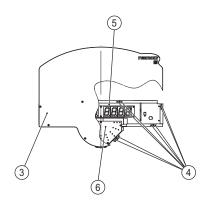

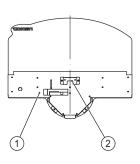


No.	Name	Qty.	Type and rating	Part No.
1	Signboard base	1		731-585
2	Divider hook	1		731-586
3	Signboard (PAC)	1		731-686
4	Signboard cushion	16		731-588
5	Score LED PC board	1		002-653
6	Time LED PC board	1		002-652


10-16 Cord box assembly

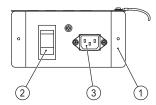


No.	Name	Qty.	Type and rating	Part No.
1	Cord box	1		731-595
2	Power switch	1	BAM210131	000-863
3	Noise filter	1	10GEEG3E-R	007-205

10-17 Illuminator assembly

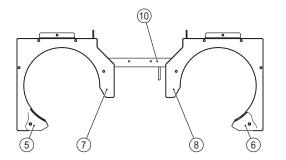


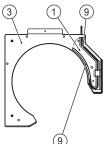

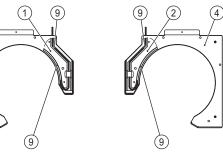


No.	Name	Qty.	Type and rating	Part No.
1	Illumination base (L)	1		731-600
2	Illumination base (R)	1		731-601
3	Illumination base plate (L)	1		731-602
4	Illumination base plate (R)	1		731-603
5	Illumination plate (L)	1		731-604
6	Illumination plate (R)	1		731-605
7	Illumination sticker_PAC (L)	1		731-687
8	Illumination sticker_PAC (R)	1		731-688
9	Circle LED	2	5050RGB-0C-12V-XA4R-L0600	002-654
10	Illuminator harness base	1		731-608

10-18 Light Assembly

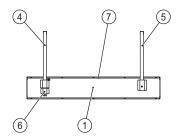




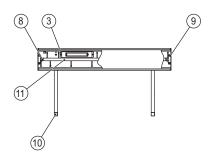


No.	Name	Qty.	Type and rating	Part No.
1	Light frame	1		731-715
2	Light cover	1		731-716
3	Ballast bracket	1		731-717
4	Light arm L	1		731-718
5	Light arm R	1		731-719
6	Light connector cover	1		731-720
7	Light cover retainer	1		731-721
8	Socket base L	1		731-722
9	Socket base R	1		731-723
10	Pipe cap	1		731-724
11	LED fluorescent light	1		002-659


Test Mode

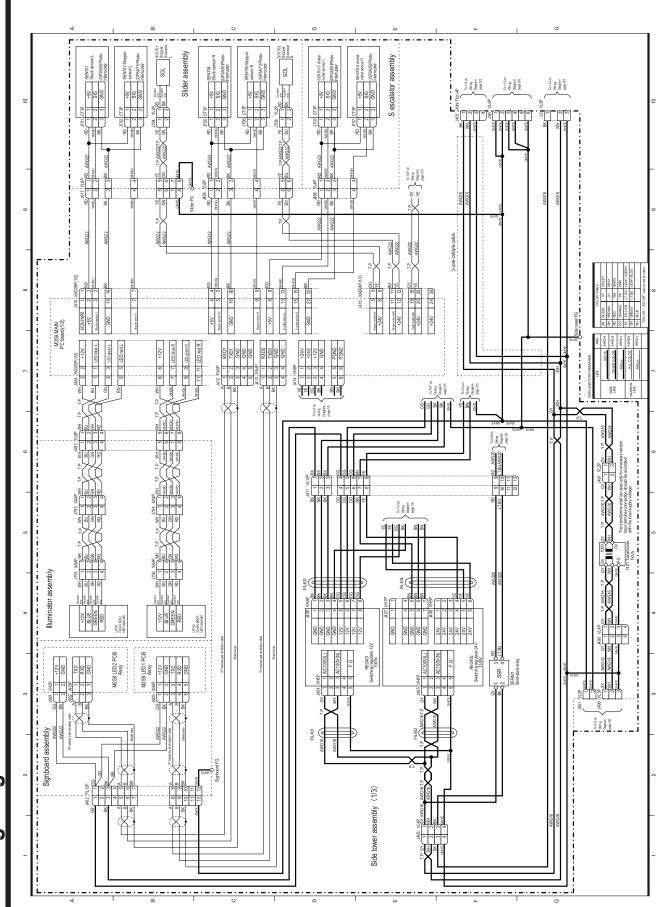

Test Mode




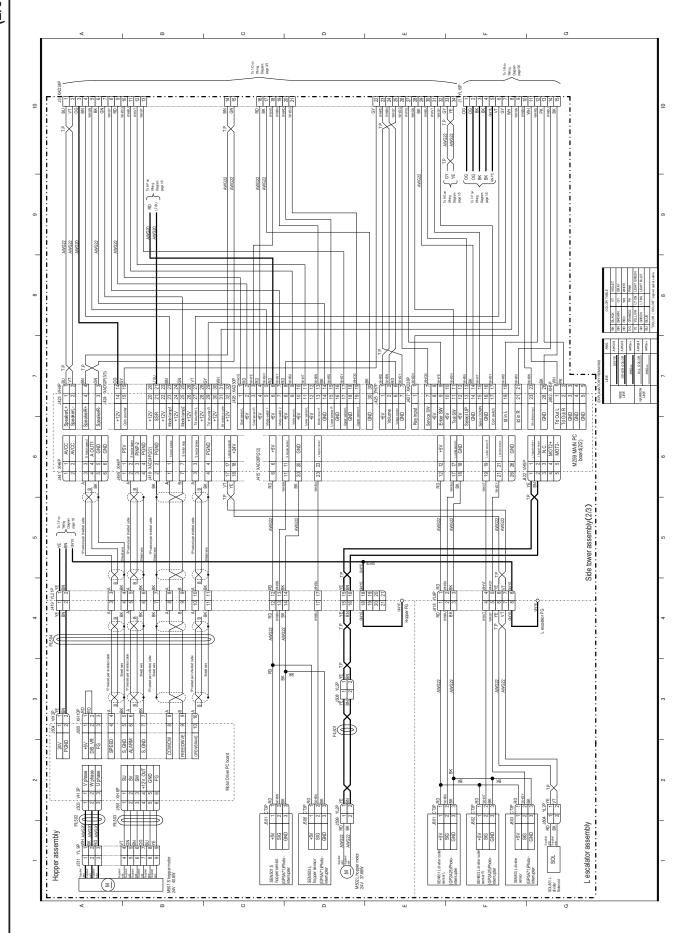


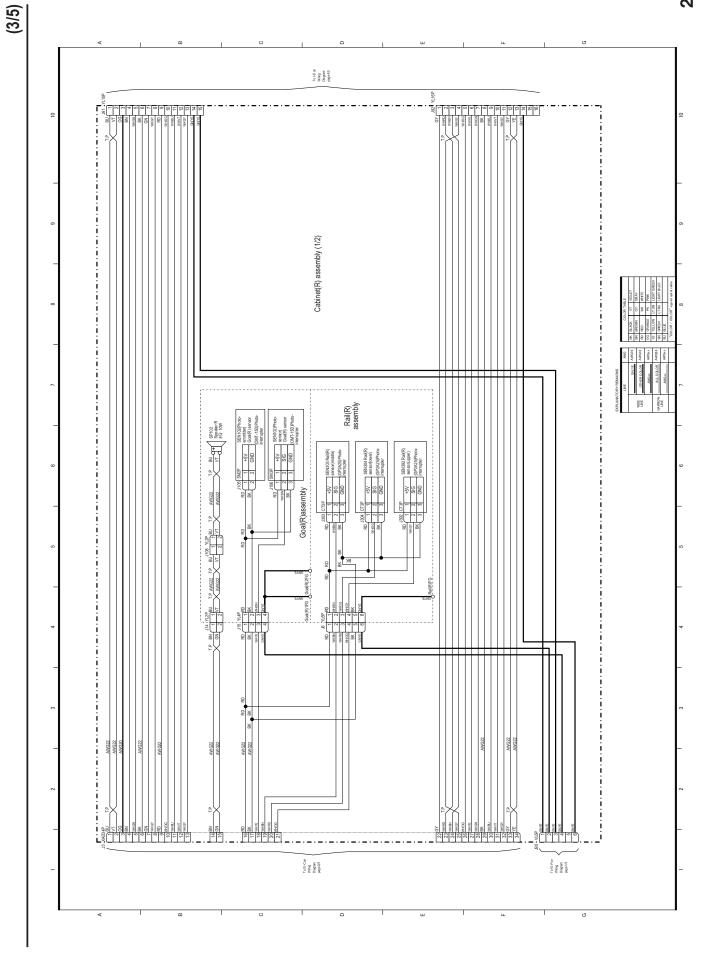

Test Mode



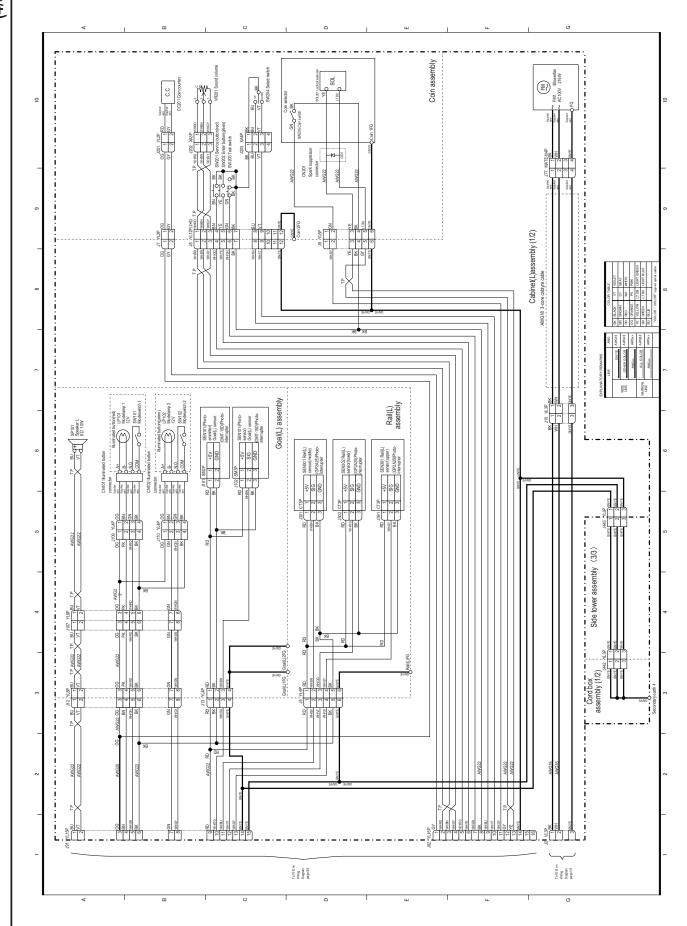

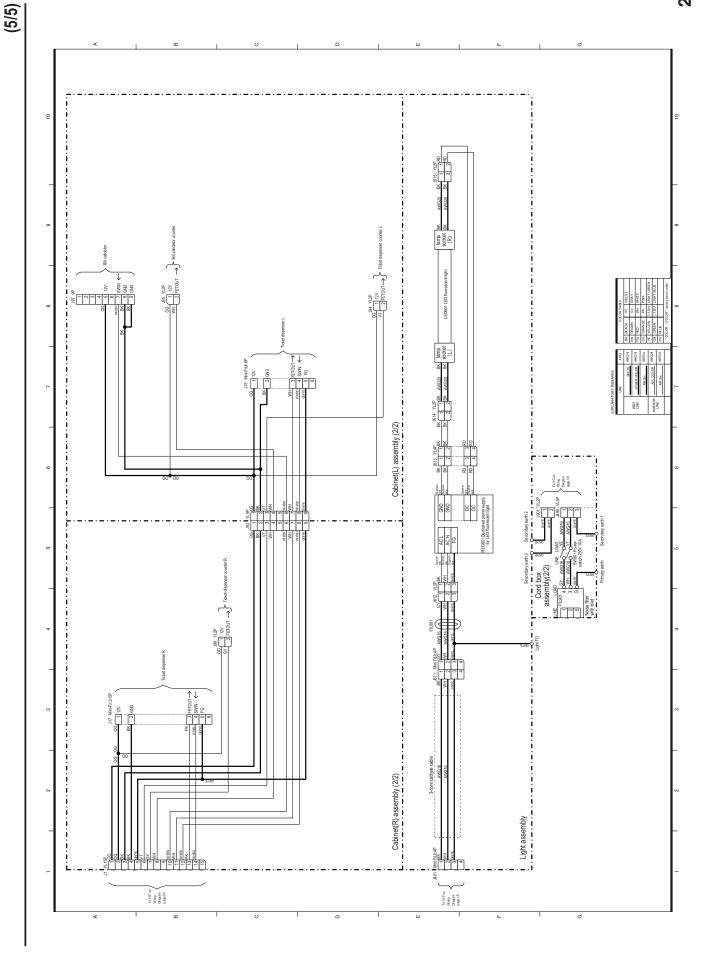



Part No.: 731-695 First edition issued December 2012